

1575e QUICK-START GUIDE – COOLING TOWER, STANDARD CONFIGURATION

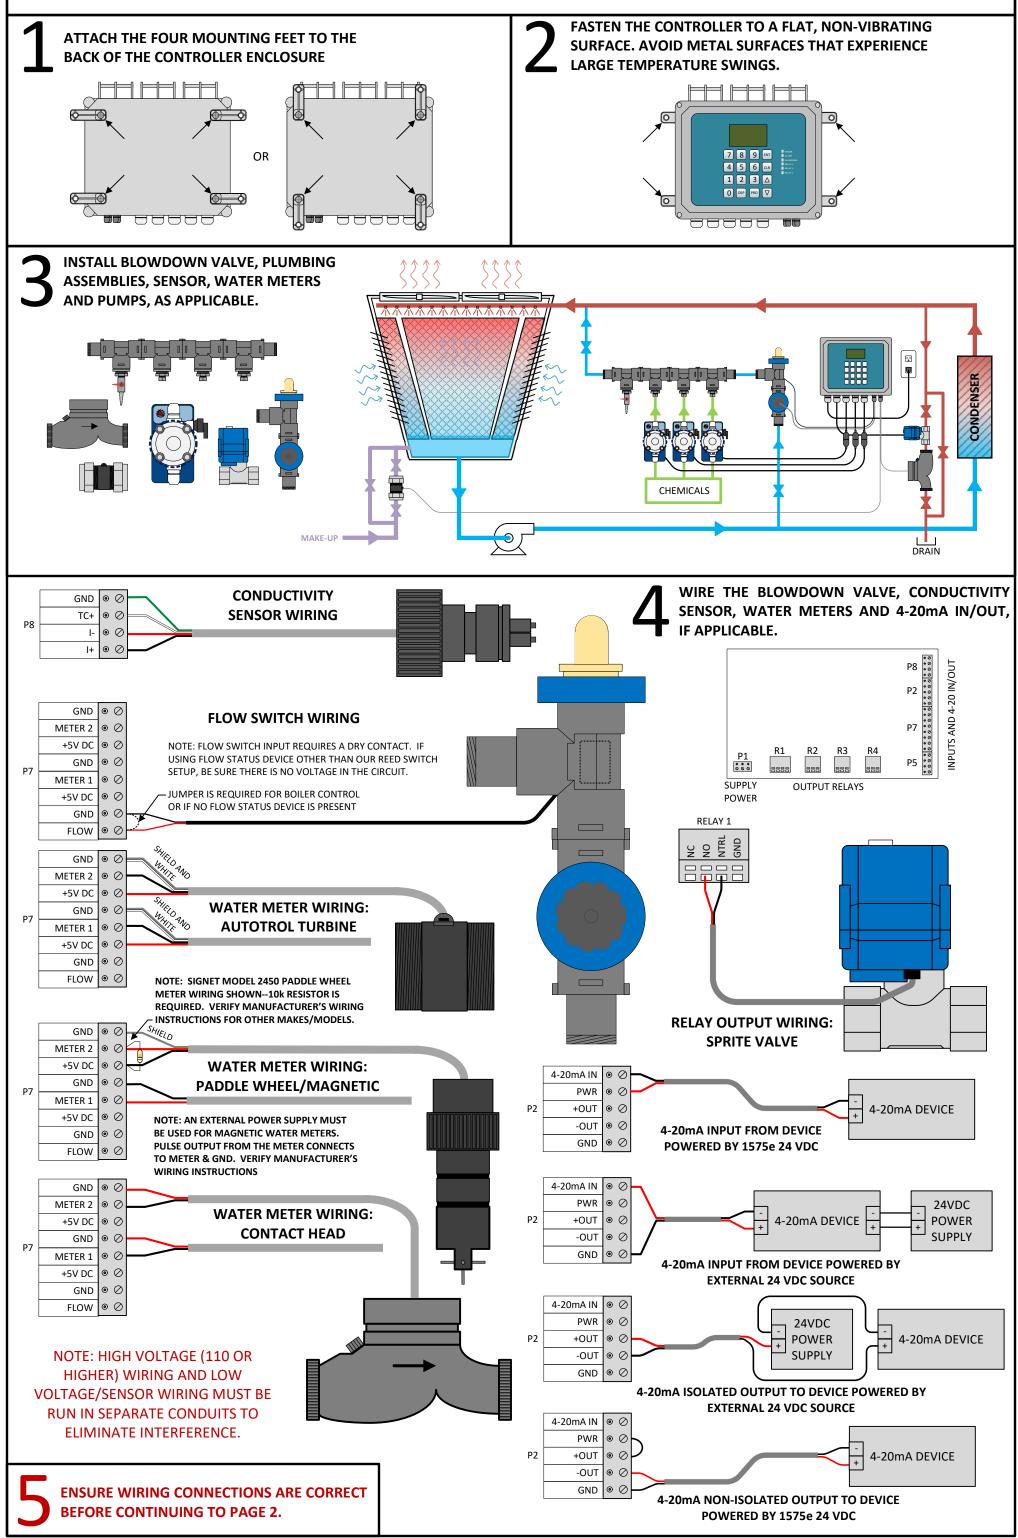


1575e QUICK-START GUIDE – COOLING TOWER, STANDARD CONFIGURATION

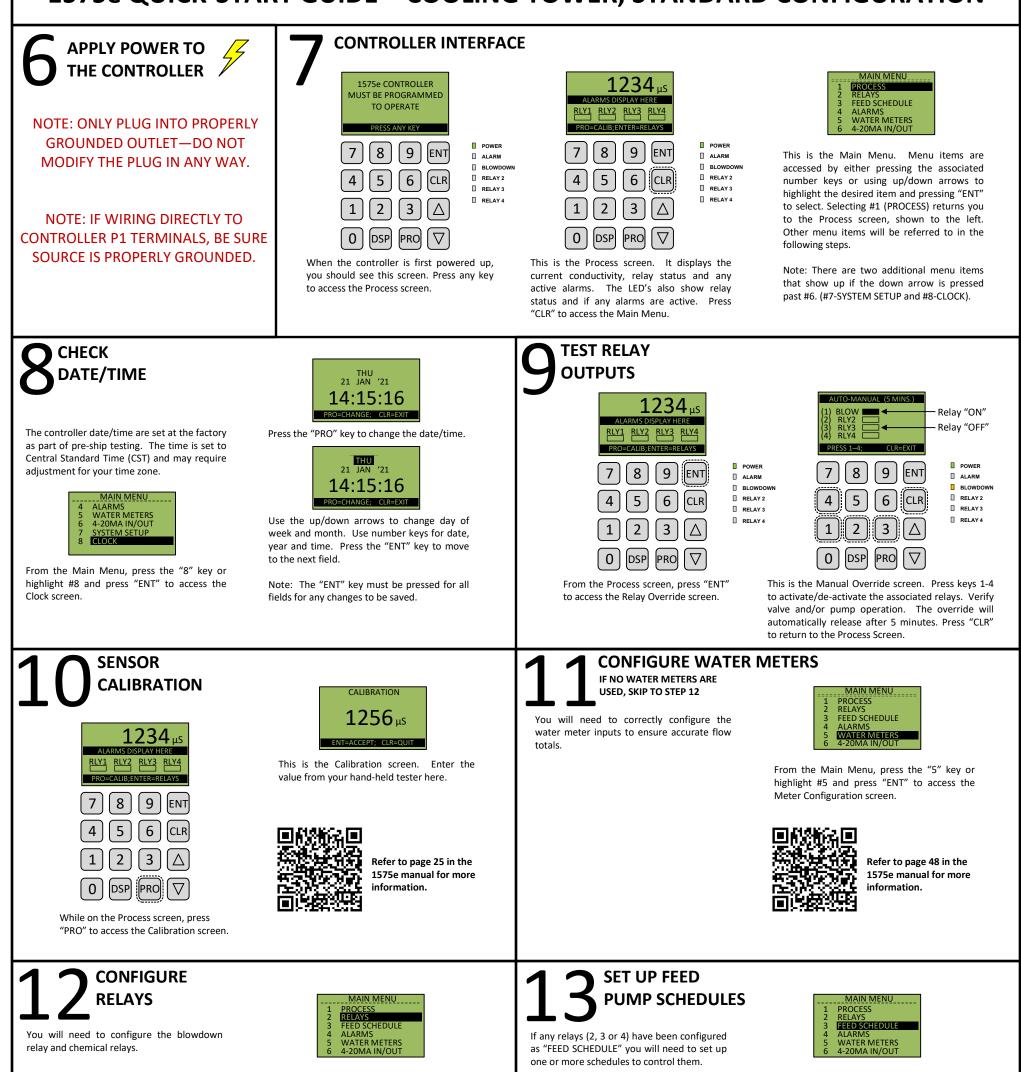

On the main menu, press the "2" key or highlight #2 and press "ENT" to access the relay configuration screen.

On the main menu, press the "3" key or highlight #3 and press "ENT" to access the Feed Schedule setup screens.

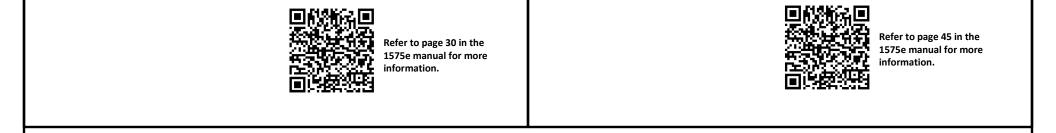

Thank you for your purchase of this Lakewood Instruments controller.

We would like to know what features **YOU** would like to see in our next new product.

Please let us know!



https://survey.zohopublic.com/zs/dZBUTn