




ISOMAG 

The friendly magmeter

**OPERATING AND
MAINTENANCE MANUAL**

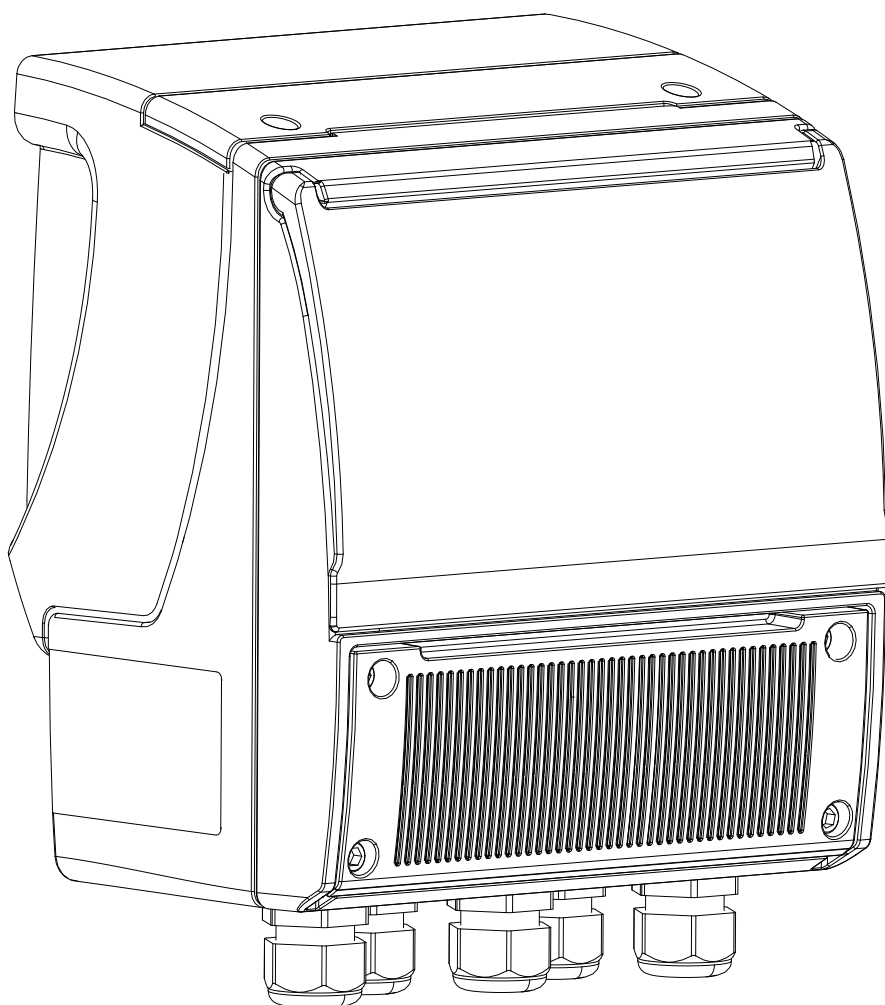

MV145

CE

ISOIL 
I N D U S T R I A


INDEX

INTRODUCTION	4
SAFETY INFORMATION	4
SAFETY CONVENTION	5
CONDITIONS DELIVERY OF THE CONVERTER	6
TECHNICAL CHARACTERISTICS	7
OVERALL DIMENSIONS WITHOUT BATTERY CASE	9
OVERALL DIMENSIONS WITH BATTERY CASE	12
CASE WEIGHT CONVERTER AND BATTERIES	15
TORQUES	15
MV145 CONSTRUCTION	16
INTERNAL LAYOUT	18
POWER SUPPLY CONVERTER	19
POWER SUPPLY BATTERIES	20
ESTIMATED CONSUMPTION OF LITHIUM BATTERIES	22
POWER SUPPLY FROM MAIN LINE	23
ELECTRICAL CONNECTION CONVERTER- SENSOR	25
INPUT CONNECTIONS	26
OUTPUTS CONNECTIONS	30
RS485	34
NOTES ON DISPLAY, RS485 PORT AND/OR OUT 4/20 MA	34
MIL CONNECTOR	35
START VISUALIZATION PAGES	36
ACCESS TO THE CONVERTER	39
ACCESS TO THE CONFIGURATION MENU	40
FLOW RATE VISUALIZATION	41
QUICK START MENU	42
CONVERTER ACCESS CODE	43
FUNCTIONS MENU	46

FUNCTIONS DESCRIPTION	51
MENU 1 - SENSOR	52
MENU 2 - UNITS	55
MENU 4: MEASURE	58
MENU 5 ALARMS	60
MENU 6 INPUTS	61
MENU 7 OUTPUTS	62
MENU 8 COMUNICAZIONE	64
MENU 9 DISPLAY	65
MENU 10 DATA LOGGER	66
USING DATA LOGGER BY MCP INTERFACE	68
MENU 11 - FUNCTION	76
MENU 12 - DIAGNOSTIC	77
MENU 13 - SYSTEM	82
MENU 13 - SYSTEM: ONLY MCP FUNCTIONS	85
MENU 14 - FILE (ONLY MCP)	88
MENU 15 - PROCESS DATA (ONLY MCP)	89
METER DATA	93
B.I.V. (BUILT-IN VERIFICATOR)	95
SOFTWARE MCS	99
ALARM MESSAGES (CAUSES AND ACTIONS TO BE TAKEN)	100
ERROR CODE TEST SYSTEM OF SENSOR	103
MANUAL REVIEWS	105

INTRODUCTION

- ❑ These operating instructions and description of device functions are provided as part of the scope of supply.
- ❑ They could be modified without prior notice. The improper use, possible tampering of the instrument or parts of it and substitutions of any components not original, renders the warranty automatically void.
- ❑ The flow meter realizes a measure with liquids of conductivity greater than $5\mu\text{S}/\text{cm}$ in closed conduits, and is composed of a converter (described in this manual) and a sensor (refer to the specific manual).
- ❑ The converter could be coupled directly on the sensor (compact version) or coupled to the sensor by cable supplied with it (remote version).

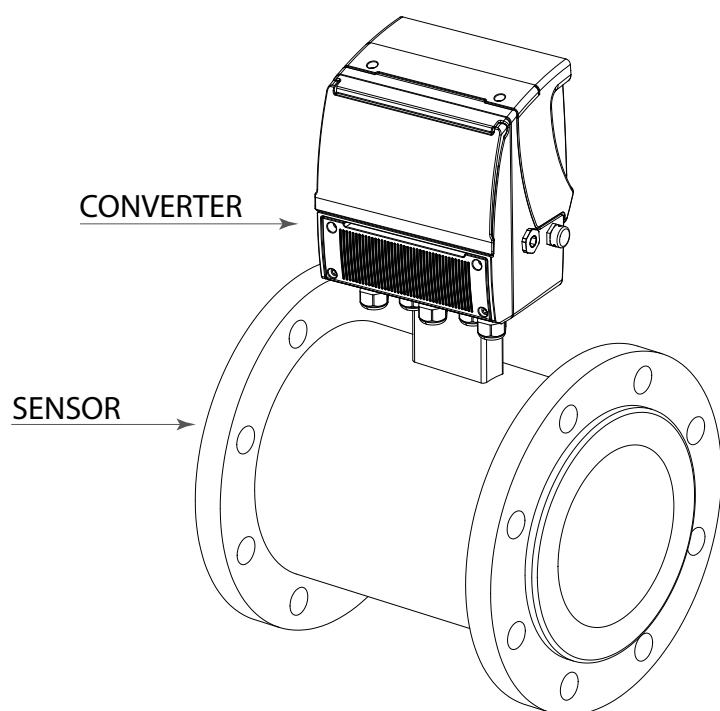

SAFETY INFORMATION

- ❑ Any use other than described in this manual affects the protection provided by the manufacturer and compromises the safety of people and the entire measuring system and is, therefore, not permitted. The manufacturer is not liable for damages caused by improper or non-designated use.
- ❑ Transport the measuring device to the measuring point in the original packaging. Do not remove covers or caps until immediately before installation. In case of cartons packaging it is possible to place one above the other but no more than three cartons. In case of wooden packaging do not place one above the other.
- ❑ Disposal of this product or parts of it must be carried out according to the local public or private waste collection service regulations.
- ❑ The converter must only be installed, connected and maintained by qualified and authorized specialists (e.g. electrical technicians) in full compliance with the instructions in this Operating Instruction, the applicable norms, legal regulations and certificates (depending on the application).

- ❑ The specialists must have read and understood these Operating Instructions and must follow the instructions it contains the Operating Instructions provide detailed information about the converter. If you are unclear on anything in these Operating Instructions, you must call the ISOIL service department.
- ❑ The converter should only be installed after have verified technical data provided in these operating instructions and on the data plate.
- ❑ Specialists must take care during installation and use personal protective equipment as provided by any related security plan or risk assessment.
- ❑ Never mount or wire the converter while it is connected to the power supply and avoid any liquid contact with the instrument's internal components. To connect remove the terminals from the terminal block.
- ❑ Before connecting the power supply check the functionality of the safety equipment.
- ❑ Repairs may only be performed if a genuine spare parts kit is available and this repair work is expressly permitted.
- ❑ For the cleaning of the device use only a damp cloth, and for the maintenance/repairs contact the service center (for details see the last page).
- ❑ **Before starting up the equipment please verify the following:**
 - ❑ Power supply voltage must correspond to that specified on the data plate
 - ❑ Electric connections must be completed as described
 - ❑ Ground (earth) connections must be completed as specified
- ❑ **Verify periodically (every 3-4 months):**
 - ❑ The power supply cables integrity, wiring and other connected electrical parts
 - ❑ The converter housing integrity
 - ❑ The suitable tightness of the sealing elements
 - ❑ The front panel integrity (display and keyboard)
 - ❑ The mechanical fixing of the converter to the pipe or wall stand

SAFETY CONVENTION



DANGER ELETTRIC SHOCK



WARNING



PRECAUTIONS




ATTENTION

CONDITIONS DELIVERY OF THE CONVERTER



WARNING! The converter is supplied with the batteries disconnected so it is necessary to remove the terminal block cover, as shown below, and connect them according to the indications given in the section POS. power supply converter pag. 19

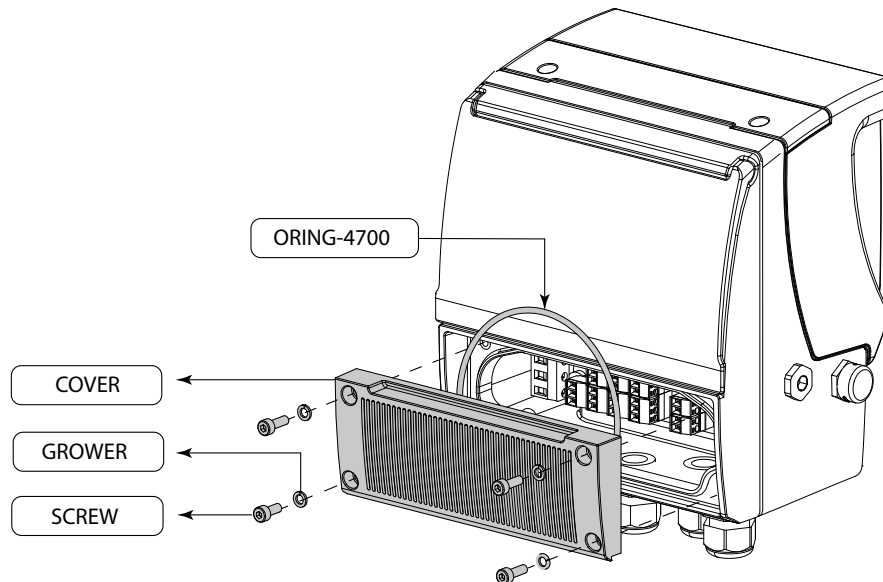

Programming is allowed in two ways:

Connecting a power bank ≥ 0.5 Ah to the USB jack. (Programming from converter keyboard)

Connecting a computer to the USB socket using the MCP program see section POS. Access Via Mcp interface (Virtual Display) pag. 41

TECHNICAL CHARACTERISTICS

Electrical Characteristic



Converter classification: class I, IP67/68 for aluminum and PA6 housing, installation category (overvoltage) II, rated pollution degree 2.

Power supply version	Power supply voltage	Power supply frequency	Min Power	Max Power
HV	100-240V~	45-66Hz	1.5 W (Sensor only)	4 W (all loads)
LLV	12-48V ---	//		
Lithium Battery Primary	7,2 V	//	40 mW	200 mW
Alkaline Battery 6 Size D x 15v	9V	//	40 mW	200 mW

- Voltage variations must not exceed $\pm 10\%$ of the nominal one.
- Digital and analogue inputs and outputs are isolated up to 500V.
- The output 4-20mA (optional) is electrically connected to the ON/OFF outputs and the output power supply(24V ---).
- Version LLV : inrush current < 20A
- Version HV : inrush current < 25A

Environmental Use Conditions

ALLUMINUM			NYLON PA6		
TEMPERATURE	Min*	Max	TEMPERATURE	Min*	Max
°C	-20	+60	°C	-10	+50
°F	-4	+140	°F	+14	+122

If the converter is supplied in compact version, consider the most restrictive ambient temperatures between converter and sensor, otherwise refer to the respective manuals.* For discontinuous use install a heating resistor.




- The instrument is suitable for indoor and outdoor weather conditions
- Altitude: from -200m to 4000m
- Humidity range: 0-100%





Data Plate

The instrument label contain the following information:

- MODEL: Convert Model
- S/N: Serial Number of the converter
- SUPPLY: Main power supply
- Hz: Supply frequency (AC)
- POWER: Maximum power consumption
- IP: Protection grade
- T: Operation temperature
- COUPLING: Serial number of sensor coupled
- ITEM: Free for user

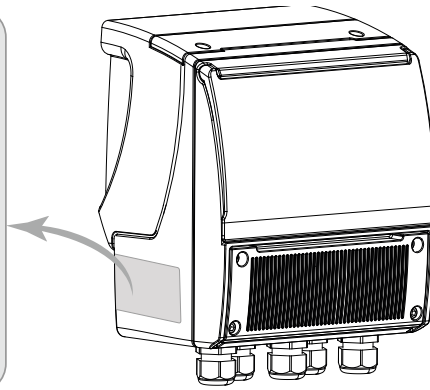


OVERALL DIMENSIONS WITHOUT BATTERY CASE

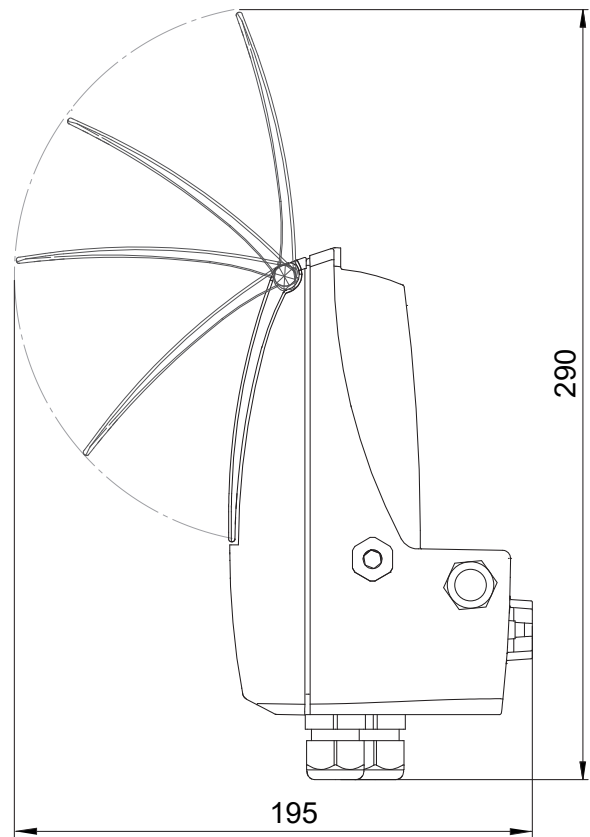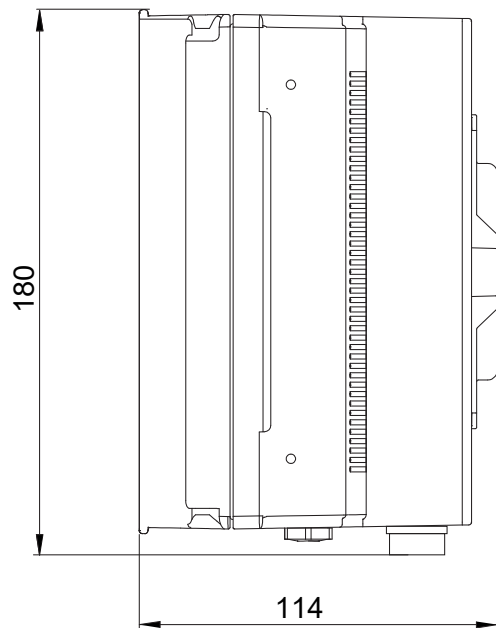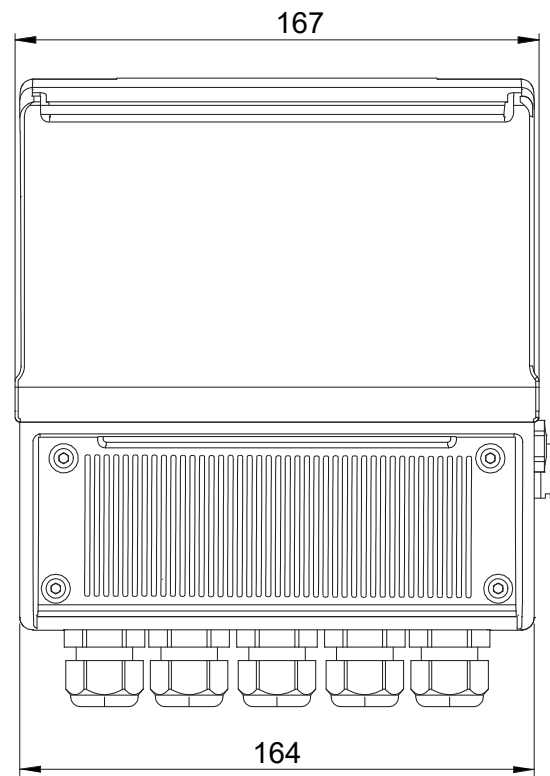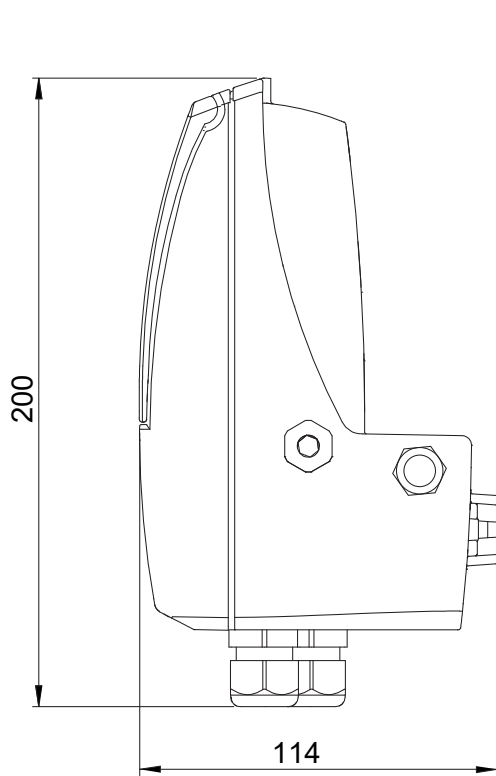


The manufacturer guarantees only English text available on our web site www.isoil.com

Compact version

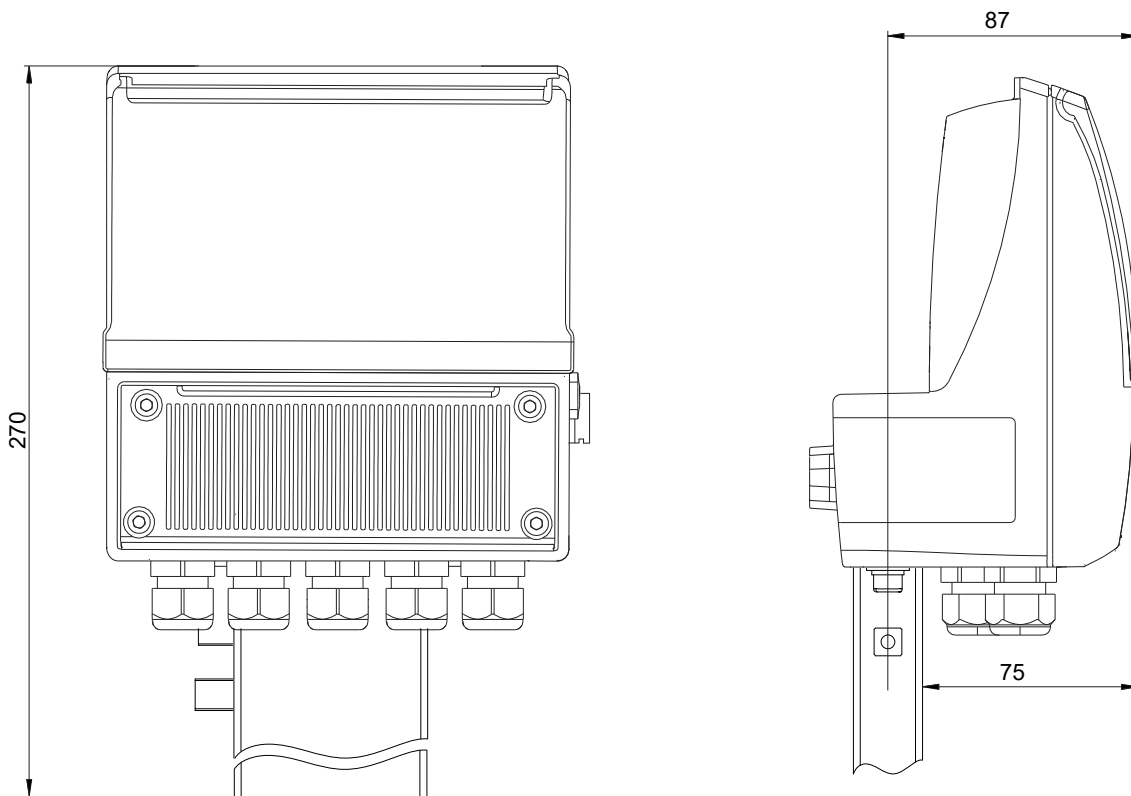


Compact version (rotated)

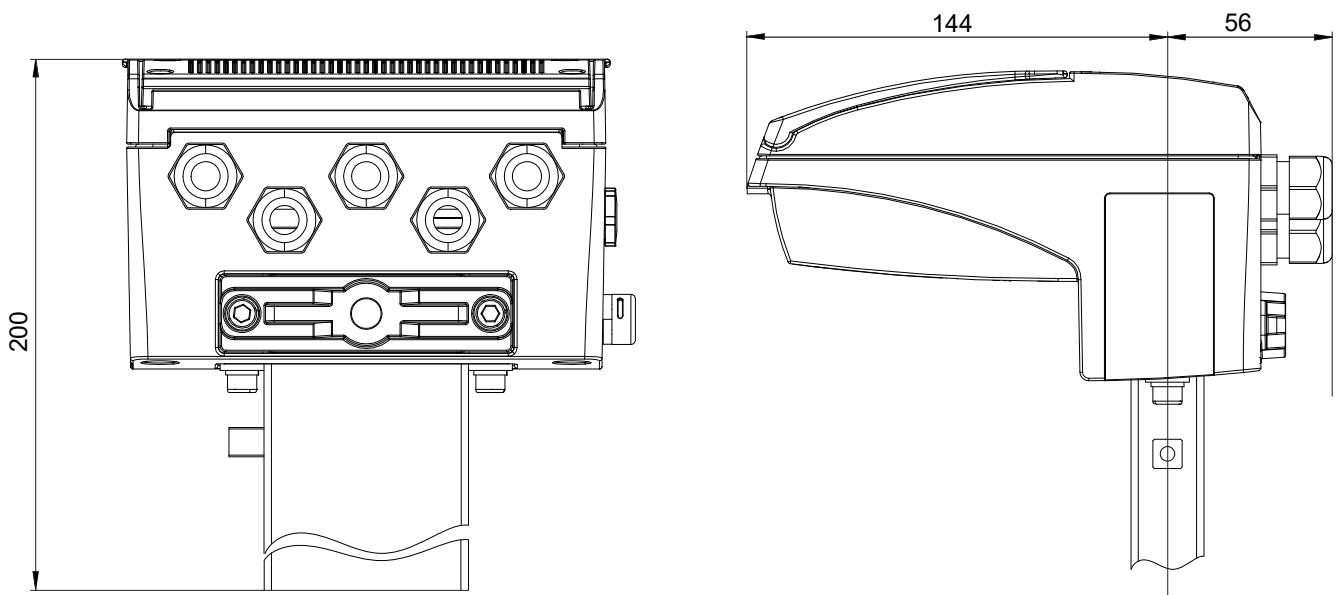





The manufacturer guarantees only English text available on our web site www.isoil.com

Separate version

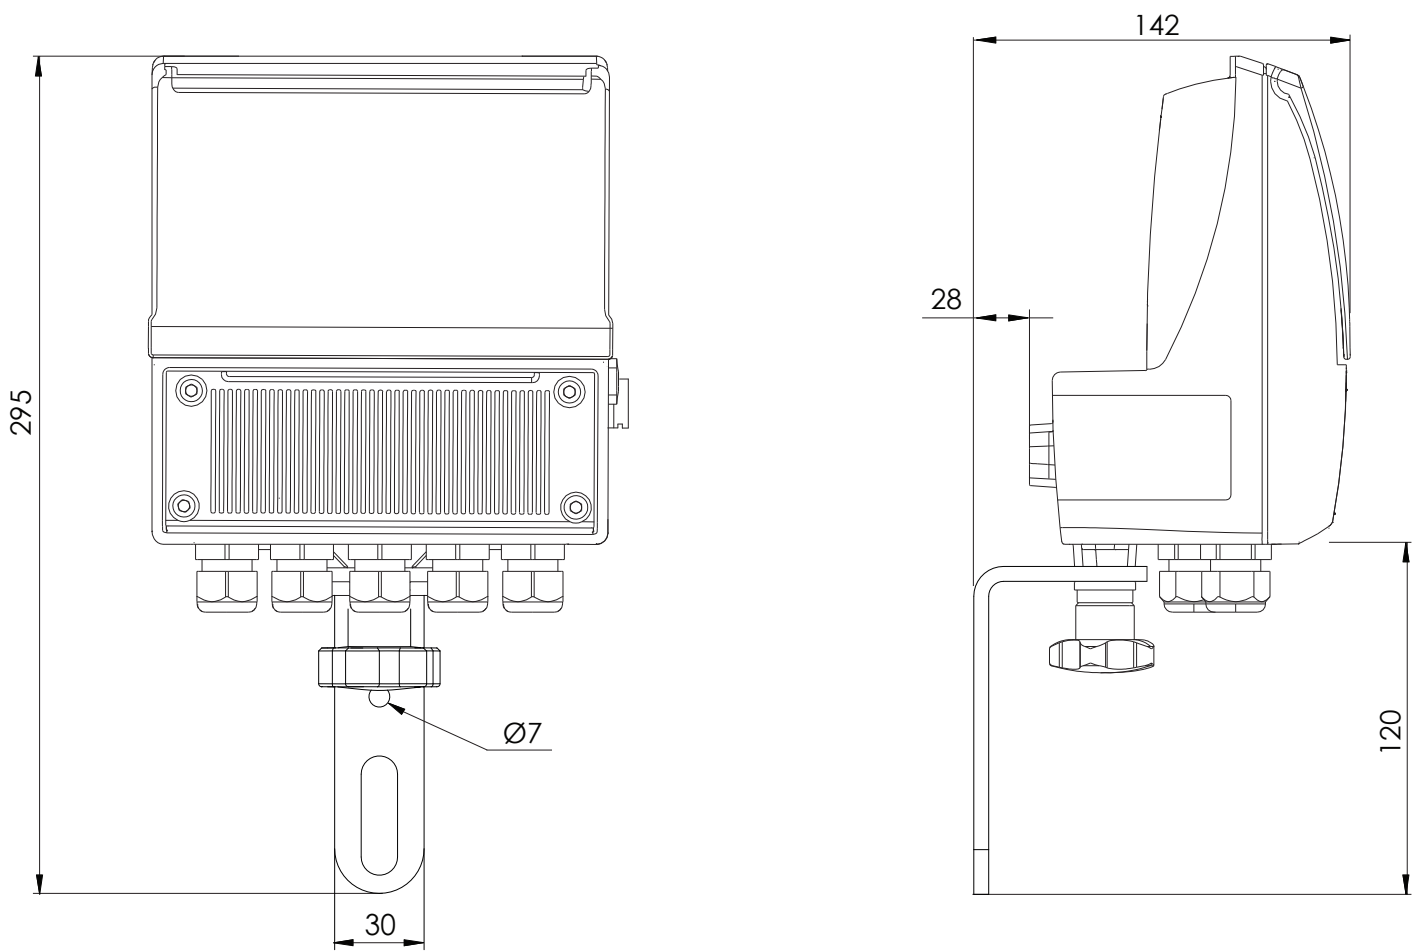


The manufacturer guarantees only English text available on our web site www.isoil.com

OVERALL DIMENSIONS WITH BATTERY CASE

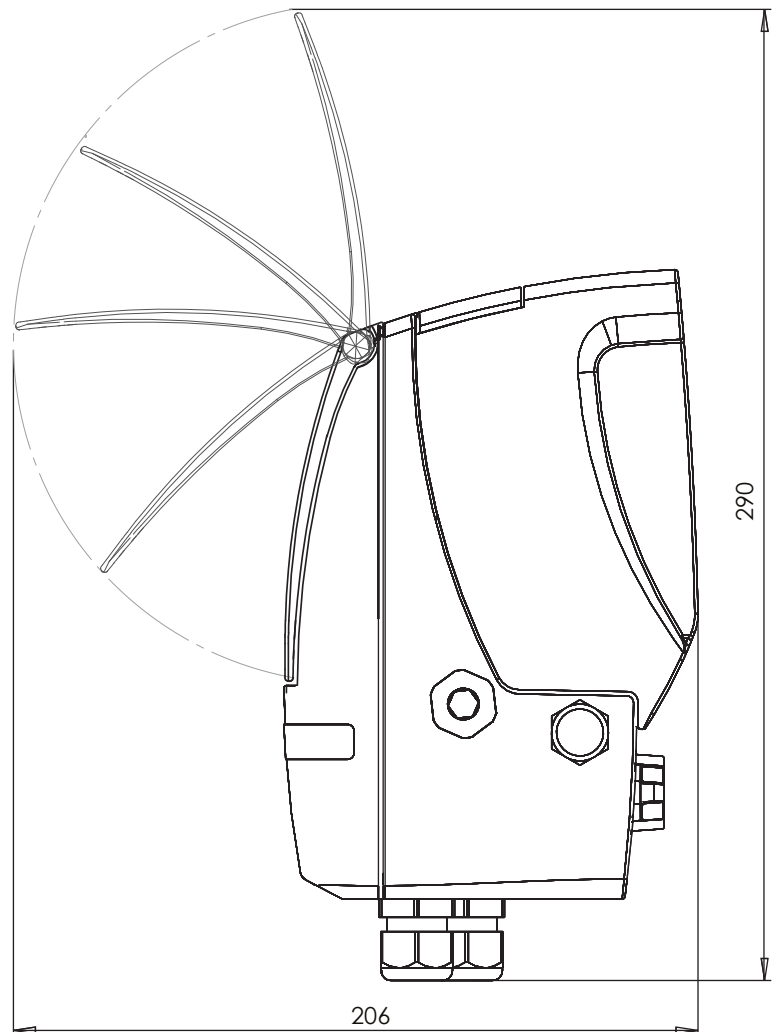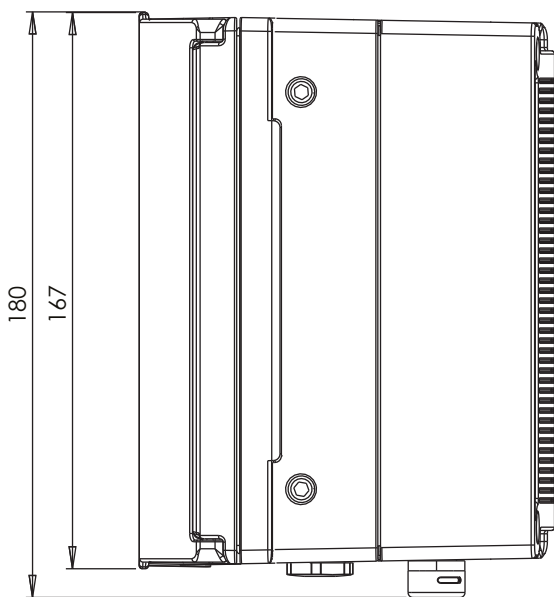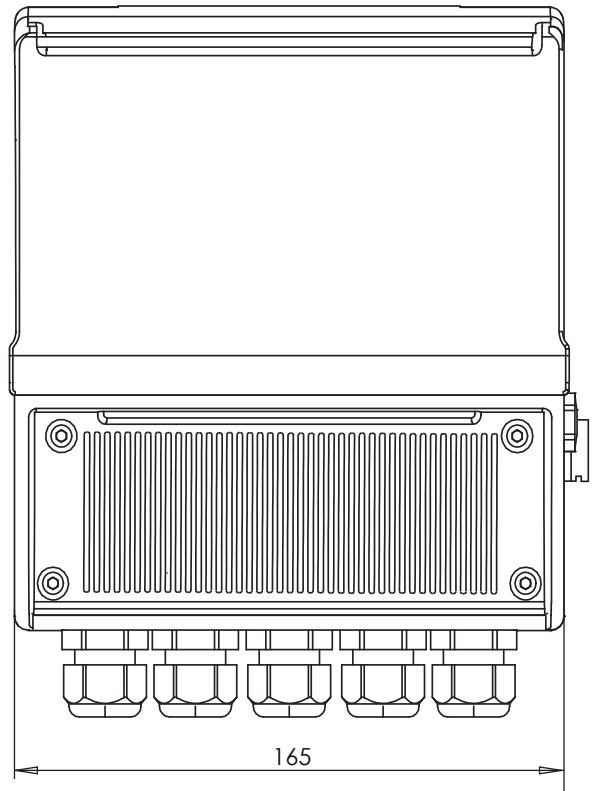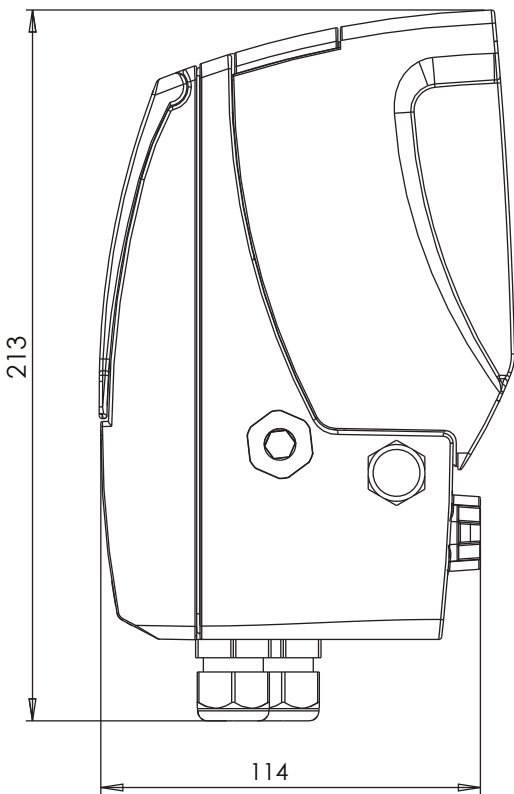


The manufacturer guarantees only English text available on our web site www.isoil.com

Compact version


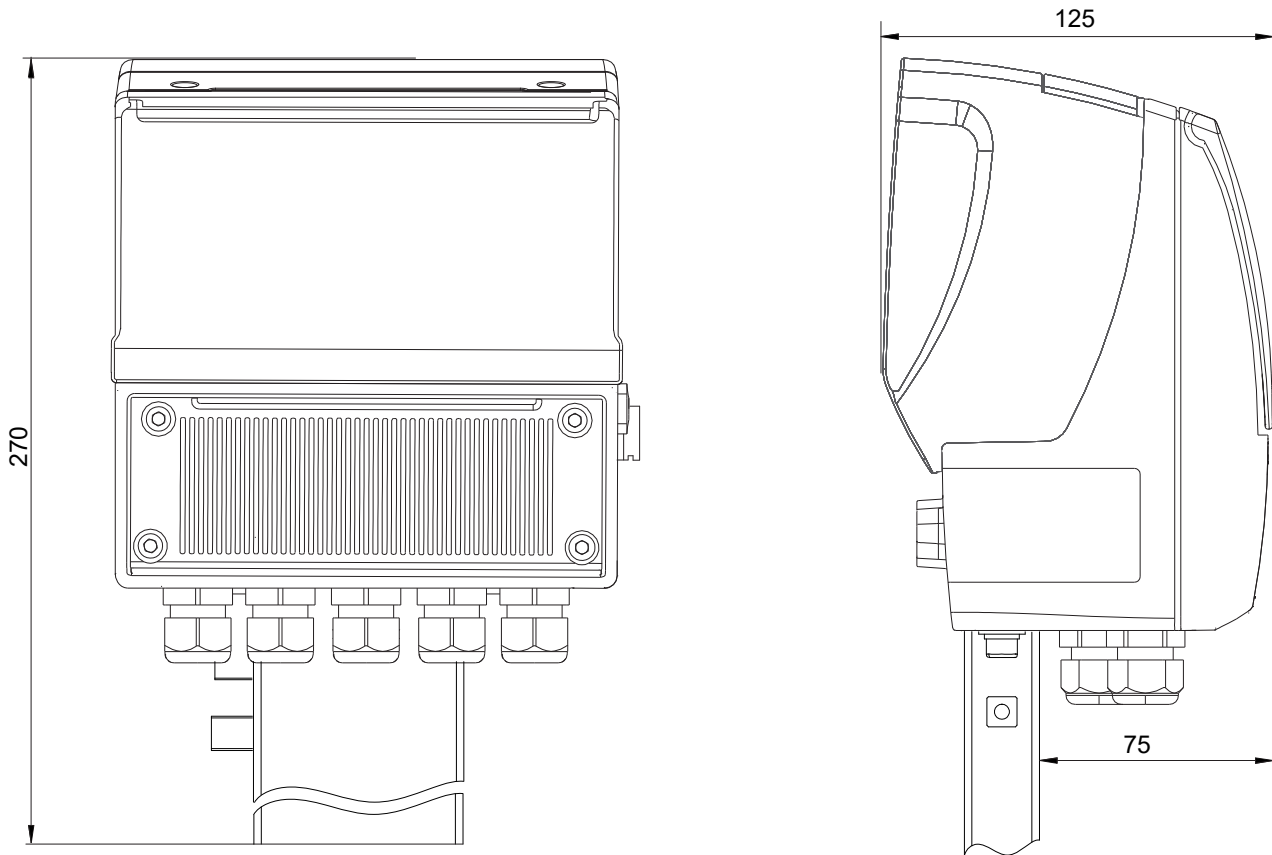


Compact version (rotated)

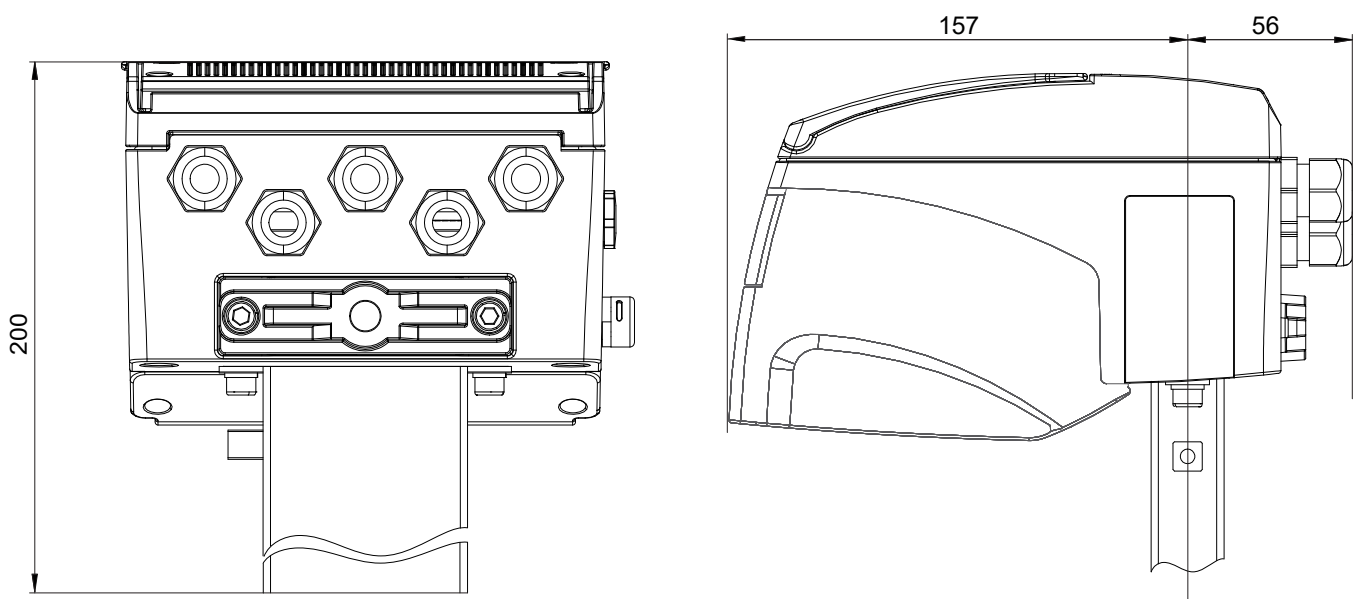


The manufacturer guarantees only English text available on our web site www.isoil.com

Separate version

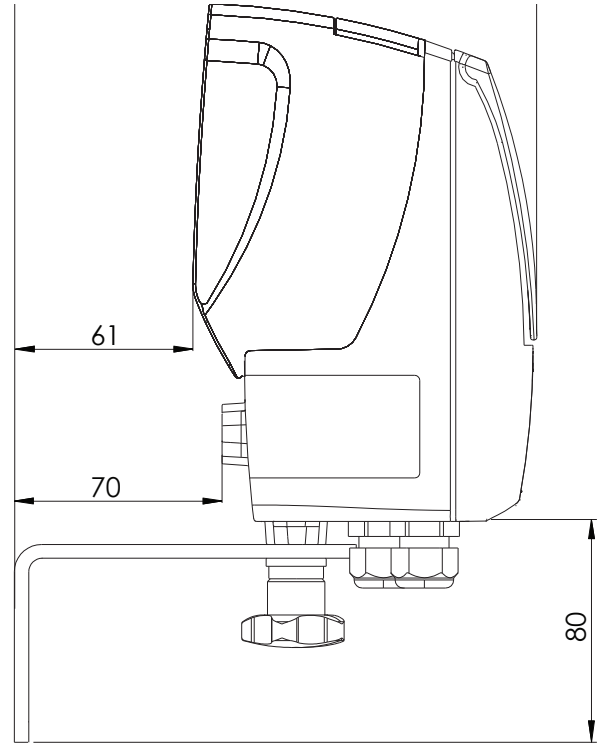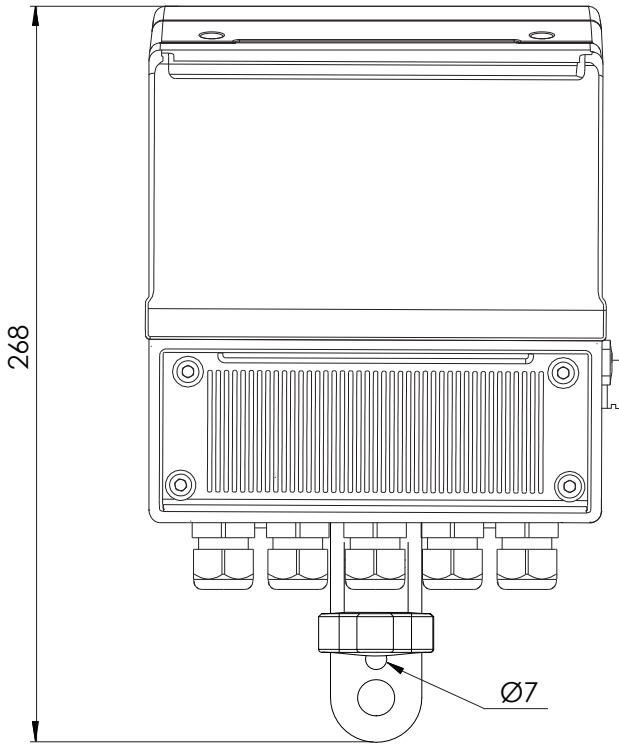

MIL connector version


For details of connections with MIL connectors, refer to the manual: MV145-255_MIL CONNECTOR POSITION.

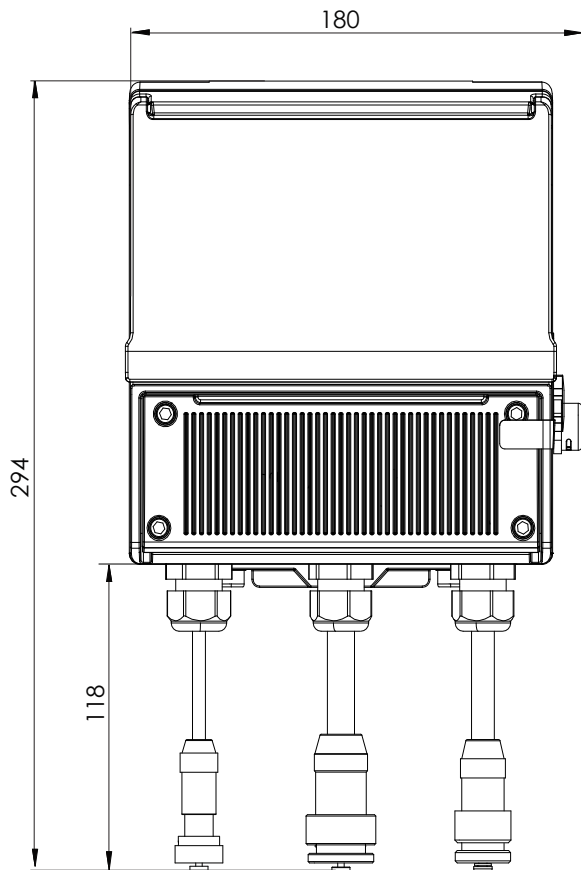


The manufacturer guarantees only English text available on our web site www.isoil.com

TORQUES


To guarantee the housing's IP degree the following torques are required:

	Housing screw (1)	Cover terminal block screw (2)	Fixing Display Frame	PCB Screw	Version Cap(3)	Cable Glands (4)	Cap USB-B (5)
ALUMINIUM HOUSING	6 Nm	5.5 Nm	3 Nm	0.8 Nm	8 Nm	4 Nm	4 Nm
PLASTIC HOUSING	2 Nm	2 Nm	2.5 Nm	0.8 Nm	7 Nm	4 Nm	4 Nm
BATTERY HOUSING	2 Nm	//	//	//	//	//	//

Housing converter

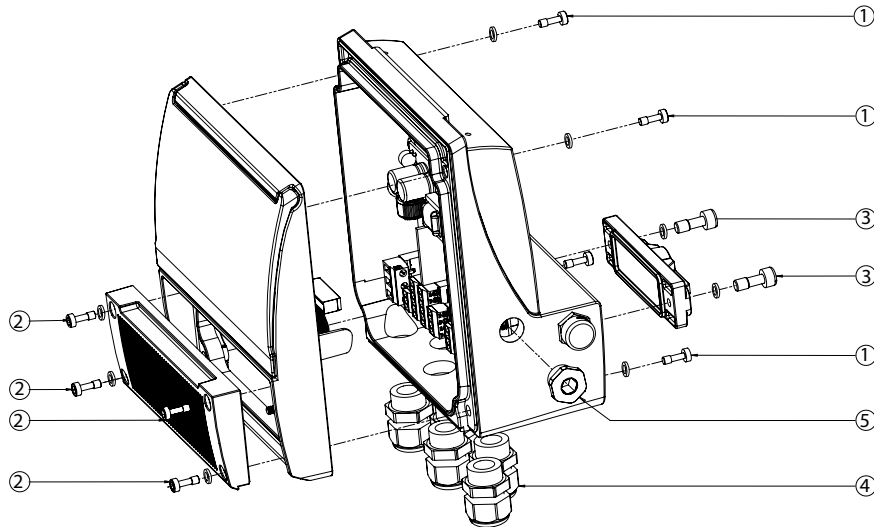

Battery case cover

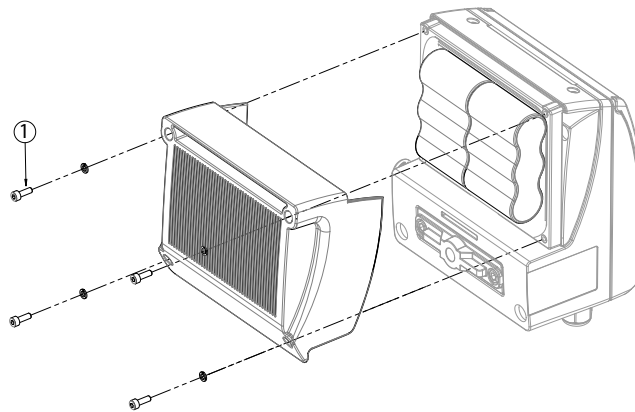


CASE WEIGHT CONVERTER AND BATTERIES

	WEIGHT CONVERTER	BATTERY WEIGHT LITHIUM	BATTERY WEIGHT ALKALINE
PLASTIC HOUSING	2kg	EACH LITHIUM BATTERY WEIGHS 0.1kg; EXPECTED MAXIMUM 6 BATTERIES	EACH ALKALINE BATTERY WEIGHS 0.15 kg EXPECTED MAXIMUM 6 BATTERIES
ALUMINIUM HOUSING	3kg		


The manufacturer guarantees only English text available on our web site www.isoil.com

MV145 CONSTRUCTION


TERMINAL BLOCK COVER

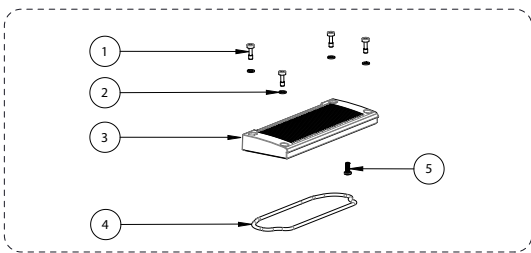


MAIN HOUSING COVER

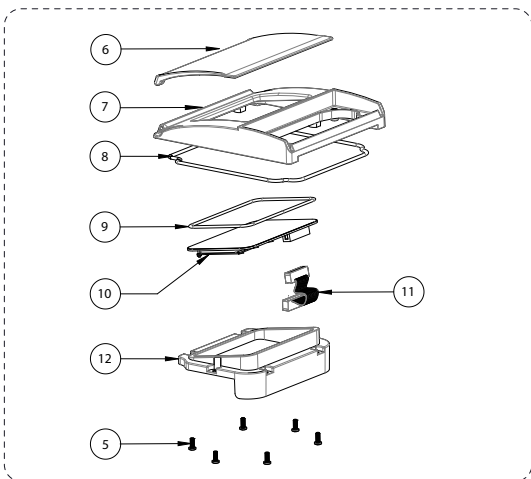

PCB MV145

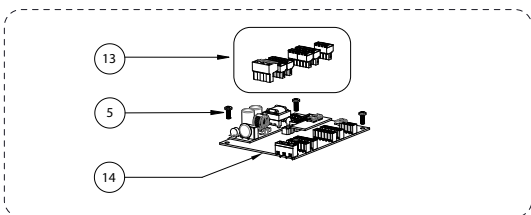


MAIN HOUSING

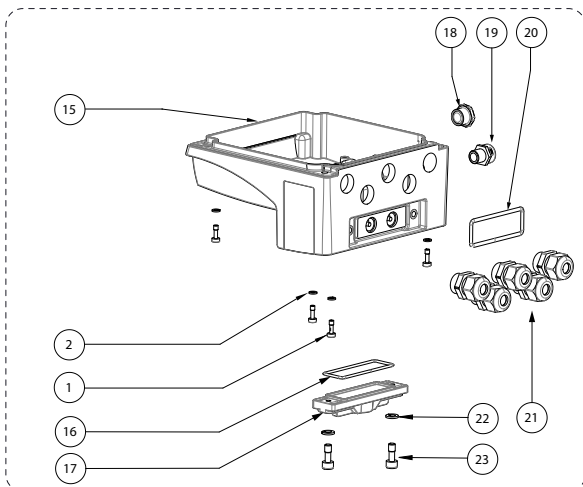

POS.	DESCRIPTION	
	PA6 VERSION	ALUMINIUM VERSION
1	SCREW M4x12	SCREW M5x12
2	GROWER Ø4	GROWER Ø5
3	TERMINAL BLOCK COVER	TERMINAL BLOCK COVER
4	O-RING-4400	
5	SELF-TAPPING SCREW 4x10	SELF-TAPPING SCREW 4x10
6	PROTECTION COVER	
7	HOUSING COVER	HOUSING COVER
8	ORING-4700	
9	ORING-117x3	
10	DISPLAY	
11	FLAT CABLE	
12	FIXING DISPLAY FRAME (MATERIAL PA06)	
13	TERMINAL BLOCK SOLID WIRE: 26-16 AWG / 0.129-1.31 mm ² STRANDED WIRE: 26-16 AWG / 0.129-1.31 mm ² TORQUE: 3.0 Lb.In / 0.34 Nm	
14	PCB	
15	PA6 MAIN HOUSING	ALUMINIUM MAIN HOUSING
16	O-RING-155	
17	VERSION CAP (MATERIAL PA06)	
18	PG9 CAP	
19	ANTICONDESE CAP	
20	O-RING-155	
21	PG11 CABLE GLAND CABLE DIAMETER: ø5-ø10mm	
22	GROWER Ø6	
23	SCREW M6x16	

The manufacturer guarantees only English text available on our web site www.isoil.com

BATTERY HOUSING

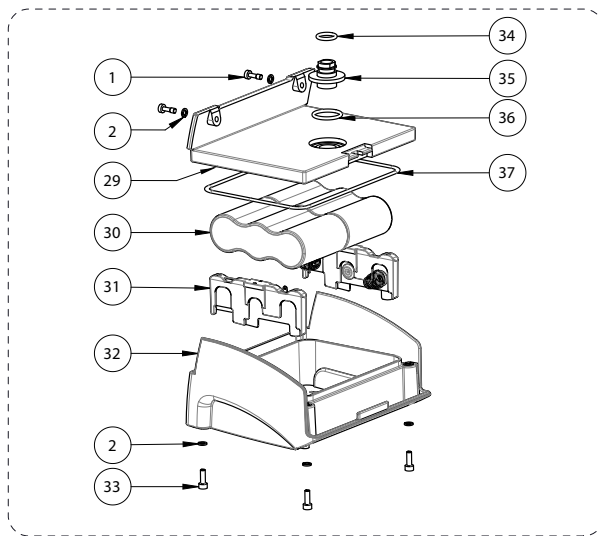



POS.	DESCRIPTION	
	PA6 VERSION	ALUMINIUM VERSION
29	CAP BATTERY HOUSING PA6	
30	LITHIUM OR ALKALINE BATTERY	
31	SUPPORT CONTACTS ALKALINE BATTERIES MV	
32	BATTERY HOUSING PA6	
33	SCREW M4X12	
34	O-RING 3050	
35	SEAL BUSH	
36	O-RING 3081	
37	O-RING 4575	

The manufacturer guarantees only English text available on our web site www.isoil.com

INTERNAL LAYOUT

Internal Converter Views

The 4 screws shown in the following figure can be removed if the battery case is disassembled first.

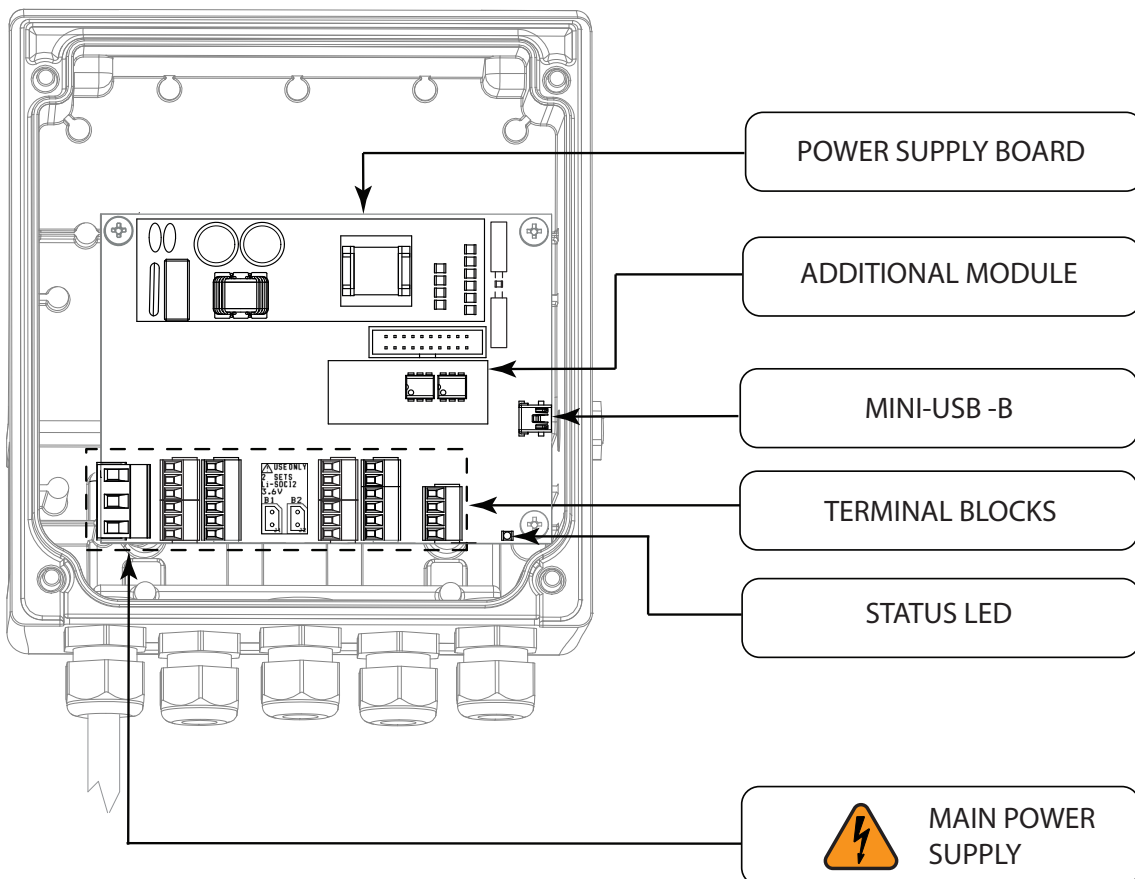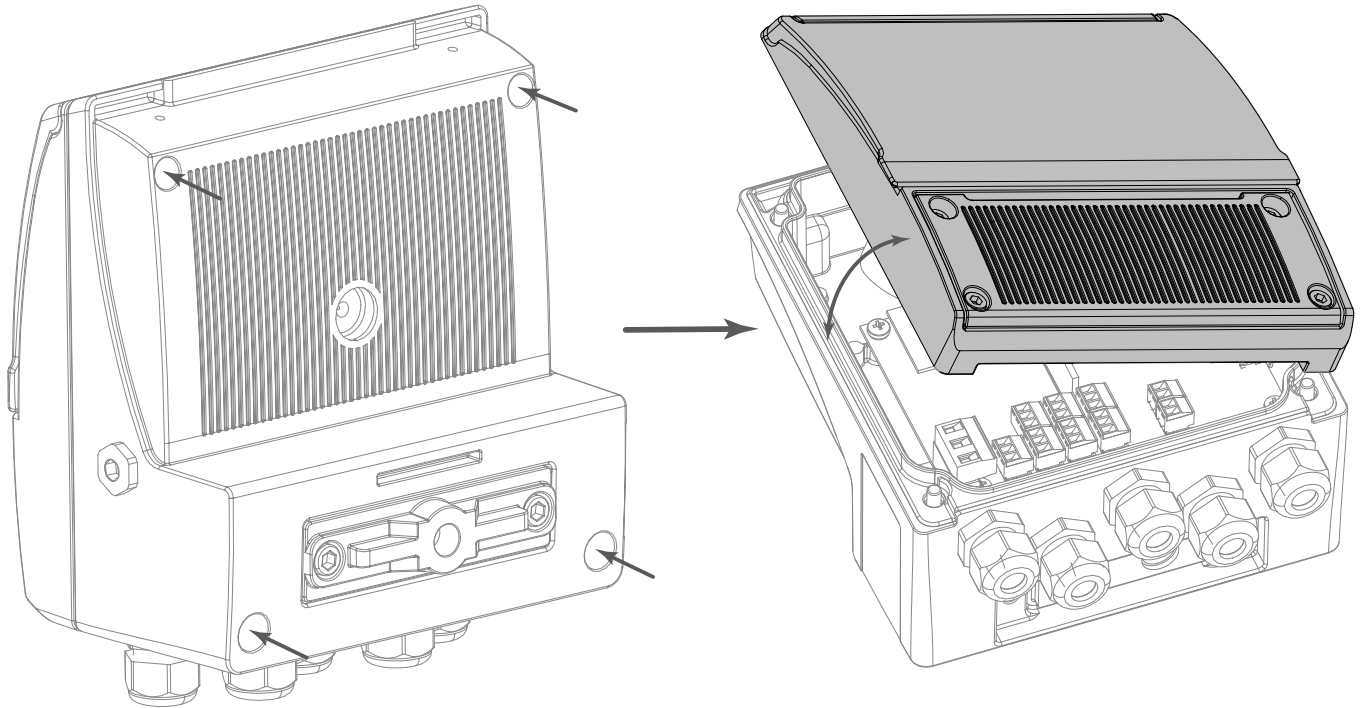

The manufacturer guarantees only English text available on our web site www.isoil.com


POWER SUPPLY CONVERTER

MV145 can be powered in different modes


- ❑ Powered by lithium batteries in slots B1 / B2
- ❑ Power supply from alkaline batteries slot B3
- ❑ Power supply from the mains

Below are the positions of the terminal blocks for the different types of power supply.

PCB MV145 FOR BATTERIES ALKALINE

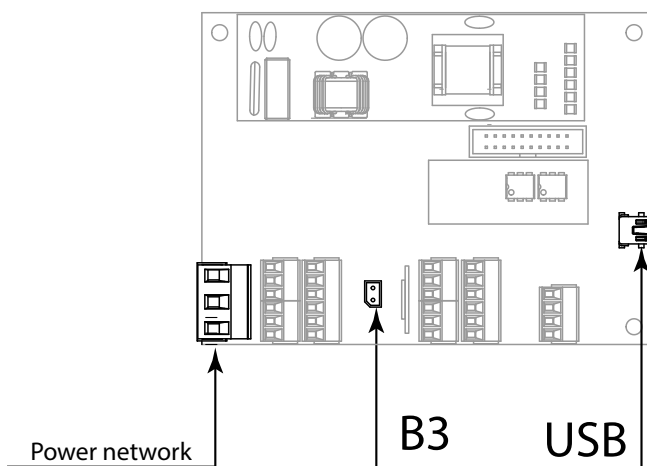

PCB MV145 FOR BATTERY PRIMARY LITHIUM

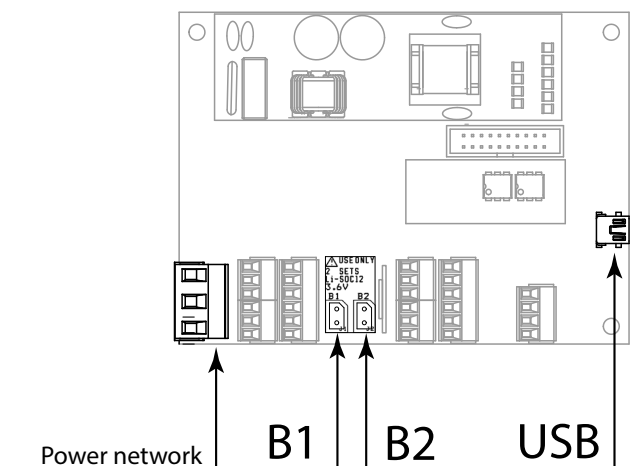

General notes for converter power supplies

- ❑ The converter can have different power combinations. However, all versions are able to operate at 100% of the possibilities even with only the power coming from the USB cable, transmission included. However, note that these devices are seen by the USB controller that supplies the energy as a 500 mA class device, so not all devices are able to power these electronics correctly (for example tablets and cell phones unless they are rare).
- ❑ With the USB connection there is no battery consumption.

POWER SUPPLY BATTERIES


When the B1 and B2 batteries are connected for the first time or after a long period of inactivity of the instrument, the super-capacitors coupled to the batteries are completely discharged, therefore for a certain period of time the indications will be "B1 LOW" and "B2 LOW" until the nominal voltage of the batteries is reached. The time required depends on many factors (temperature, passivation status of the batteries, amount of battery charge remaining). The estimated time for this transition state is less than an hour.

Primary lithium batteries

For primary lithium batteries, connections to slots B1, B2 (see POS. power supply converter pag. 19) are prepared as follows:


The assemblable battery packs are:

SLOT (B1 e B2) PRIMARY LITHIUM

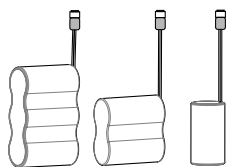


The battery packs for slots, B1 and B2, can have different sizes (from one to three elements). When both batteries are installed on B1 and B2, the system alternately uses the battery with the highest voltage. As soon as a battery voltage falls below a predetermined value, the system switches to the other, both batteries are therefore used alternately. This guarantees a far greater autonomy, compared to the use of the single. When one or both batteries reach a minimum usage voltage, the low battery alarm is generated. It can be repeated for a long time, since the system passes continuously from one battery to another, allowing the weaker battery to partially regenerate the potential and return to normal operation. When a battery reaches the potential of "CUT-OFF", it is disconnected and the system uses the remaining battery. At this point the remaining autonomy becomes critical.

The maximum number of battery elements housed in the battery holder is 6.

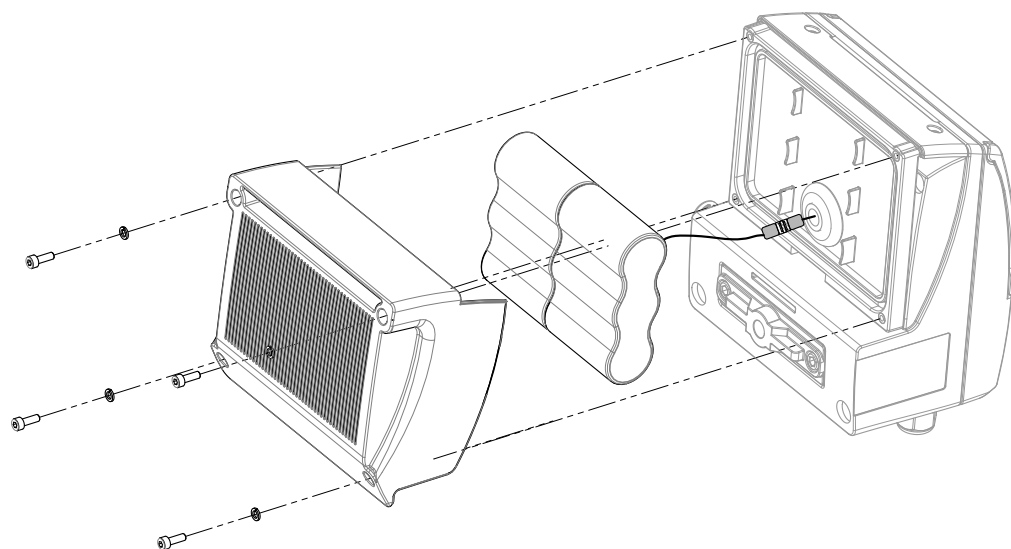

Alkaline batteries

The alkaline batteries foreseen for the MV145 converter are 6 Size D elements. The alkaline battery pack is connected in the B3 slot of the converter (POS. power supply converter pag. 19)

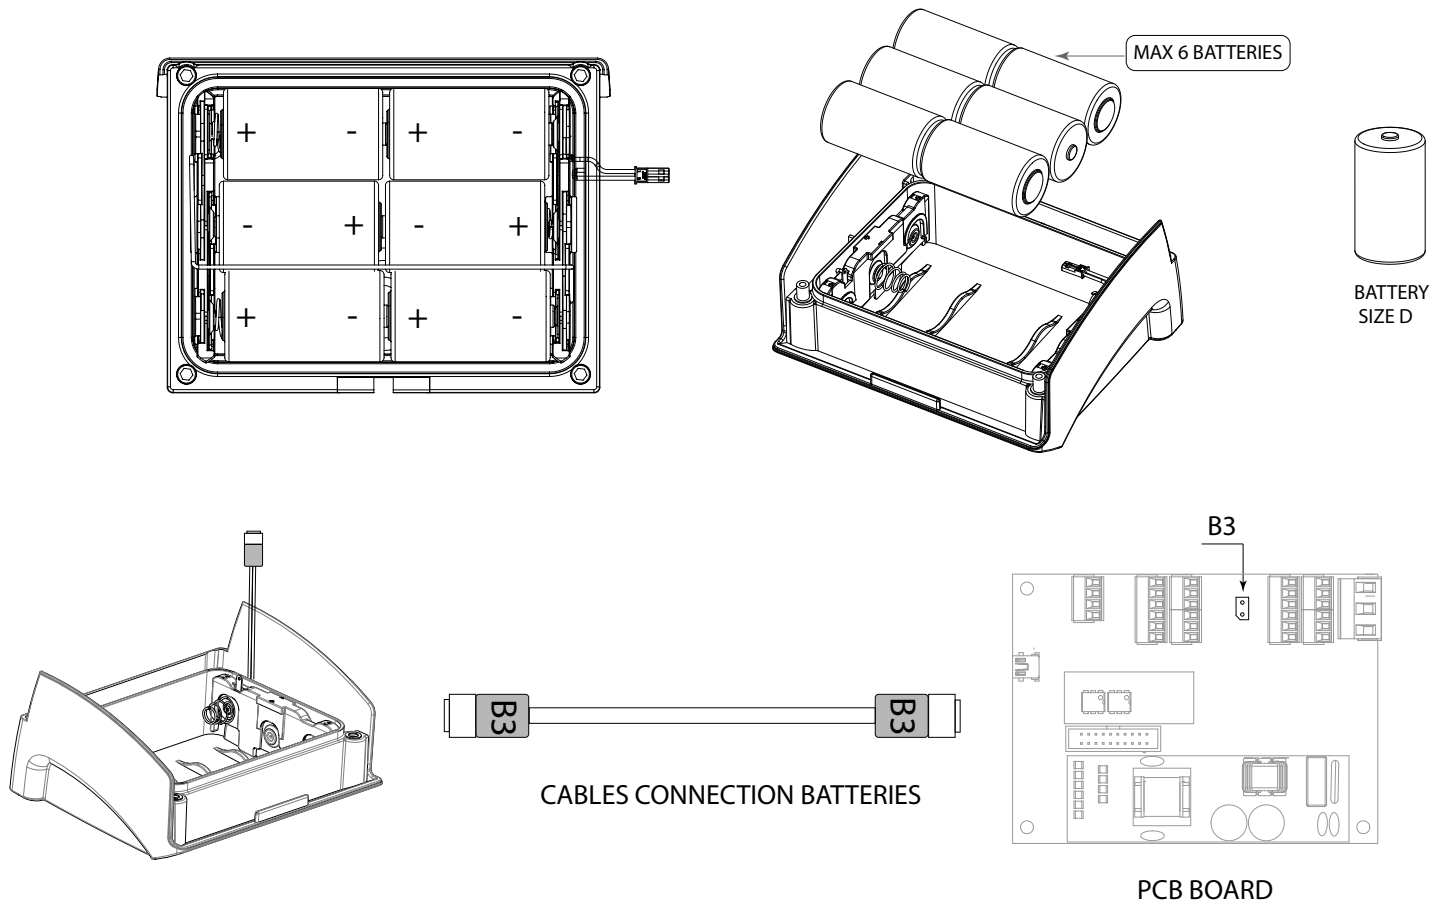

Connections to B1 and B2 are not used and no other batteries must be connected to the instrument.

Operating notes:

- Always replace all batteries at the same time as indicated on the battery holder.
- Do not mix new and used batteries or batteries with different characteristics.
- To maintain valid time and date when replacing batteries, connect the unit with a USB power source capable of supplying at least 500 mA.

The manufacturer guarantees only English text available on our web site www.isoil.com




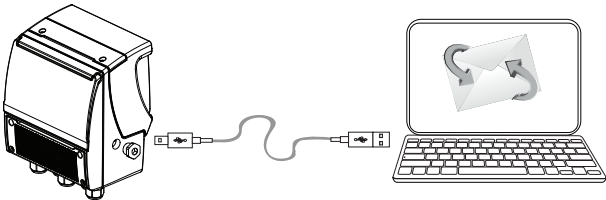

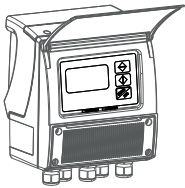





ESTIMATED CONSUMPTION OF LITHIUM BATTERIES

The consumption of lithium batteries depends mainly on:

- ❑ Sensor diameter.
- ❑ Data logger sampling interval.
- ❑ Number of connections to external loggers (4-20 mA or via MODBUS).
- ❑ Measurement profile (CONTINUOUS, SMART1, SMART2, SMART5).

Note: for other configurations / type of batteries separate consumption cannot be estimated.

The manufacturer guarantees only English text available on our web site www.isoil.com


	 LOW CONSUMPTION	 MEDIUM CONSUMPTION	 HIGH CONSUMPTION
INTERFACE ACTIVITY AND STORAGE DATA			 B1/B2 BATTERY
ACTIVITY OF THE DISPLAY			 B1/B2 BATTERY
INTERVALS OF SAMPLING	POWER PROFILE OF THE SMART MEASURE 5		 B1/B2 BATTERY
	POWER PROFILE OF THE SMART MEASURE 2		 B1/B2 BATTERY
	POWER PROFILE OF THE SMART MEASURE 1		 B1/B2 BATTERY
	POWER PROFILE OF THE CONTINUOUS POWER MEASUREMENT		 B1/B2 BATTERY

For further details concerning the sampling interval and the management of the measurement power profiles see function POS. 4.1 pag. 47

POWER SUPPLY FROM MAIN LINE



Always ensure that the converter and the sensor are grounded (earthed) correctly. The grounding of the sensor and converter must ensure that the instrument and liquid are equipotential.

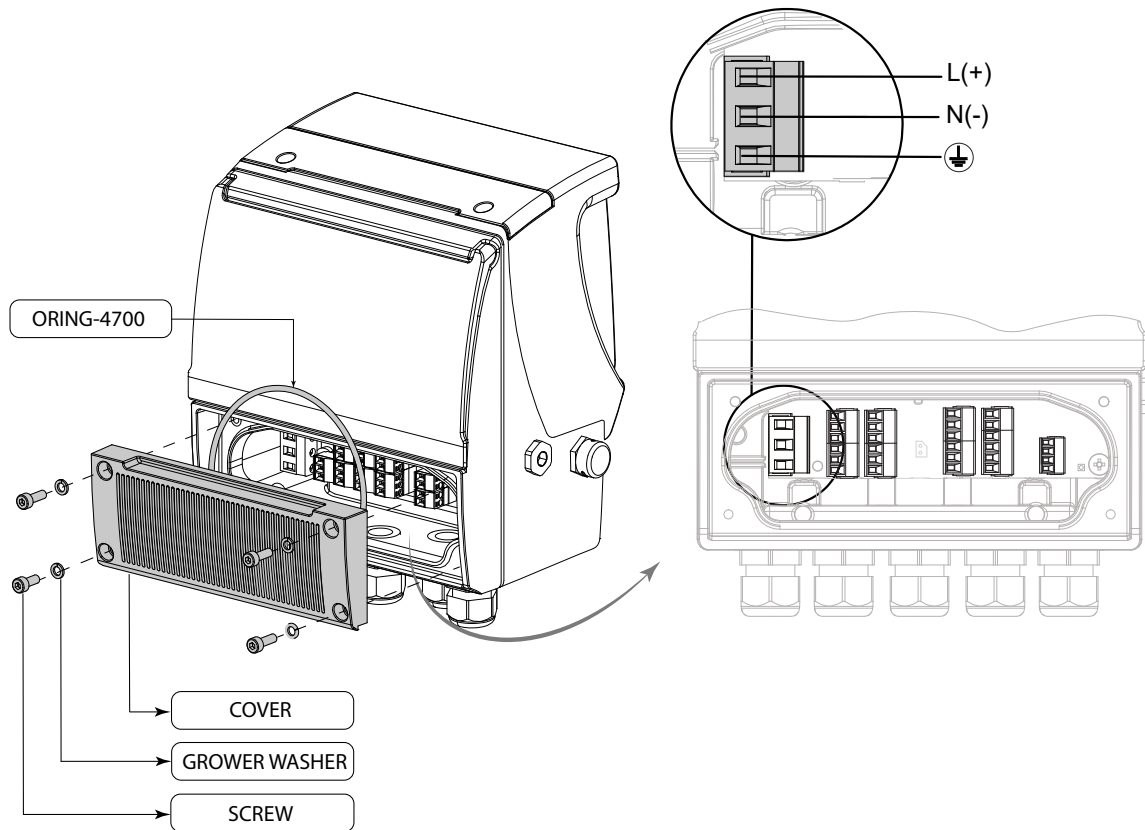

- ❑ Before connecting the power supply, verify that the mains voltage is within the limits indicated on data plate.
- ❑ For the connections use only approved conductors, with fire-proof properties, whose section varies from 0.25 mm² to 1.50 mm², based on distance/power; additionally fix the power supply wires with a additional fastening system located close to the terminal.
- ❑ The power supply line must be equipped with an external protection for overload current (fuse or automatic line breaker).
- ❑ Provide in close proximity the converter a circuit breaker easily accessible for the operator and clearly identified; whose symbols must conform to the electrical safety and local electrical requirements.
- ❑ Ensure that the component complies with the requirements of the standard for electrical safety distance.
- ❑ Check chemical compatibility of materials used in the connection security systems in order to minimize electrochemical corrosion. In the aluminum housing it should avoid direct contact between the ground connection cable and the aluminum housing. It is therefore recommended to connect the safety ground cable, by placing it between the washer and the metal bracket on the related terminal or use an eyelet terminal crimped on the ground protection cable.
- ❑ The sensor, hard wired inputs and outputs are connected to the converter through terminal blocks located inside the converter.
- ❑ To locate the terminal block loosen the 4 screws on the terminal block cover. When the front cover is lifted, the terminal block is visible. The terminal block is the hard wire connection of the converter to external equipment, including the sensor.



Operation note for mains power supply

- ❑ To start the instrument with mains power it is necessary to connect the USB cable. Condition to be repeated every time the instrument is no longer powered by batteries and mains.
- ❑ The system cannot work with the battery disconnected or completely discharged, even if it is powered by an external power source (network or USB).


The following pages give informations on the terminal block numbering, and the respective connecting of the sensor cables, and inputs/outputs.

ELECTRICAL CONNECTION CONVERTER- SENSOR

Terminal block converter



Sudden movements of the electrodes cable could introduce noise.
Maximum cable length: 20m.

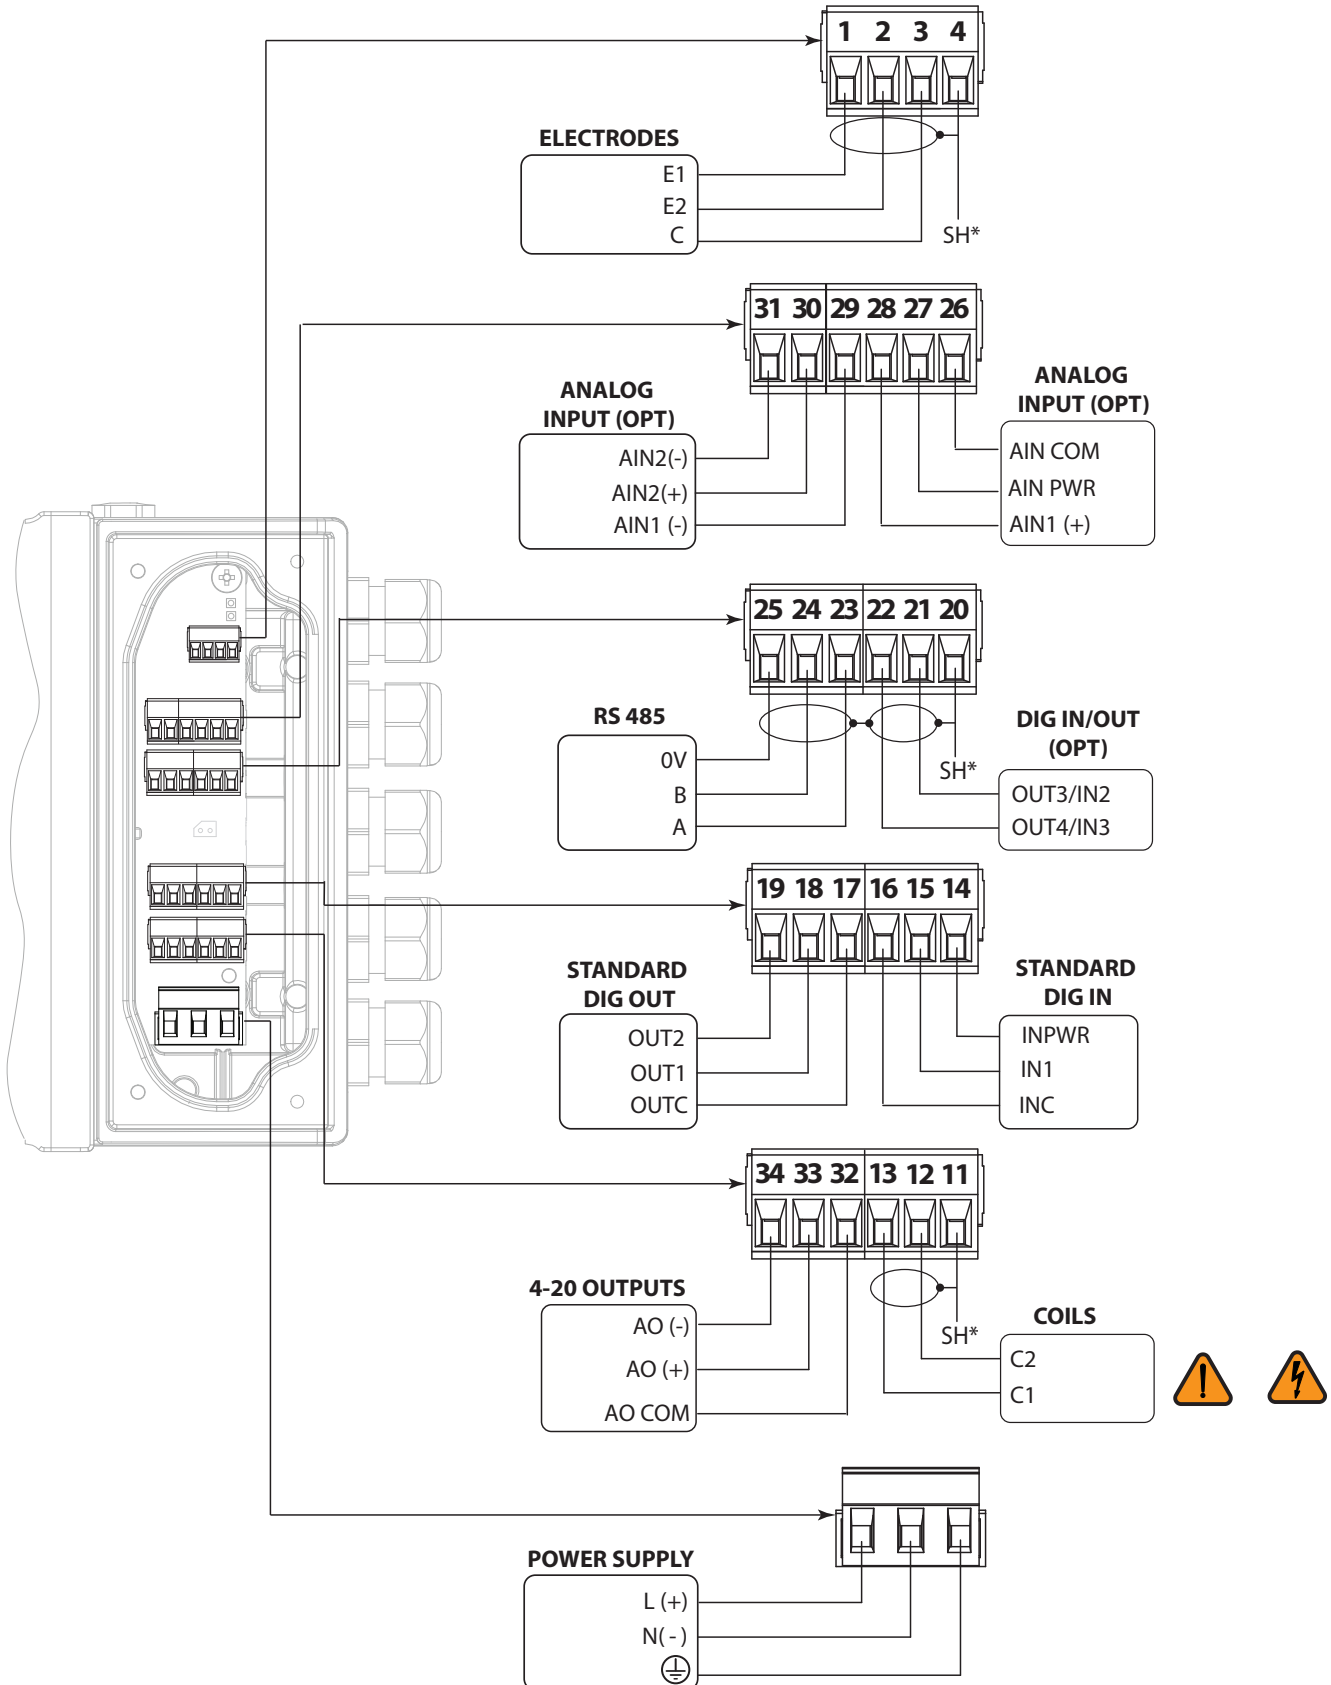

The manufacturer guarantees only English text available on our web site www.isoil.com


INPUT CONNECTIONS

Digital input connections on a base card (INP COM, INP I1, INP V+)


The digital input can be used in two ways as shown below:

- ❑ IN 1: input 1, positive terminal
- ❑ INC: common of all inputs
- ❑ INPWR: isolated voltage generator output for inputs power supply

Internal power supply





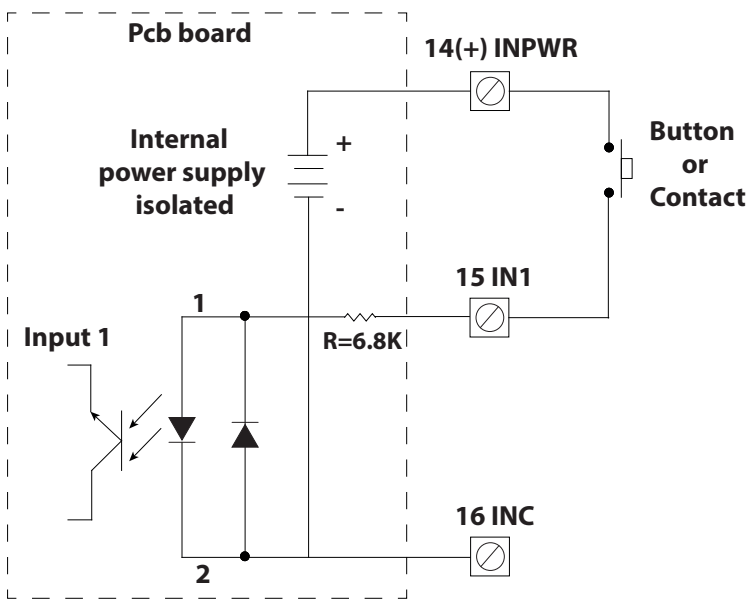


External Power Supply

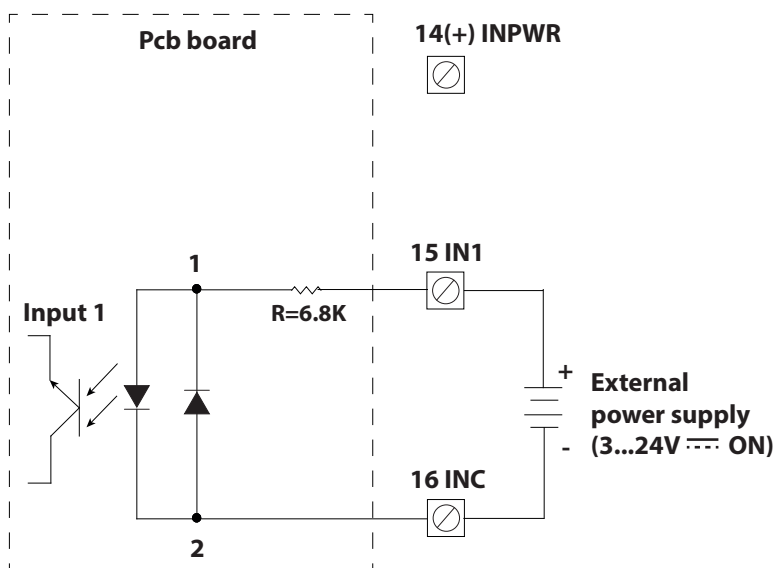

Input on / off mode for operating inputs

The activation times of the Tmin input must be greater than 1 second (inputs subordinated to the smart measurement speed 1/2/5). For electrical connections see POS. ELECTRICAL CONNECTION CONVERTER- SENSOR pag. 25.

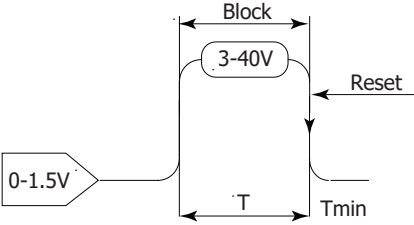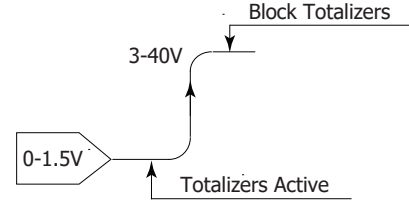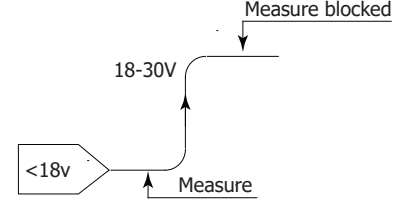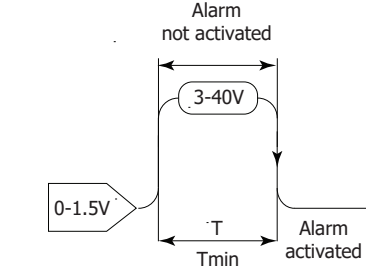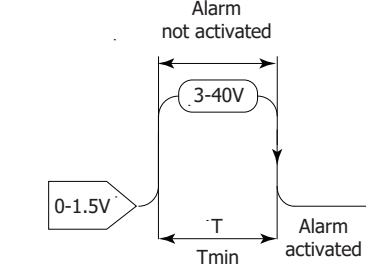SCHEMES	CONDITIONS REQUIRED TO PERFORM THE FUNCTION
	<p>TOTALIZER RESET (Input 1): enable all or only the functions related to the totalizer to be reset.</p> <p>POS. 6.1 pag. 48 POS. 6.2 pag. 48 POS. 6.3 pag. 48 POS. 6.4 pag. 48</p> <p>CALIBRATION (Input 1): T > 0.5 seconds POS. 6.7 pag. 48</p>
	<p>TOTALIZER LOCK (Input 1): enable the function if the counting of the totalizers is to be blocked.</p> <p>POS. 6.5 pag. 48</p>
	<p>MEASUREMENT BLOCK (Input 1): enable the function if desired flow measurement block.</p> <p>POS. 6.6 pag. 48</p>
	<p>SYSTEM VIOLATION (Input 1): enable the function if you want to activate the system violation alarm. This function disables the previous functions: POS. 6.8 pag. 48</p>
	<p>SYSTEM / FLOOD VIOLATION (Input 2 and / or 3 if enabled): enable the function if you want to activate the system violation and / or flood alarm.</p> <p>POS. 6.9 pag. 48 POS. 6.10 pag. 48</p>

The manufacturer guarantees only English text available on our web site www.isoil.com


Analog input connections (AI1+, AI1-, AI2+, AI2-, AI3+, COM)

- ❑ AIN1 +, AIN1-: inputs (+) and (-) for acquisition of analogue channel 1 measurements
- ❑ AIN2 +, AIN 2-: inputs (+) and (-) for acquisition of analogue channel 2 measurements
- ❑ AIN PWR +: output voltage excitation of pressure sensors (+)
- ❑ 26 AIN COM: common terminal for pressure sensors (-), connected to the internal mass of the board

The optional analogue measurement acquisition module is able to perform potential measurements, temperatures (max 2) and pressures (max 2).


The diagrams for the connections to the sensors are shown below:

Pressure sensor connections:

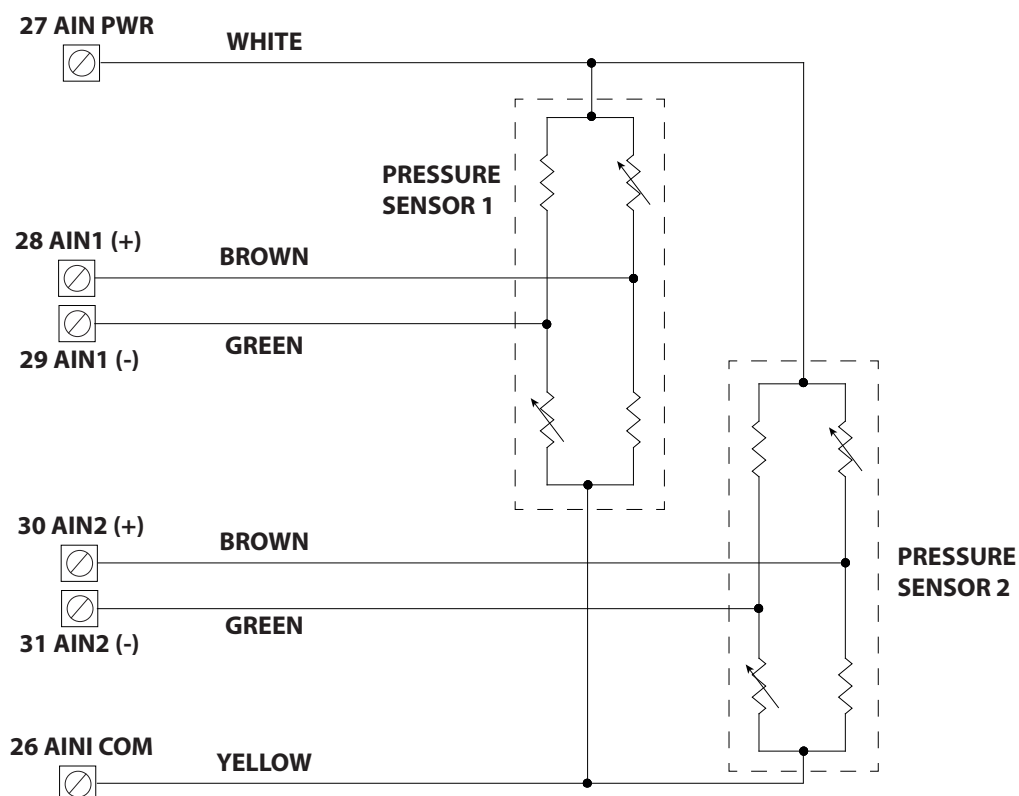

Temperature sensor connections:

Since there is no cable resistance compensation, it is recommended to use PT500 or PT1000 sensors if the cable length is more than one meter. The recognition of the sensor type (PT100 / 500/1000) is automatic.

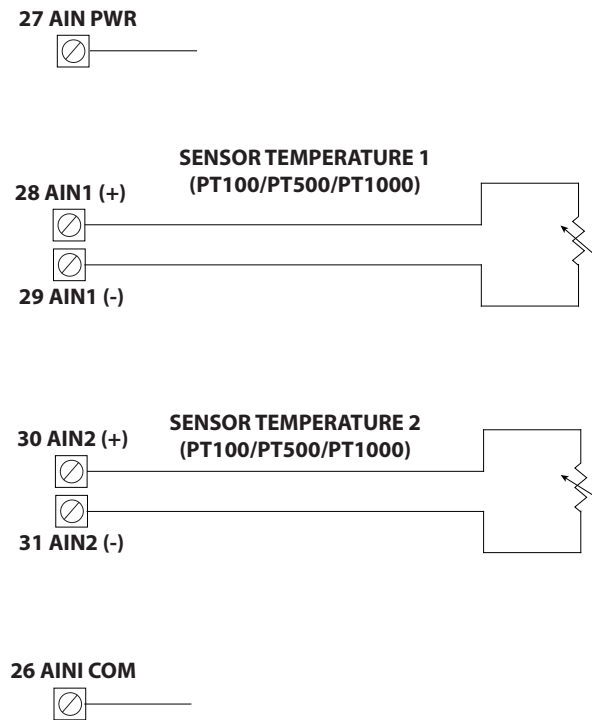


Connection of a pressure/temperature sensor:

Two different types of sensors can be connected, a pressure sensor and a temperature sensor.

For the temperature sensor, because there is no compensation of cable resistance, we recommend the use of PT500 or PT1000 sensors if the cable length is more than one meter. The recognition of the sensor type (PT100 / 500/1000) is automatic.

N.B: the pressure sensor MUST BE connected to input 1 and the temperature sensor MUST BE connected to Input 2!

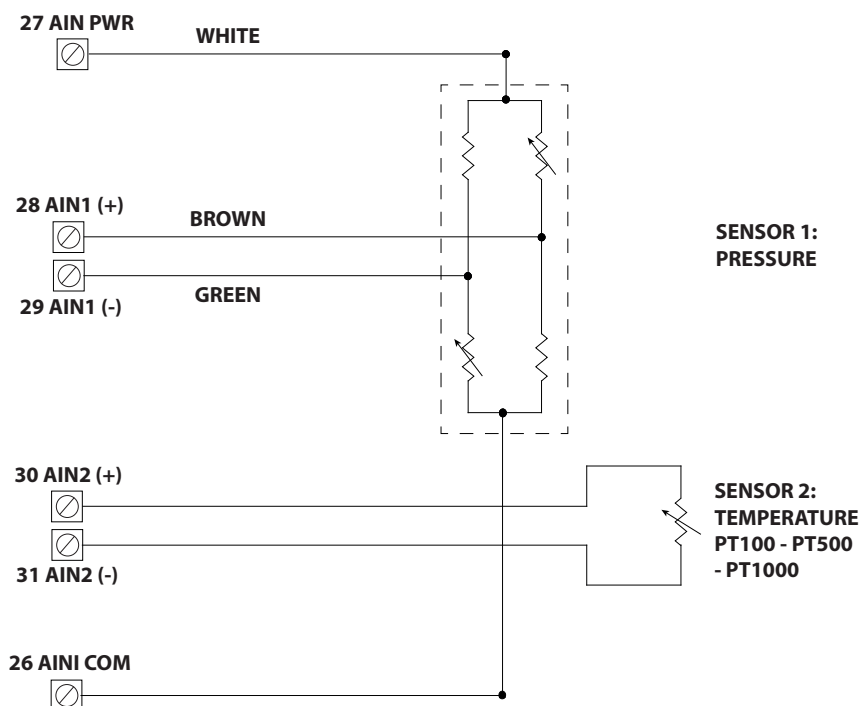


The manufacturer guarantees only English text available on our web site www.isoil.com

OUTPUTS CONNECTIONS

Digital output connections on the basic board (OUT01, OUT02, OUT COM)

The outputs are not polarized, therefore connection schemes can be adopted to positive or to common negative, as reported by the following diagram.

- ❑ OUT 01 = output 1
- ❑ OUT 02 = output 2
- ❑ OUT COM = common outputs

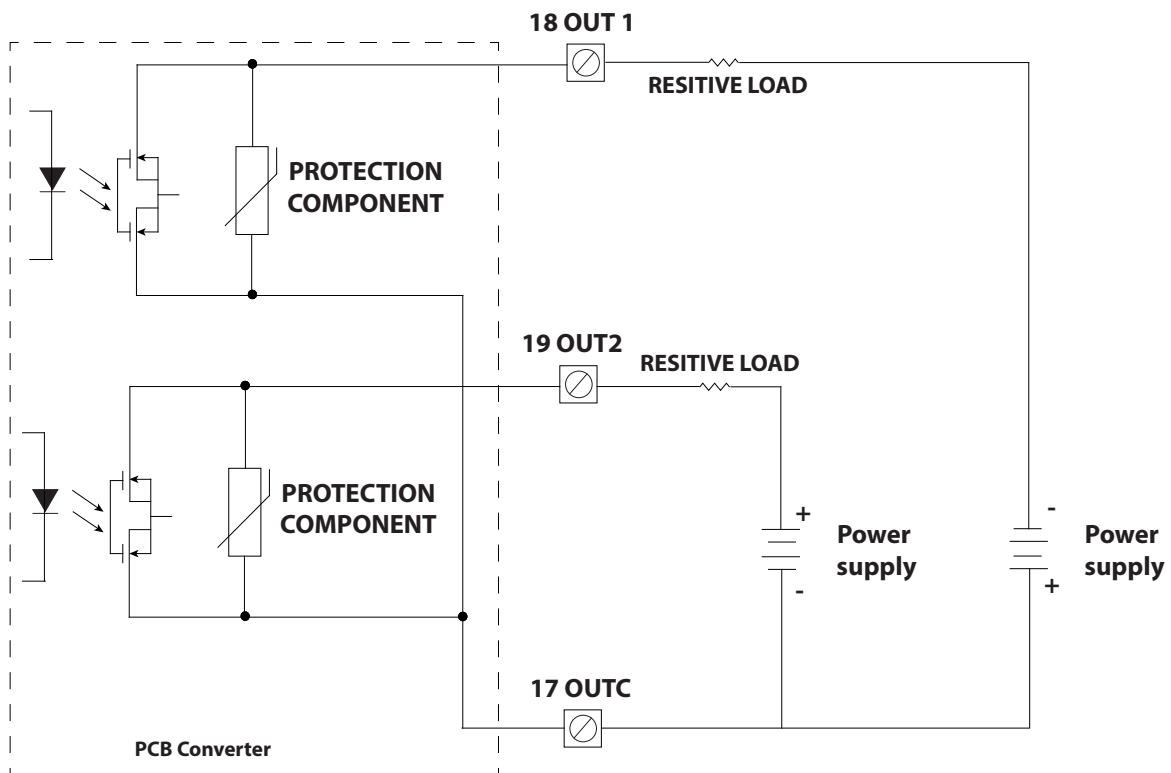

Uscita 4-20mA

The 4-20 mA output can be passive (powered from outside) or active, only when the power supply is installed. There are 3 output terminals available, the passive output uses AO + and AO- (the minimum operating voltage is 5V). When the power supply is present, it is also possible to select the active mode by connecting the load between the AO- and AOCOM terminals. In this case, the loop should not be powered. The passive mode is always available even with the power supply installed, use the AO + and AO- terminals. When the passive mode is used and the loop is powered, the instrument exits sleep mode and remains active for 10 seconds and then returns to sleep mode. This status change can only be repeated after 1 minute. For the connections to the terminal block see also POS. ELECTRICAL CONNECTION CONVERTER- SENSOR pag. 25

- ❑ AO-: OUTPUT current to the connected device (active or passive mode).
- ❑ AO+: INPUT current from the connected device (passive mode, loop supply from external source).
- ❑ AOC: return of the OUTPUT current (active mode).




ATTENTION: the power supply of the loop supplies power only to the 4-20 mA output circuits and not to the whole device, which therefore remains active and consumes the batteries if it is not powered in any other way.

The 4-20mA output can have two operating modes:



PASSIVE MODE: the power is supplied by an external source. Connect the POSITIVE of the external source to the AO + terminal. Connect the LOAD to the AO- terminal.

ACTIVE MODE: the power is supplied by the card power supply (if fitted). Connect the LOAD to the AO- terminal. Connect the RETURN to the AOC terminal.

ACTIVE CONNECTION

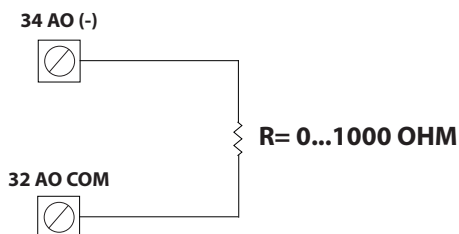

PASSIVE CONNECTION 1-2

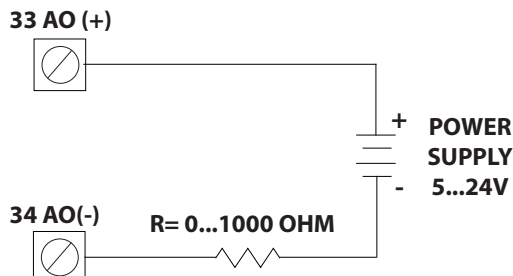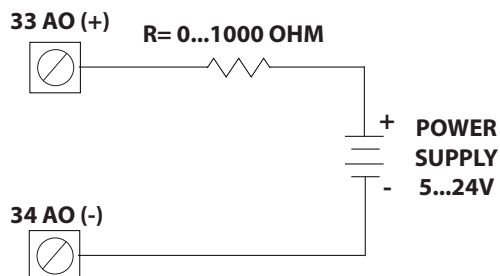


The maximum load value for the PASSIVE connection depends on the supply voltage supplied. The maximum 1000 ohms of load are guaranteed only with supply voltage >= 25V.

The externally supplied power supply of the loop energizes only the 4-20 mA output circuits and not the whole device. When power is applied to the 4-20 mA loop and the device is powered only by the batteries, the latter will exit the low-power mode and remain active for a certain time (about 10 seconds) to allow the reading of the current value on the loop. During this phase the battery consumption is very high. To save energy, there is a current reading time of about 10 seconds every minute. Increasing the number of readings, the minimum time elapsing between one reading and the other is automatically increased by one minute at a time, according to the diagram shown below.

The energy saving algorithm is activated only for intervals of less than or equal to one minute. For longer times it does not activate. For example, by reading the current every two minutes, energy saving is not activated.


Simultaneous connection to digital input / output terminals on expansion module

The outputs and optional inputs on the expansion module share the same common terminals related to the card inputs and outputs. Since the input and output circuits have different common terminals, it is theoretically possible to use the same I / O terminal at the same time to read a signal via digital input and control a device via digital output. See the following diagram to understand how it works. The power supplies in this case must be separated if the possibility of simultaneous use of input and output is to be maintained.

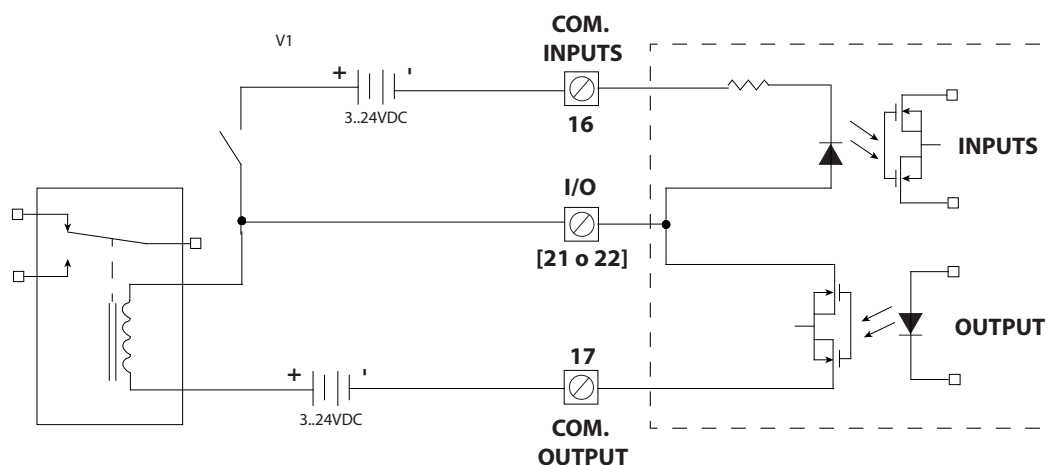

Optional digital inputs / outputs connections (O4,IN3, O3, IN2, GND)


The digital output OUT 4 and the digital input INPUT 2 as the digital output OUT3 and the digital input INPUT 3 share the same terminal but have different municipalities, therefore the input and output circuits can be made independently 'from each other, as shown below for the OUT 3 / INPUT 3 scheme (OUT 4 / INPUT 2 are equivalent).

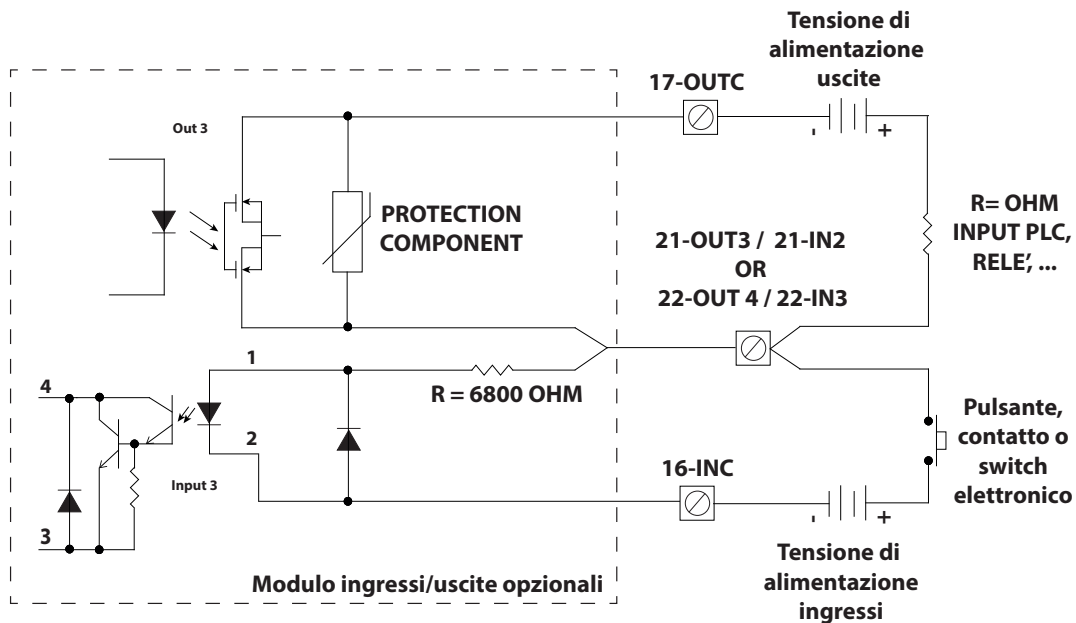

- ❑ O4 IN3: digital output OUT 4 / digital input INPUT 3
- ❑ O3 IN2: digital output OUT 3 / digital input INPUT 2
- ❑ GND: terminal connected to the protective earth (chassis) for connecting cable shields

NOTES: The digital outputs OUT 4 and OUT 3 use the OUTC terminal as common. The digital inputs INPUT 2 and INPUT 3 use the INC terminal as common.


RS485

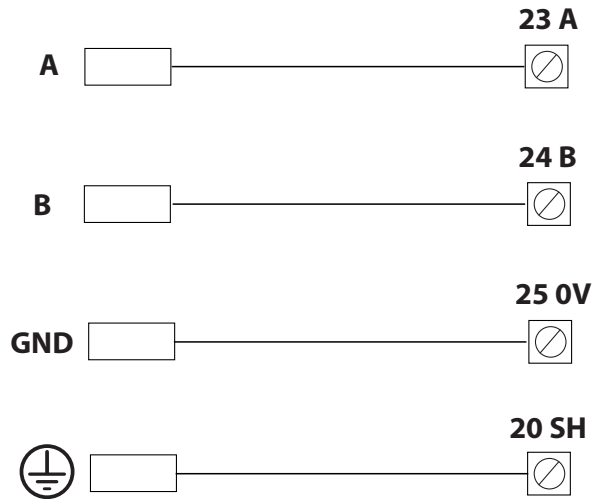

- Response time to MODBUS queries when the device is in SLEEP: 50 ms max (the first telegram is still lost, the next ones are acquired).
- Response time to MODBUS queries when the device is ACTIVE: <20 ms.


MIL CONNECTOR

For details of connections with MIL connectors, refer to the manual:
MV145-255_MIL CONNECTOR POSITION.

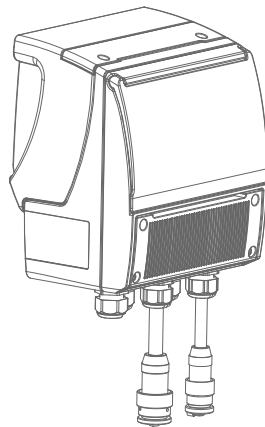


NOTES ON DISPLAY, RS485 PORT AND/OR OUT 4/20 mA

Display

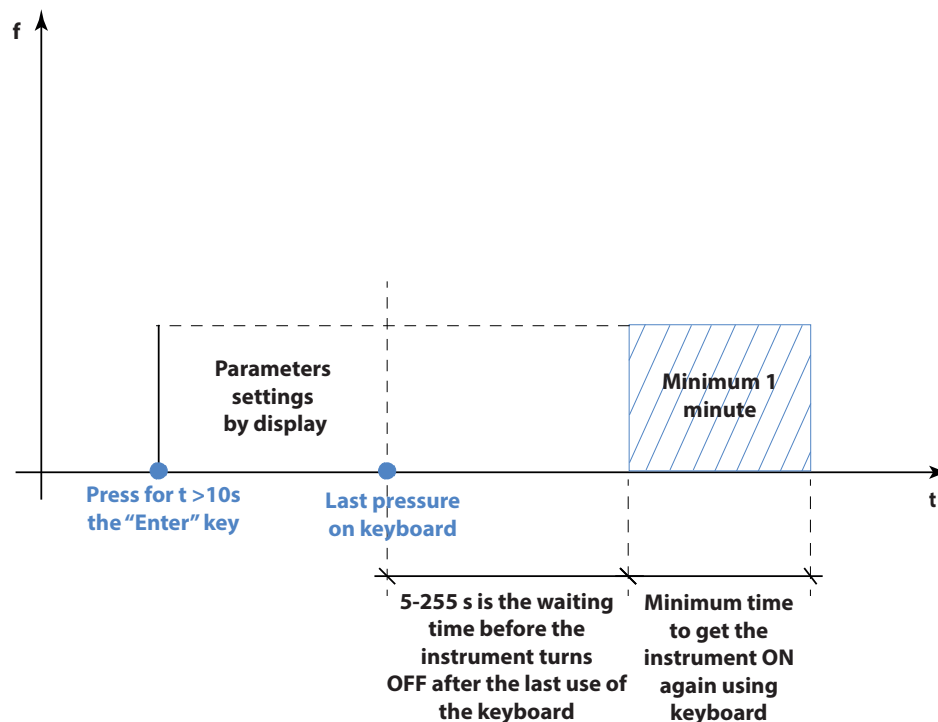

RS485 port and/or out 4/20 mA

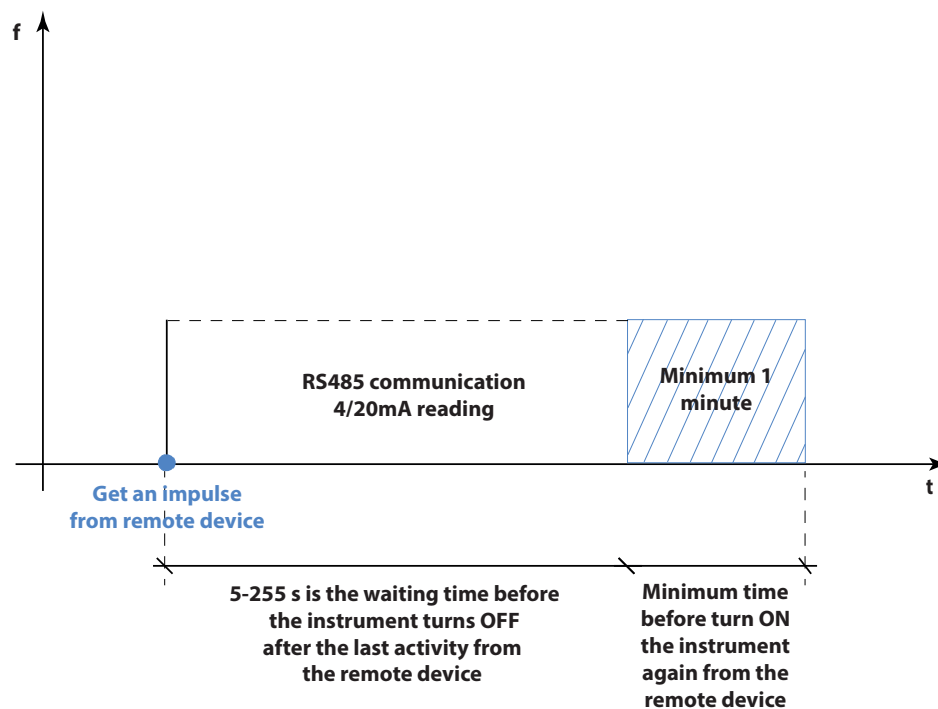

The waiting time is defined by the **"disp time" function on the POS**. 9.2 pag. 49, It's the time needed before the instrument can again respond to the display, RS485 port and / or 4/20 mA out).



ATTENTION! THESE OPTIONS MEAN AN HIGH ENERGY CONSUMPTION


START VISUALIZATION PAGES



Direct exposure of the converter to sunlight may damage the liquid crystal display. The display of the pages can be changed with respect to some enabled or disabled functions.




Press the button to change the display.

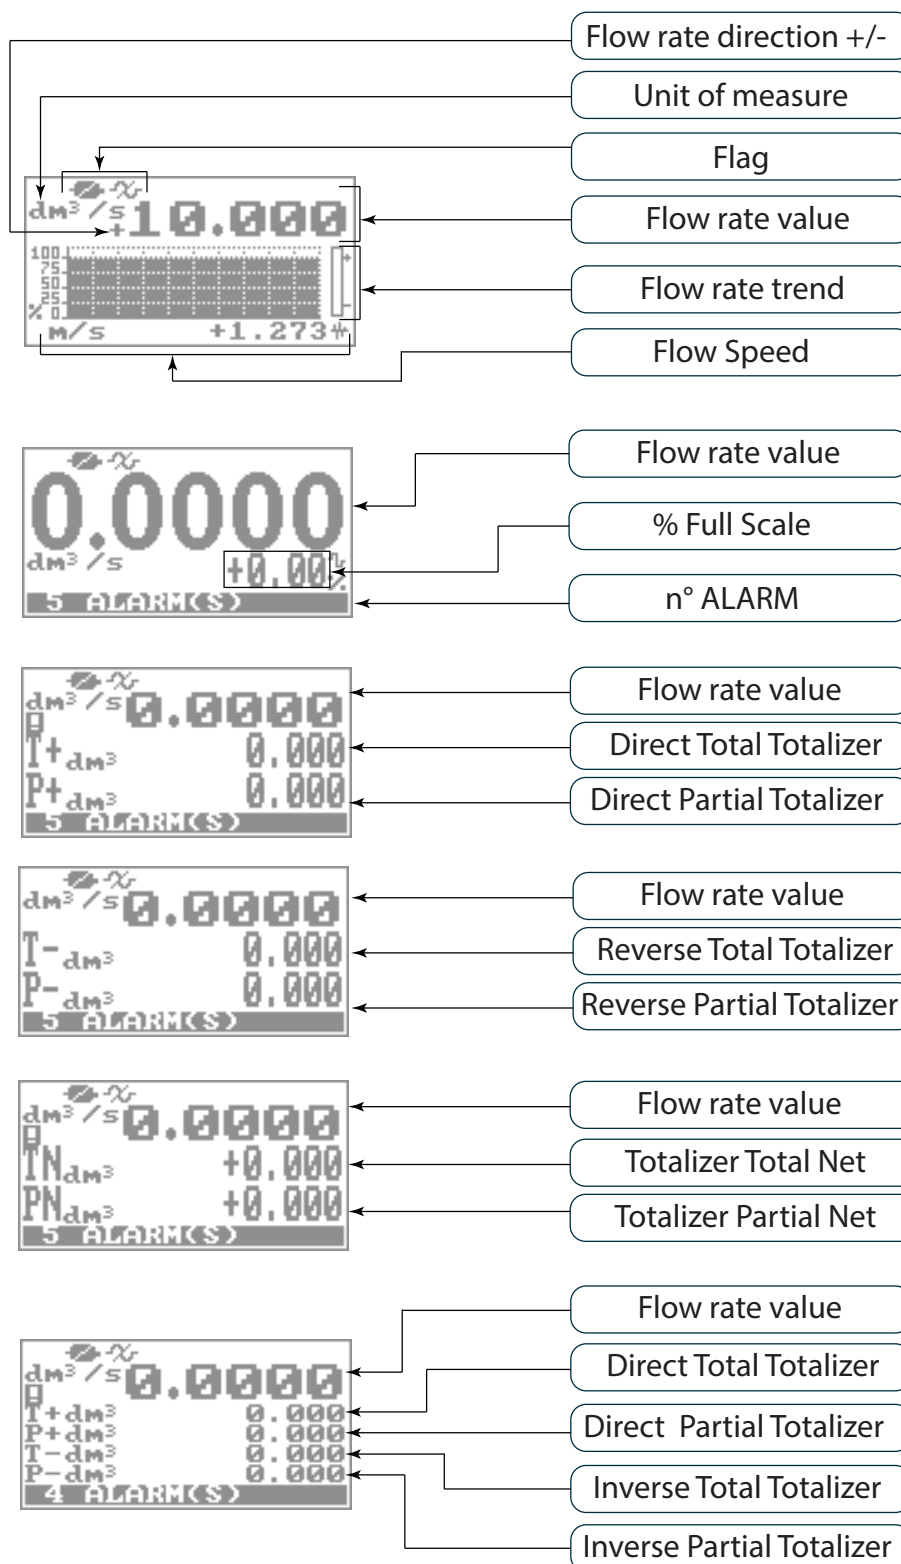

The manufacturer guarantees only English text available on our web site www.isoil.com



Press the button to change the display.

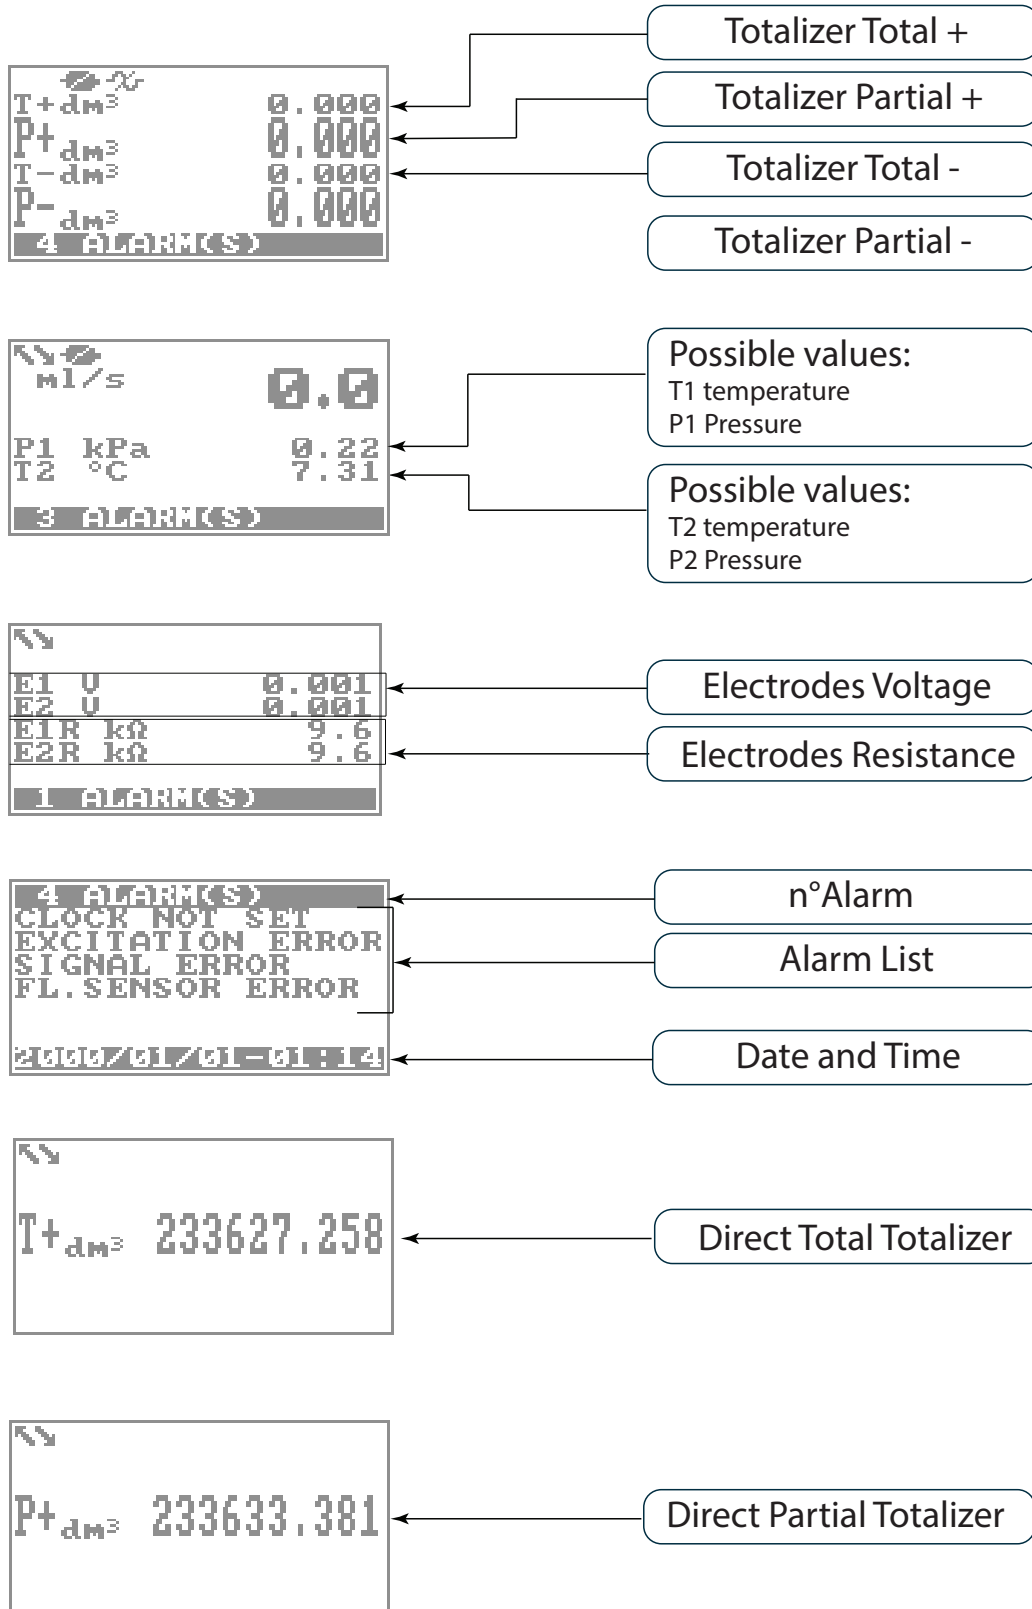

The manufacturer guarantees only English text available on our web site www.isoil.com



Press the button to change the display.

T-dm³ 14617.888

Reverse Total Totalizer

P-dm³ 14617.888

Reverse Partial Totalizer


ACCESS TO THE CONVERTER

Meaning of flags

FLAG	DESCRIPTION	FLAG	DESCRIPTION
	EMPTY PIPE		MIN FLOW ALARM
	FILE UPLOAD		MAX FLOW ALARM
	FILE DOWNLOAD		VIDEO TERMINAL CONNECTED
	BATTERY RECHARGE (FLASHING) LOW BATTERY (FIXED)		FLOW RATE OVERFLOW
	FLOW RATE SIMULATION (FLASHING)		PULSE 1 OVERFLOW
	CALIBRATION (FLASHING)		PULSE 2 OVERFLOW
	GENERIC ALARM (FLASHING)		SIGNAL ERROR
	GENERAL ALARM ONLY ON PHYSICAL DISPLAY (FLASHING)		EXCITATION ERROR

The manufacturer guarantees only English text available on our web site www.isoil.com

LED interpretation

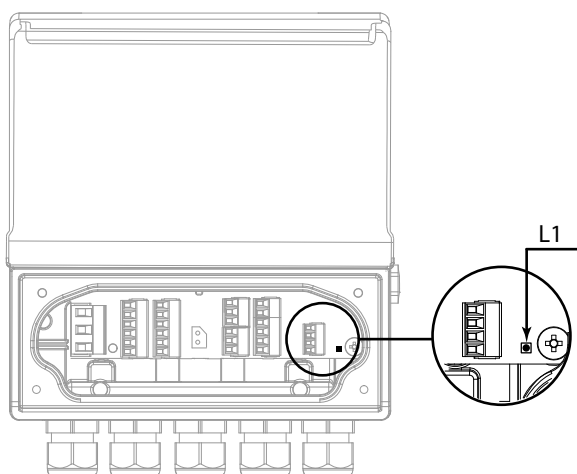

LED 1 CPU measures


- Red LED: Alarm signal
- Blue LED: Communication activated
- Green LED: System working correctly

ACCESS TO THE CONFIGURATION MENU

The configuration can be done in different ways:

- ❑ By MCP interface (Virtual display of instrument)
- ❑ By keypad's converter, with the converter is connected to an external energy source (pc or power bank)
- ❑ By keypad's converter with the function "programming" activated

Access Via Keypad (converter is connected to an external energy source)

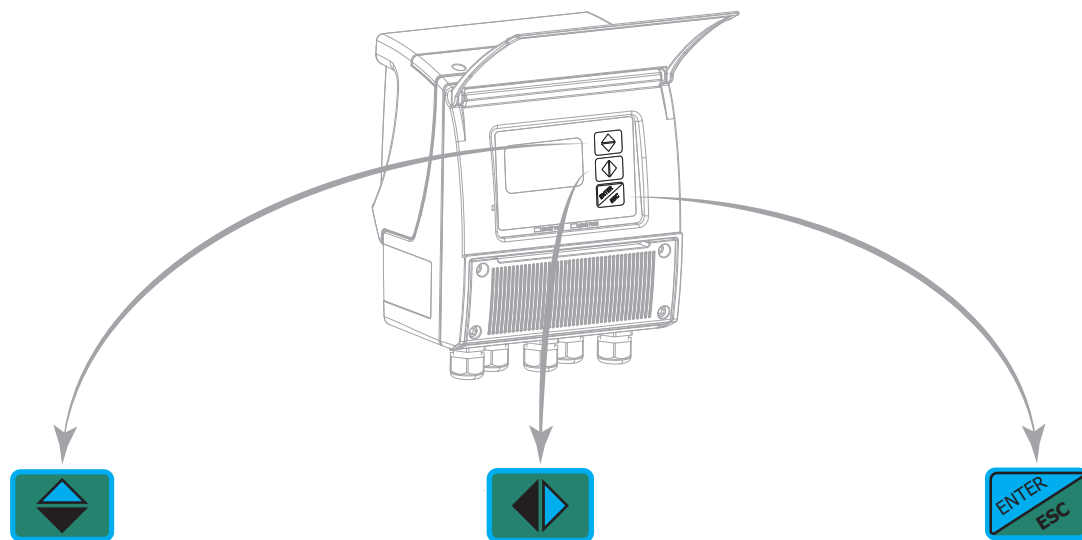

SHORT PRESSING (< 1 SECOND):

Increases the numeric figure or the parameter selected by the cursor returns to the previous subject on the menu

LONG PRESSING (> 1 SECOND):

Decreases the numeric figure or the parameter selected by the cursor. Proceeds to the next subject on the menu.

SHORT PRESSING (< 1 SECOND):

Moves/positions the cursor rightward on the input field. Proceeds to the following subject of the menu. Change the display of the process data

LONG PRESSING (> 1 SECOND):

Moves/positions the cursor leftward on the input field. Returns to the previous subject on the menu

SHORT PRESSING (< 1 SECOND):

Enter /leave the selected function enables the main menu for the instrument configuration Cancels the selected function under progress

LONG PRESSING (> 1 SECOND):

Leaves the current menu Enables the totalizer reset request (when enabled) Confirms the selected function.

The manufacturer guarantees only English text available on our web site www.isoil.com

Access Via Keypad (converter is connected to an external energy source)



ATTENTION! THIS FUNCTION LEADS TO AN HIGH ENERGY CONSUMPTION

To activate this function press the button "Enter" for >10 seconds. When the keypad becomes active, the following sentence will be shown on the display:




for >10 seconds. When the keypad becomes active, the following sentence will be shown on the display:

"Programming active. Attention: high power consumption"


With this option activated it's allowed use the converter as if it is connected to an external power supply.

Access Via Mcp interface (Virtual Display)

MCP is a Windows® software that allows to set all the converter functions and personalize the menu. The MCP program is required for the blind version of the converter. To use MCP interface consult the relevant user manual.

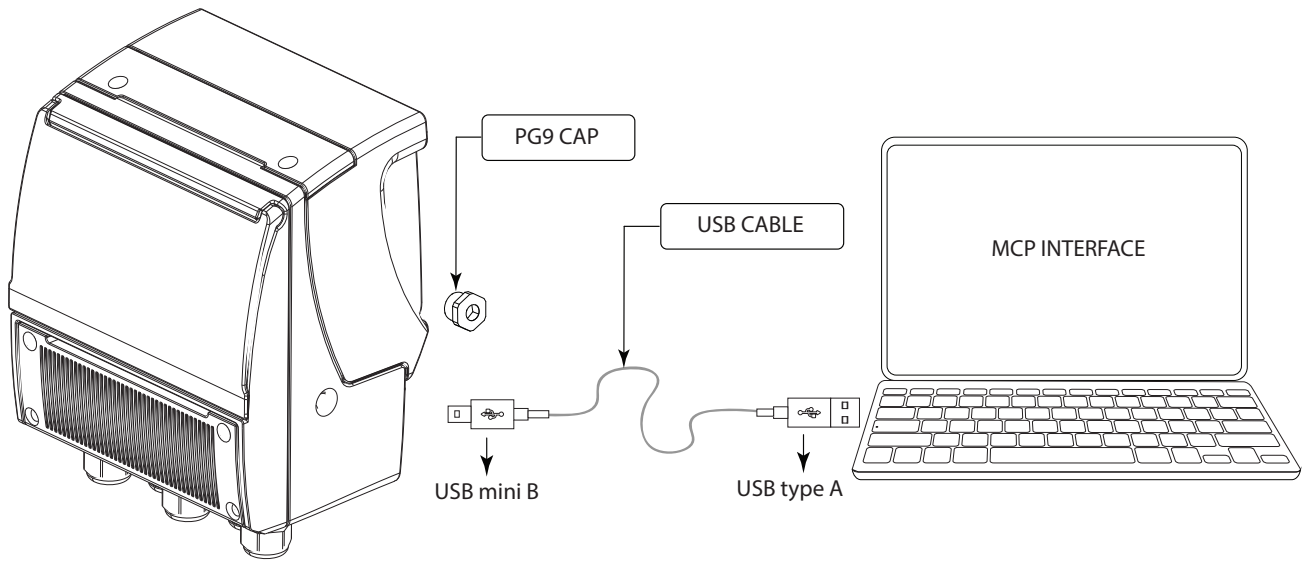

FLOW RATE VISUALIZATION

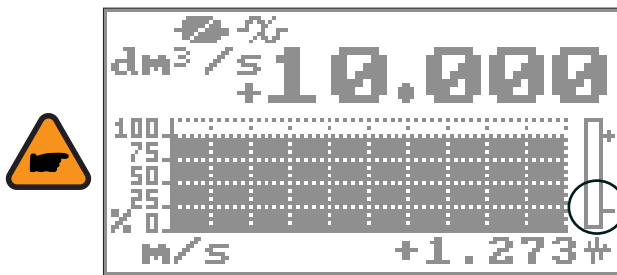

This symbol appears (red color on the virtual display) only when the overall noise is over 2.5% of flow rate.


MV145 allows you to view the flow in 5 digits; this means that the maximum flow displayed on the display is equal to 99999 (regardless of the position of the decimal point). The minimum displayable value is instead limited to the number 0.0025. The unit of measurement that can be represented depends on the capacity / diameter of the sensor: the units allowed are those that, once the instrument's full-scale value is set, can be represented with a numeric field whose maximum value does not exceed 99999.

Example for DN 300:

- ❑ Full scale value: 3m / s
- ❑ Allowed units of measure (examples): l / s (216.00); m3 / h (777.60); m3 / s (0.2160) ...
- ❑ Measurement units NOT allowed (examples): l / h (777600)

Flow rate alert

Symbol that is activated when there is a dynamic variation of the flow measurement. It indicates that the measurement shown in the display is stabilizing.

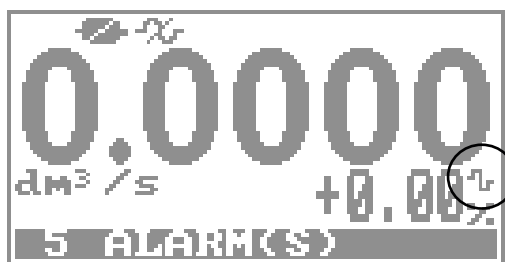

QUICK START MENU

The QUICK START MENU allows the user immediate access to some of the most frequently used functions; through the MCP software it is possible to customize this menu, in order to make it suitable for the specific application.



Access to all converter functions

The number of functions visible in this section is related to the functions chosen for the QS menu.

Pressing the enter button from the display pages, access to the Quick Start menu is immediate. If you press the enter button to access the Main menu directly, the Quick Start may have been disabled by the function POS. 9.9 pag. 49.

CONVERTER ACCESS CODE

Access to instrument programming is regulated by six access levels. All functions are assigned to a specific access code and the functions are then grouped according to a logical criterion INSERT FUNCTION.

Access Code Set : Menu 13 System

The codes can be set from the instrument keyboard or via the MCP interface. Depending on the access level set, the menu functions will be displayed (see POS. MENU 13 - system pag. 82. These access levels interact with the function POS. 13.10 pag. 50 which enables its use.

```

SYSTEM
L1 code=*****
L2 code=*****
L3 code=*****
L4 code=*****
L5 code=*****
L6 code=*****
04▶99999999
    
```

Restricted Access Set : Menu 13 System

Restart access = ON: Access allowed only to functions of a specific level (POS. 13.10 pag. 50).

```

SYSTEM
L1 code=*****
L2 code=*****
L3 code=*****
L4 code=*****
L5 code=*****
L6 code=*****
Restart access=0/1
    
```

THE VALUES THAT CAN BE SET FOR THE FUNCTION. "ACCESS RIST" ARE ON / OFF.

Example: If the operator has an access level code 3, after entering it, it can only modify the functions provided for an access level 3.


Access to restaurants = OFF: After entering the access code of a certain level, it allows you to modify the functions of the selected level and the functions with the lowest access level. Example: If the operator has the level 3 code, after having entered it, he will be able to modify all the functions of level 1,2,3.

* WARNING: take careful note of the customized code, since there is no way for the user to retrieve or reset it if lost. Factory preset access codes:

- L1: 10000000
- L2: 20000000
- L3: 30000000
- L4: 40000000

The following example shows how to change the Full scale by Quick Start menu; the second illustrates how to change the function by the Main menu.


EXAMPLE: modifying the full scale value from 4dm³/s to 5dm³/s, from the “Quick start menu”

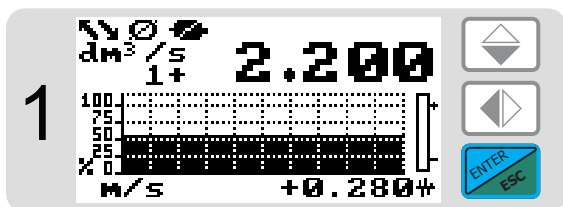


1 Press the ENTER button to access the Quick Start menu




2 Select this function in the list to be edited

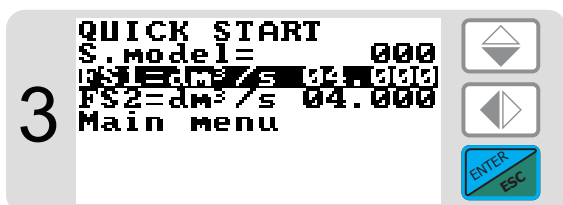


3 Press the ENTER button to select the function.

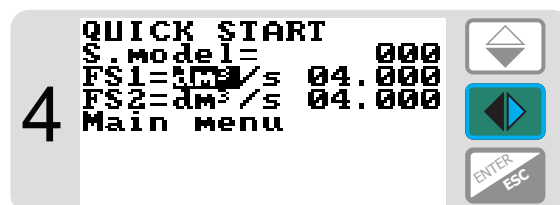


4 Select the value to be changed

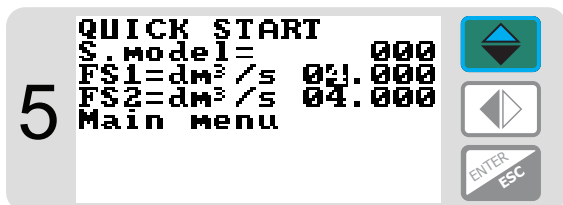


5 Change the value

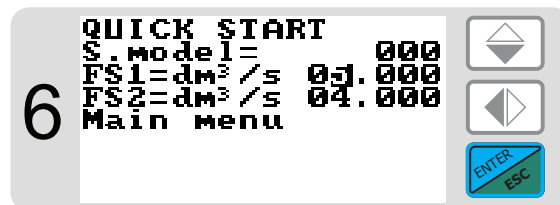

6 Confirm the new value

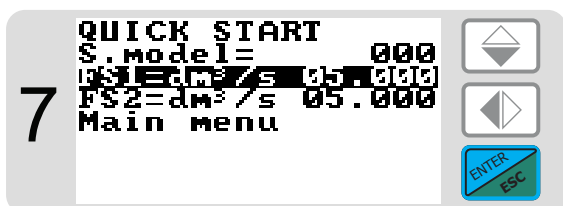


7 Long Push

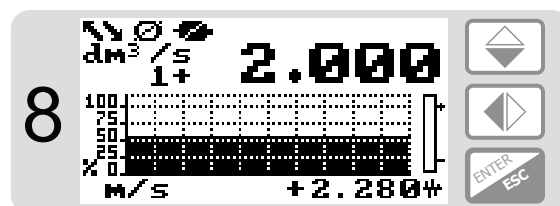


8 Main Page

The manufacturer guarantees only English text available on our web site www.isoil.com


EXAMPLE: modifying the full scale value from 4dm³/s to 5dm³/s, from the “Main Menu” (quick start menu enabled)

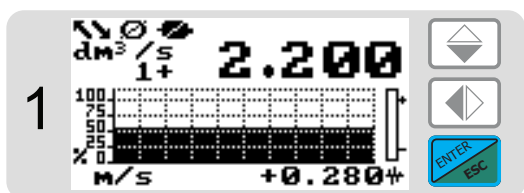

Press the ENTER button to access the Quick Start menu

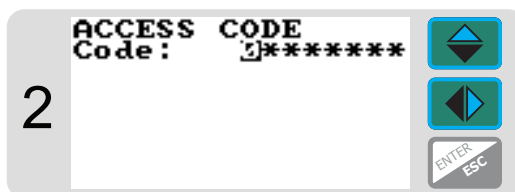

Press arrow keys to select the cell in which to insert the number of the access code.

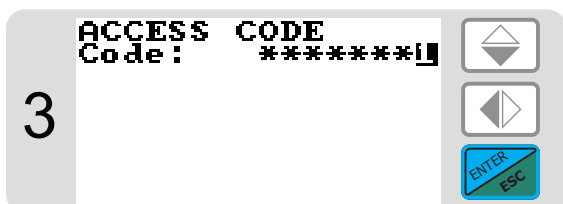


Press ENTER button to confirm value.




Select “Main Menu”




Press the ENTER button to access the Main Menu

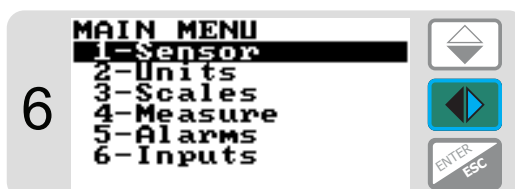


Select function

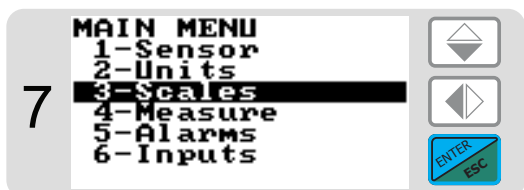


Press the ENTER button to access the “Scale Menu”

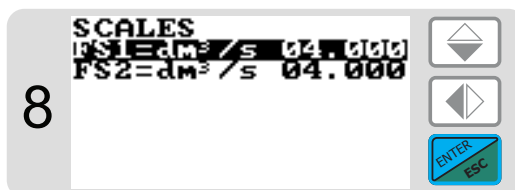


Press the ENTER button to access the “Fs1”

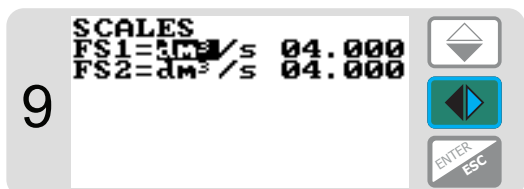


Select the value to be changed

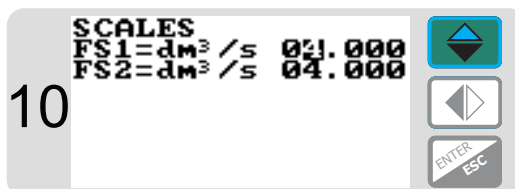


Change the value

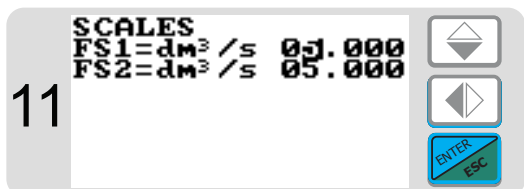


Press the ENTER button Confirm the new value

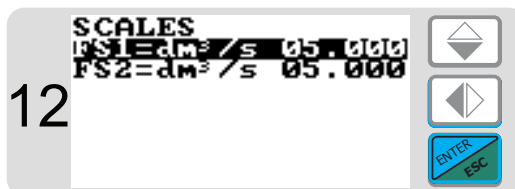

Press Esc

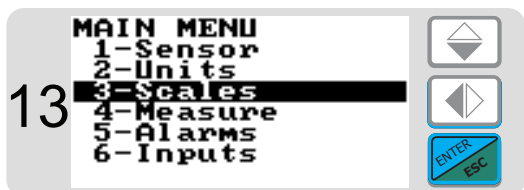

Press Esc

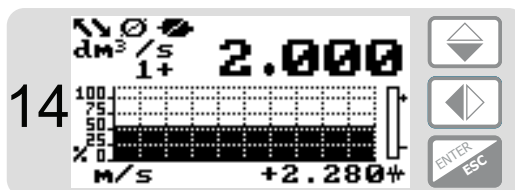

Main page

The manufacturer guarantees only English text available on our web site www.isoil.com

FUNCTIONS MENU

The manufacturer guarantees only English text available on our web site www.isoil.com

SENSOR

MAIN MENU			
1	Sensor		
2	Units		
3	Scales		
4	Sensor		
5	Sensor		
6	Sensor		
7	Sensor		
8	Sensor		
9	Sensor		
10	Sensor		
11	Sensor		
12	Sensor		
13	Sensor		
14	Sensor		
15	Sensor		
16	Sensor		
17	Sensor		
18	Sensor		
19	Sensor		
20	Sensor		
21	Sensor		
22	Sensor		
23	Sensor		
24	Sensor		
25	Sensor		
26	Sensor		
27	Sensor		
28	Sensor		
29	Sensor		
30	Sensor		
31	Sensor		
32	Sensor		
33	Sensor		
34	Sensor		
35	Sensor		
36	Sensor		
37	Sensor		
38	Sensor		
39	Sensor		
40	Sensor		
41	Sensor		
42	Sensor		
43	Sensor		
44	Sensor		
45	Sensor		
46	Sensor		
47	Sensor		
48	Sensor		
49	Sensor		
50	Sensor		
51	Sensor		
52	Sensor		
53	Sensor		
54	Sensor		
55	Sensor		
56	Sensor		
57	Sensor		
58	Sensor		
59	Sensor		
60	Sensor		
61	Sensor		
62	Sensor		
63	Sensor		
64	Sensor		
65	Sensor		
66	Sensor		
67	Sensor		
68	Sensor		
69	Sensor		
70	Sensor		
71	Sensor		
72	Sensor		
73	Sensor		
74	Sensor		
75	Sensor		
76	Sensor		
77	Sensor		
78	Sensor		
79	Sensor		
80	Sensor		
81	Sensor		
82	Sensor		
83	Sensor		
84	Sensor		
85	Sensor		
86	Sensor		
87	Sensor		
88	Sensor		
89	Sensor		
90	Sensor		
91	Sensor		
92	Sensor		
93	Sensor		
94	Sensor		
95	Sensor		
96	Sensor		
97	Sensor		
98	Sensor		
99	Sensor		
100	Sensor		

UNITS

MAIN MENU			
1	Sensor		
2	Units		
3	Scales		
4	Units		
5	Units		
6	Units		
7	Units		
8	Units		
9	Units		
10	Units		
11	Units		
12	Units		
13	Units		
14	Units		
15	Units		
16	Units		
17	Units		
18	Units		
19	Units		
20	Units		
21	Units		
22	Units		
23	Units		
24	Units		
25	Units		
26	Units		
27	Units		
28	Units		
29	Units		
30	Units		
31	Units		
32	Units		
33	Units		
34	Units		
35	Units		
36	Units		
37	Units		
38	Units		
39	Units		
40	Units		
41	Units		
42	Units		
43	Units		
44	Units		
45	Units		
46	Units		
47	Units		
48	Units		
49	Units		
50	Units		
51	Units		
52	Units		
53	Units		
54	Units		
55	Units		
56	Units		
57	Units		
58	Units		
59	Units		
60	Units		
61	Units		
62	Units		
63	Units		
64	Units		
65	Units		
66	Units		
67	Units		
68	Units		
69	Units		
70	Units		
71	Units		
72	Units		
73	Units		
74	Units		
75	Units		
76	Units		
77	Units		
78	Units		
79	Units		
80	Units		
81	Units		
82	Units		
83	Units		
84	Units		
85	Units		
86	Units		
87	Units		
88	Units		
89	Units		
90	Units		
91	Units		
92	Units		
93	Units		
94	Units		
95	Units		
96	Units		
97	Units		
98	Units		
99	Units		
100	Units		

SCALES

MAIN MENU			
1	Sensor		
2	Units		
3	Scales		
4	Measure		
5	Alarms		
6	Inputs		
7	Outputs		
8	Flow		
9	Pressure		
10	Temperature		
11	Humidity		
12	Speed		
13	Position		

SCALES			
1	FS1	dm ³ /s 5.00	3.1 Full scale flow rate 1
2	Pls1	dm ³ 0.15	3.2 Full scale flow rate 2
3	Tpls1	(ms)	3.3 Duration of the pulse generated on channel 1
4	Pls2	dm ³ 0.15	3.4 Pulse value on channel 2
5	Tpls2	15*(ms)	3.5 Duration of the pulse generated on channel 2
6	AIN1	1,107 MCPi	3.6 Analog input scale 1
7	AIN2	1,107 MCPi	3.7 Analog input scale 2

MEASURE

MAIN MENU			
1	Sensor		
2	Units		
3	Scales		
4	Measure		
5	Alarms		
6	Inputs		
7	Outputs		
8	Flow		
9	Pressure		
10	Temperature		
11	Humidity		
12	Speed		
13	Position		

MEASURE			
1	Filt.bypass	ON	4.1 Measure filter bypass
2	Cut-off	00.0(%)	4.2 Measure cut-off threshold
3	Cal.verify	ON	4.3 Automatic calibration verify
4	H.imm.inp.	ON	4.4 High immunity inputs

ALARMS

MAIN MENU			
1	Sensor		
2	Units		
3	Scales		
4	Measure		
5	Alarms		
6	Inputs		
7	Outputs		
8	Flow		
9	Pressure		
10	Temperature		
11	Humidity		
12	Speed		
13	Position		

ALARMS				
1	Max+	dm ³ /s	OFF	5.1 Max.pos.flow r.alarm threshold MAX+
2	Max-	dm ³ /s	OFF	5.2 Max.neg.flow r.alarm threshold MAX-
3	Min+	dm ³ /s	OFF	5.3 Min.pos.flow r.alarm threshold MIN+
4	Min-	dm ³ /s	OFF	5.4 Min.neg.flow r.alarm threshold MIN-
5	Qhyst		XXXXXX	5.5 Hysterisis on f.rate alarm threshold
6	A1Mx		()	5.6 MAX alarm threshold for analog input 1
7	A1Mn		()	5.7 MIN alarm threshold for analog input 1
8	Ai1H	HPa	0.00	5.8 AIN1 MIN alarm threshold
9	A2Mx		()	5.9 MAX alarm threshold for analog input 2
10	A2Mn		()	5.10 MIN alarm threshold for analog input 2
11	Ai2H	HPa	0.00	5.11 Hysterisis on a. in.2 al. thr

The manufacturer guarantees only English text available on our web site www.isoil.com

INPUTS

<pre> MAIN MENU 1-Sensor 2-Units 3-Scales 4-Measure 5-Alarms 6-Inputs 7-Outputs 8-Communication 9-Display 10-Data logger 11-Functions 12-Diagnostic 13-System </pre>		<p>INPUTS</p>		
11-1	T+ reset	OFF	6.1	Total direct (positive) flow totalizer reset enable
11-2	P+ reset	OFF	6.2	Partial direct (positive) flow totalizer reset enable
11-3	T- reset	OFF	6.3	Total reverse (negative) flow totalizer reset enable
	P- reset	OFF	6.4	Partial reverse (negative) flow totalizer reset enable
	Count lock	OFF	6.5	Totalizer counting lock command
	Meas.lock	OFF	6.6	Measure zero lock command
	Calibration	OFF	6.7	Calibration external command
	Sys.v.detect	ON	6.8	System violation detect
	D.In2	SYS.UOL	6.9	Digital input 2 function
	D.In3	OFF	6.10	Digital input 3 function

OUTPUTS

<pre> MAIN MENU 1-Sensor 2-Units 3-Scales 4-Measure 5-Alarms 6-Inputs 7-Outputs 8-Communication 9-Display 10-Data logger 11-Functions 12-Diagnostic 13-System </pre>		<p>OUTPUTS</p>		
	Out1	F.R.SIGN	7.1	Output 1 function selection
	Out1 inv.	ON	7.2	Output 1 inverted status
	Out1 pls.	ON	7.3	Output 1 pulsed status
	Out2	AIN1MH/MN	7.4	Output 2 function selection
	Out2 inv.	ON	7.5	Output 2 inverted status
	Out2 pls.	ON	7.6	Output 2 pulsed status
	Out3	MAX.AL+	7.7	Output 3 function selection
	Out3 inv.	ON	7.8	Output 3 inverted status
	Out3 pls.	ON	7.9	Output 3 pulsed status
	Out4	MAX.AL+	7.10	Output 4 function selection
	Out4 inv.	ON	7.11	Output 4 inverted status
	Out4 pls.	ON	7.12	Output 4 pulsed status
	Out mA1	Apr-20	7.13	Analog current output 1 range
	AIS	dm3/s	7.14	Full scale value for analog out1

COMMUNIC.

<pre> MAIN MENU 1-Sensor 2-Units 3-Scales 4-Measure 5-Alarms 6-Inputs 7-Outputs 8-Communication 9-Display 10-Data logger 11-Functions 12-Diagnostic 13-System </pre>		<p>COMMUNICATIONS</p>		
	Dev. Addr.	1	8.1	Device communication address number
	Speed	bps22800	8.2	MODBUS link speed
	Parity	NO	8.3	MODBUS link parity
	Delay	ms 00	8.4	MODBUS reply delay
	C.timeout	2	8.5	Max.delay between chars (frame)

DISPLAY

DISPLAY			
Language	EN	9.1	Language for all messages
Disp.time	s	9.2	Display/keyboard inactivity time
D.rate		9.3	Display refresh rate
Disp.Fn.	1	9.4	Display function number
Disp.lock	OFF	9.5	Display function selection lock
Part.tot.	ON	9.6	Partial totalizers enable
Neg.tot.	ON	9.7	Negative totalizers enable
Net tot.	ON	9.8	Net totalizers enable
Disp.date	ON	9.9	Time and date display enable
Quick start	OFF	9.10	Quick start menu enable

DATA LOGGER

DATA LOGGER			
D.logger en.	ON	10.1	Data logger enabling
Meas.units	ON	10.2	Measure unit recording enable
Field separ.	;	10.3	Field separator character
Decim.separ.	.	10.4	Decimal separator character
Interv.	0:01:00	10.5	Sampling interval
Log T+	OFF	10.6	Totalizer Total Positive Enable T+
Log P+	OFF	10.7	Totalizer Partial Positive Enable P+
Log T-	OFF	10.8	Totalizer Total Negative Enable T-
Log P-	OFF	10.9	Totalizer Partial Net Enable P-
Log TN	OFF	10.10	Totalizer Total Net Enable
Log PN	OFF	10.11	Totalizer Partial Net Enable
Log Q(UM)	OFF	10.12	Flow rate in Technical Units Enable
Log Q(Z)	OFF	10.13	Flow rate in Percentage Enable
Log AL.EV	OFF	10.14	Alarm Events Enable
Log ADM	OFF	10.15	Additional Measures Enable
Log STR	OFF	10.16	Sensor Test Results Enable
Log BTS	OFF	10.17	Board TemperatureS Enable
Log IBV	OFF	10.18	Internal Board Voltages
Log EDC	OFF	10.19	Electrodes DC Voltages Enable
Log EAC	OFF	10.20	Electrodes AC voltages Enable
Log EIZ	OFF	10.21	Electrodes Source Impedance Enable
Log SCU	OFF	10.22	Sensor Coils Values Enable

FUNCTION

FUNCTION			
T+ reset	ON	11.1	Vector fluid vol. part. reset function
P+ reset	ON	11.2	Hot water vol. partial reset function
T- reset	;	11.3	Cold water vol. partial reset function
P- reset	.	11.4	Aux input partial reset function
Load Sens.F.def	0:01:00	11.5	Heating energy partial reset function
Load Conv.F.def	OFF	11.6	Cooling energy Partial reset function
Save Sens.F.def	OFF	11.7	Vector fluid vol. total reset function
Save Conv.F.def	OFF	11.8	Hot water vol. total reset function
Calibration	OFF	11.9	Cold water vol. total reset function

The manufacturer guarantees only English text available on our web site www.isoil.com

DIAGNOSTIC

DIAGNOSTIC			
Self test			12.1 Auto test Immediate Command
Sens.verify			12.2 Sensor Verify Command
Flow sim.	OFF		12.3 Measure Simulation Enable
Display measures			12.4 Diagnostic Measure ValLues
Disp.comm.vars			12.5 Diagnostic Communication ValLues
SMS test			12.6 Short Message Test
SMTP conn test			12.7 SMTP Connection Test
POP3 conn.test			12.8 POP3 Connection Test
FTP conn.test			12.9 FTP Connection Test
Display graphs			12.10 Oscilloscope function
SD card info			12.11 SD memory Status
Firmware info			12.12 Model and Software Version
S/N		0	12.13 Serial Number
WT		000:00:00:00	12.14 Total Working Time
TC		0	12.15 Total Measure Cycles

SYSTEM			
Dayl.saving	ON		13.1 Daylight Saving Time Enable
Time zone	+00.00		13.2 Time zone
Date/time	///00:00:00		13.3 Date and Time
L1 code	XXXXXXXXXX		13.4 Level 1 Access CoDe
L2 code	XXXXXXXXXX		13.5 Level 2 Access CoDe
L3 code	XXXXXXXXXX		13.6 Level 3 Access CoDe
L4 code	XXXXXXXXXX		13.7 Level 4 Access CoDe
L5 code	XXXXXXXXXX		13.8 Level 5 Access CoDe
L6 code	XXXXXXXXXX		13.9 Level 6 Access CoDe
Restr.access	OFF		13.10 ReStricted Access Rule Enable
Device IP addr	63015504		13.11 Device IP Address
Client IP addr	11.012.012		13.12 Client IP Address
Network mask	255.255.254		13.13 Network MaSk
KT	0.97882		13.14 Coefficient KT
KS	100.000		13.15 Coefficient KS
KR	100.000		13.16 Coefficient KR
DAC1 4mA	2460		13.17 Current output 1 Calibration Point 1
DAC1 20mA	11050		13.18 Current output 1 Calibration Point 2
AIN1 SS	0		13.19 Analog input 1 Calibration Point 1
AIN1 FS	20000		13.20 Analog input 1 Calibration Point 2
AIN2 SS	0		13.21 Analog input 2 Calibration Point 1
AIN2 FS	20000		13.22 Analog input 2 Calibration Point 2
Stand-by			13.23 System StandbY
FW update			13.24 Firmware update

SYSTEM

DIAGNOSTIC			
Display			
Data logger			
Functions			
Diagnostic			
System			

SYSTEM			
Inputs			
Outputs			
Communication			
Display			
Data logger			
Functions			
Diagnostic			
System			


FUNCTIONS DESCRIPTION



Here below the explanation on how the rows of menu are described:

Menu visualized on the converter (from 1 to 13)

MENU 1 - SENSOR

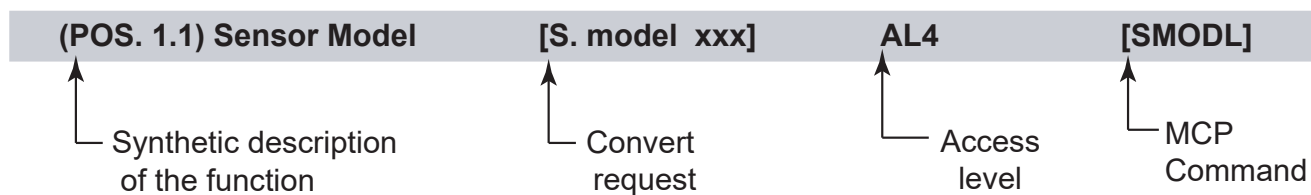

The following picture describes where to find the name of the MCP functions in MCP-software. More info see MCP manual.

Line editor for the insertion and execution of MCP commands.

The manufacturer guarantees only English text available on our web site www.isoil.com

MENU 1 - SENSOR

(POS. 1.1) Sensor MODel	[S.model xxx]	AL4	[SMODL]
Enter the first two characters of the serial number of the sensor as on the sensor label.			
(POS. 1.2) LIning MAterial TYPE	[Lining= Unspec.]	AL4	[LIMAT]
Flow sensor lining material type. (PFA; PU-TDI; ALON; PEEK; HR; PP; PA-11; PTFE-HT; PTFE).			
(POS. 1.3) Sensor TYPE	[S. type= FULL BORE]	AL4	[STYPE]
Select the type of full-bore sensor or insertion. This function appears only if the sensor is not present in the standard sensor table parameters.			
(POS. 1.4) Sensor Units TYPE	[U.type= METRIC]	AL4	[SUTYP]
Select type of measure unit of sensor's parameter. Values metric or imperial (inch).			
(POS. 1.5) Pipe DIaMeter Value	[Diam.= mm xxx]	AL4	[PDIMV]
Select the nominal diameter of the sensor (0-2500). ND is written on the sensor label.			
(POS. 1.6) CoeFFicient KA	[KA= + xx.xxx]	AL4	[CFFKA]
KA factor: calibration coefficient.			
(POS. 1.7) CoeFFicient KA Negative	[KA= - xx.xxx]	AL4	[CFKAN]
KA factor: calibration coefficient for negative flow. This function is showed only if at least 1 negative KL value is set.			
(POS. 1.8) CoeFFicient KZ	[KZ= +/- xxxxx]	AL4	[CFFKZ]
Sensor zero calibration factor.			
(POS. 1.9) CoeFFicient KD	[KD= +/- xxxxx]	AL4	[CFFKD]
Calibration Dynamic Factor.			
(POS. 1.10) Sensor Insertion POSition	[Ins.position= x]	AL4	[SIPOS]
Parameter that refers to the position of the insertion sensor. This function is activated when the function POS. (POS. 1.3) Sensor TYPE pag. 52 is set to "insertion". See the insertion sensor manual for more details.			
(POS. 1.11) Sensor Insertion Dynamic KP	[KP dynamic = ON/OFF]	AL4	[SIDKP]
KP dynamic coefficient. This function is activated when the function POS. (POS. 1.3) Sensor TYPE pag. 52 is set to "insertion". See the insertion sensor manual for more details.			
(POS. 1.12) CoeFFicient KI	[Ki= +/- xx.xxx]	AL4	[CFFKI]
This function is activated when the function POS. 1.3 pag. 46 is set to "insertion". See the insertion sensor manual for more details.			
(POS. 1.13)CoeFFicient KP	[Kp= +/- xxxxx]	AL4	[CFFKP]
This function is activated when the function POS. (POS. 1.3) Sensor TYPE pag. 52 is set to "insertion". See the insertion sensor manual for more details.			

(POS. 1.14) CoeFFicient KC	[KC= +/- xx.xxx]	AL4	[CFFKC]
Calibration Factor. This function is activated if the sensor model is NOT present on the sensors table standard parameters			
(POS. 1.15) Coils EXCitation Current	[C.curr.= mA xxx.x]	AL4	[CEXCC]
Excitation coils current. This function is activated if the sensor model is NOT present on the sensors table standard parameters.			
(POS. 1.16) Current Regulator PRop. Band	[C.Reg.PB=xxx]	AL4	[CRPRB]
Proportional band of coils current regulator. This function is activated if the sensor model is NOT present on the sensors table standard parameters			
(POS.1.17) Coils Regulator DERivative constant	[C.Reg.DK=xxx]	AL4	[CRDER]
Derivative constant of coils current regulator. This function is activated if the sensor model is NOT present on the sensors table standard parameters			
(POS. 1.18) Coils Current Rise TiMe	[C.R.time]	AL4	[CCRTM]
Coils current rise time.			
(POS. 1.19) Empty Pipe Detection ENable	[E.P.Detect= ON]	AL3	[EPDEN]
Enables the empty pipe detection function. This function is useful to keep the meter lock to zero when the pipe become empty.			
(POS. 1.20) Empty Pipe Detection THreshold	[Z max= Kohm xxxx]	AL4	[EPDTH]
Empty tube detection threshold value. This function is activated if the function is enabled POS. 1.19 pag. 46			
(POS. 1.21) Signal Error ALarm Time	[S.err.delay=m xxx]	AL4	[SEALT]
Delay before generating error. This function is useful to prevent unexpected lock to zero of measure caused by sporadic events (empty pipe, excitation error, signal error).			
(POS. 1.22) Automatic Sensor VeriFy Enable	[Sens. verify= OFF]	AL3	[ASVFE]
Enable the Automatic sensor verification (see BIV optional function).			
(POS. 1.23) CoeFFicient KL	[KL=XX +/- XXXXXXXXX]	AL4	[SETKL]
Linearization coefficient for negative flow, reserved to the service. This command is only showed if SMODL = 000.			
(POS. 1.24) SET KJ value	[Zero point cal]	AL4	[SETKJ]
Pipe hydraulic zero calibration. This function appears only when the following process conditions are met:			
<input type="checkbox"/> stable flow value and less than 0.1% of the absolute scale (10 m / s)			
<input type="checkbox"/> at least 10 minutes must have elapsed after the last significant change in flow rate and allows the automatic zero calibration system to be started.			
To do this, the sensor must be completely filled with liquid and perfectly still. Even imperceptible fluid movements can cause significant errors.			

MENU 1 - SENSOR: ONLY MCP FUNCTIONS

Sensor Coils TiMe A	[MCP ONLY]	AL4	[SCTMA]
Reference sensor coil time A			
Sensor Coils Time B	[MCP ONLY]	AL4	[SCTMB]
Reference sensor coil time B			
Sensor Coils RESistance	[MCP ONLY]	AL4	[SCRES]
Reference sensor coil resistance			
Sensor E1 Reference Resistance	[MCP ONLY]	AL4	[SE1RR]
Resistance value of E1 electrodes			
Sensor E2 Reference Resistance	[MCP ONLY]	AL4	[SE2RR]
Resistance value E2 electrodes			
Sensor Coils Temperature ReFERENCE	[MCP ONLY]	AL4	[SCTRF]
Sensor data reference temperature. Temperature measured on the coils of the sensor at the time of saving the instrument reference data for B.I.V. function The temperature value in degrees Celsius, which owns the sensor. Note: the temperature must be estimated on the basis of the place of the sensor installation.			
Automatic Sensor VeriFy Enable	[MCP ONLY]	AL3	[ASVFE]
Enables the BIV functioning (see MCS manual)			
SET KL values	[MCP ONLY]	AL4	[SETKL]
Linearization measure coefficients			
SET TK values	[MCP ONLY]	AL4	[SETTK]
Temperature coefficients			
SET KJ values	[MCP ONLY]	AL4	[SETKJ]
Value of manual zeroing			

MENU 2 - UNITS

WARNING: The totalizer value is updated and changed depending on the setting of unit value. The scale change may cause accuracy loss depending on rounding up. For example, if $T += 0,234$ liters with 3 decimals, it becomes $T += 0.001 \text{ m}^3$ losing 0.234 liters in rounding up.

(POS. 2.1) Sensor DIameter Unit of Measure	[Diam.= mm]	AL2	[SDIUM]
Sensor diameter unit of measure (mm or inch)			
(POS. 2.2) Sensor CAble length Unit of Measure	[S.Cable= m]	AL2	[SCAUM]
Sensor cable length for separate version. Select m or foot.			
(POS. 2.3) Flow Rate Unit of Measure Type	[FR. unit= METRIC]	AL2	[FRMUT]
Flow rate type measure unit. Select metric or not metric (Imperial units)			
(POS. 2.4) PuLse 1 Unit of measure Type	[Pls1 u.= METRIC]	AL2	[PL1UT]
Impulse unit of measure 1: metric or non-metric (English and American units). This works if you function POS. 7.3 pag. 48 is set to the pulse value. Furthermore the value of this function manages the full scale values of the function POS. 3.2 pag. 47			
(POS. 2.5) PuLse 2 Unit of measure Type	[Pls2 u.= METRIC]	AL2	[PL2UT]
Pulse unit of measure 2: metric or non-metric (English and American units). This works if you function POS. 7.6 pag. 48 is set to the pulse value. Furthermore the value of this function manages the full scale values of the function POS. 3.4 pag. 47.			
(POS. 2.6) Totalizer Total Positive Unit of measure Type	[T+ unit= METRIC]	AL2	[TTPUT]
This function sets the type of unit of measurement of the totalizer: metric or non-metric (English and American units).			
(POS. 2.7) Totalizer Total Positive Unit of Measure	[T+unit= dm³]	AL2	[TTPUM]
This function sets the unit of measurement for the total direct totalizer. The choice of its values depends on the choice of the unit of measurement of the function POS. 2.6 pag. 46.			
(POS. 2.8) Totalizer Total Positive Decimal Point position	[T+ D.P.= x]	AL2	[TTPDP]
Setting total direct totalizer decimal point position. Example: T+D.P.= 3 visualized value T+dm ³ 0.000 / T+D.P.= 2 visualized value T+dm ³ 0.00			
(POS. 2.9) Totalizer Partial Positive Unit of measure Type	[P+ unit= METRIC]	AL2	[TPPUT]
This function sets the type of unit of measurement of the partial totalizer: metric or non-metric (English and American units).			
(POS. 2.10) Totalizer Partial Positive Unit of Measure	[P+ unit= dm³]	AL2	[TPPUM]
This function sets the unit of measurement for the total total totalizer. The choice of its values depends on the choice of the unit of measurement of the function POS. 2.9 pag. 46			

(POS. 2.11) Totalizer Partial Positive Decimal Point position [N.d.P+= x] AL2 [TPPDP]

Setting partial direct totalizer decimal point position. Example: P+D.P.= 3 visualized value P+dm³ 0.000 / P+D.P.= 2 visualized value P+dm³ 0.00

(POS. 2.12) Totalizer Total Negative Unit of measure Type [T- unit= METRIC] AL2 [TTNUT]

This function sets the type of unit of measurement of the total inverse totalizer: metric or non-metric (English and American units).

(POS. 2.13) Totalizer Total Negative Unit of Measure [T- unit= dm³] AL2 [TTNUM]

This function sets the unit of measurement for the total inverse totalizer. The choice of its values depends on the choice of the unit of measurement of the function POS. 2.12 pag. 46.

(POS. 2.14) Totalizer Total Negative Decimal Point position [T- D.P.= x] AL2 [TTNDP]

Setting total reverse totalizer decimal point position. Example: T- D.P.= 3 visualized value T- dm³ 0.000; T- D.P.= 2 visualized value T- dm³ 0.00.

(POS. 2.15) Totalizer Partial Negative Unit of measure Type [P- unit= METRIC] AL2 [TPNUT]

This function sets the type of unit of measurement of the inverse partial totalizer: metric or non-metric (English and American units).

(POS. 2.16) Totalizer Partial Negative Unit of Measure [P- unit= dm³] AL2 [TPNUM]

This function sets the unit of measurement for the inverse partial totalizer. The choice of its values depends on the choice of the unit of measurement of the function POS. 2.15 pag. 46

(POS. 2.17) Totalizer Partial Negative Decimal Point position [P- D.P.= x] AL2 [TPNDP]

Setting partial reverse totalizer decimal point position. Example: P- D.P.= 3 visualized value P-dm³ 0.000; P- D.P.= 2 visualized value P-dm³ 0.00.

(POS. 2.18) TeMPerature Unit of Measure [Temp. unit= C°] AL2 [TMPUT]

Setting temperature measure unit.

(POS. 2.19) MaSS Units Enable [Mass units= ON/OFF] AL2 [MSSUE]

Enable or Disable the selection of mass unit of full scale set.

(POS. 2.20) Volume to Mass Specific Gravity Coefficient [Sg= Kg/dm³ x.xxxx] AL2 [VMSGC]

Specific weight setting. This function is activated when the function is enabled POS. 2.19 pag. 46.

(POS. 2.21) ANalog Input 1 measure Unit [AIN1 m.u.] AL2 [AIN1U]

Analog Input 1 measure Unit

(POS. 2.22) ANalog Input 2 measure Unit [AIN2 m.u.] AL2 [AIN2U]

Analog Input 2 measure Unit

MENU 3 SCALE

(POS. 3.1) Flow Rate Full Scale 1

[FS1= l/s xxxx.x]

AL4

[FRFS1]

The full scale is used to indicate the maximum flow rate of the meter. The scale must be chosen carefully, since its value is used for many other parameters. There are three input fields for this parameter, from left to right:

1) unit of measure 2) unit of time 3) numerical value

The selection is done by positioning the cursor over the field to be modified. To change the type of measurement (metric, British or American, mass or volume) see functions POS. 2.3 pag. 46, POS. 2.20 pag. 46.

The value of Fs1-2 also depends on the value of the nominal diameter set by the function POS. 2.10 pag. 46 .The following tables shown the units of measure available and the conversion factor by comparison with 1dm³ and 1kg. The converter accepts any kind of combination of units of measure satisfying both the following conditions:

- Numeric field value 99999
- $1/25 \text{ fsmax} \leq \text{numeric field value} \leq \text{fsmax}$.

Where fsmax is the maximum full scale value corresponding to the sensor, equal to a 10m/s liquid speed. The measure units are shown as appear on the display. The Imperial units units are diversified by using capital and small characters.

METRIC	
cm³	Cubic centimeter
ml	Milliliter
l	Liter
dm³	Cubic decimeter
dal	Decaliter
hl	Hectoliter
m³	Cubic meter
ML	Mega Liter

NON METRIC	
in³	Cubic inch
Gal	American gallon
GAL	Imperial gallon
ft³	Cubic foot
bbI	Standard barrel
BBL	Oil barrel
yd³	Cubic yard
kgI	KAmerican Gallon
KGL	K British Gallon
IGL	Imperial Gallon
IKG	Imperial K Gallon
IGL	Acre foot
MGL	Mega Gallon
IMG	Imperial Mega Gallon

MASS UNIT NOT METRIC	
Oz	Ounce
Lb	Pound
Ton	Short tons

MASS UNIT METRIC	
g	Gram
Kg	Kilogram
t	Ton

When a measure mass unit is set, the specific gravity function is automatically enabled by the system. Please, note that the mass measure is heavily affected by the temperature. With certain liquids this may cause significant measurement errors. The following measure of time units can be selected: s = second, m = minute, h = hour, d = day .

NOTES FOR USING THE MCP INTERFACE

The command FRFS1 =? and command FRS2 = ?, edited by MCP software, return a list of only the unit compatible with the nominal diameter set. If the sensor is insertion type and the diameter is zero, the only possible unit is m/s if the flow rate were chosen metric units, else f/s for the unit of measurement non metric.

(POS.3.2-3.4) OutPut 1-2 Pulse Value	[Pls1-Pls2= dm³ x.xxxxx]	AL2	[OP1PV-OP2PV]
---	--	------------	----------------------

Vps1 and Vps2 is activated when the pulse values on channel 1 and 2 are set by the following functions POS. 7.1 pag. 48; POS. 7.4 pag. 48

This function allows the user to reset the generation of a pulse when a defined amount of liquid has passed through the sensor.

To set the parameter, complete the 2 fields, from left to right: 1) unit of measurement 2) numerical value and the selection is made by positioning the cursor in the field to be modified. To change the type of unit (metric, British or American, mass or volume) see the function POS. 2.4 pag. 46; POS. 2.5 pag. 46. The value Vps1 and Vps2 depends on the nominal diameter that can be set by the function POS. 1.5 pag. 46 and the available units of measurement are those that can be set and described in the function POS. 3.1 pag. 47.

(POS.3.3-3.5) Output1-2 Pulse Time	[Tpls1-2= ms x.xxxxx]	AL2	[OP1PT-OP2PT]
---	------------------------------	------------	----------------------

Output 1 and output 2 pulse duration. Tmps1 and Tmps2 is activated when the pulse values on channel 1 and 2 are set by the following functions POS. 7.1 pag. 48 and POS. 7.4 pag. 48. The user must set the corresponding duration of the pulse to be outputed. This value is expressed in milliseconds and has to be between 5 and 200 ms. When the high frequency output is present, then the minimum value can type of device is connected to the converter, the user must verify that the set pulse duration is compatible with the external device processing such pulses. If, for example, and electromechanical pulse counter is connected, a minimum pulse time of 5 milliseconds can be set.

ATTENTION: The converter can not detect problems that may occur; firstly, the pulse is too long the coils may burn out, secondly, if the pulse is too short, the counter may not be able to function, causing damage of the output.

(POS.3.3) Analog INput 1 Scale	[AIN1]	AL6	[AIN1S]
---------------------------------------	---------------	------------	----------------

Analog input 1 sensor's scale

(POS.3.3) Analog INput 2 Scale	[AIN2]	AL6	[AIN2S]
---------------------------------------	---------------	------------	----------------

Analog input 2 sensor's scale .

MENU 4: MEASURE

(POS. 4.1) Measure Filter BYPass	[Filt.bypass= ON/OFF]	AL3	[MFBYP]
---	------------------------------	------------	----------------

This function modifies the standard behaviour of the filtering system. It can take the following values:

- "OFF"**: SMART adaptive filtering mode, with continuous measure evaluation analysis (default mode, standard use)
- "1"**: When the absolute value of the flow rate is greater than a minimum threshold (0.1 - 0.25% of 10 m/s f.s) the measure value is given without any filtering action. It permits to have the fastest possible response from the meter. Bypassing the filter implies that the obtained measure is more noisy than usual. This function may be useful for systems that needs to react to flow rate changes with the maximum speed and they don't care about unstable flow rate readings. Selecting an appropriate volume unit for pulses and totalizers (as big as possible) can minimize or even null the noise in long term evaluation.
- "2"**: The measure value is always filtered with the longest delay and strongest filtering action. It can be used when the level of native noise or instability on the measure is really high, preventing any smart filtering action. In this case the system will be really slow to react to flow step changes, but still capable of accurate readings.

(POS. 4.2) Meas. Filter Cut-off Thres.	[Cut-off=XX.X%]	AL3	[MFCUT]
---	------------------------	------------	----------------

Setting the low flow cutoff threshold. This function is useful to avoid that flows close to zero, due to the electrical noises from tiny movements of liquid (due for example to vibrations of the pipe) which cause an increasing of the totalizers. The allowed range for this function is 0-25% of full scale set. For most applications a value between 0.5 and 1% is recommended.

(POS. 4.3) Auto CALibration Verify Enable	[Cal.verify=ON/OFF]	AL3	[ACAVE]
--	----------------------------	------------	----------------

This function enables an automatic verification of board's coefficients. As the converter performs continuously a large number of tests, we recommend to use this function only in presence of wide range of temperature. Instead it is NOT recommended to use it when the instrument is used in metering applications (batch).

(POS. 4.4) High Immunity INputs	[H.imm.inp.]	AL4	[HIINP]
--	---------------------	------------	----------------

The HIINP function (INPut High Immunity filter) introduces a hardware filter to be used ONLY IN CASE OF ABSOLUTE NECESSITY, when the measure is absolutely unstable or it is NOT possible to make the measure, and every possible attempt to reduce or eliminate the noise do not give a positive result, with particular attention of instrument ground connection. When this function is activated (HIINP = ON) the measure will be influenced by an unavoidable error estimated around 1%..

MENU 4 - MEASURE: ONLY MCP FUNCTIONS

Low Power cycle SIMulation	[MCP ONLY]	AL6	[LPSIM]
-----------------------------------	-------------------	------------	----------------

"Low power cycle simulation" can be used to make the flow meter measuring in the same way it does when it is going on battery even when it is powered by USB or power supply.

Measure Filter Cut-off Threshold 2	[MCP ONLY]	AL6	[MFCT2]
---	-------------------	------------	----------------

Setting the low flow cutoff threshold, it is similar to the function in 4.2. The value of this function is NOT visible on display but only with MCP command.

PRessure CUT-off Threshold	[MCP ONLY]	AL3	[PRCUT]
-----------------------------------	-------------------	------------	----------------

Pressure cut-off threshold

DYNamic Sample Analysis	[MCP ONLY]	AL6	[DYNSA]
--------------------------------	-------------------	------------	----------------

Reserved to the service

DYNamic Sample Time	[MCP ONLY]	AL6	[DYNST]
----------------------------	-------------------	------------	----------------

Reserved to the service

DYNamic Range Threshold	[MCP ONLY]	AL6	[DYNRT]
--------------------------------	-------------------	------------	----------------

Reserved to the service

Measure Sampling TiMe	[MCP ONLY]	AL4	[MSTME]
------------------------------	-------------------	------------	----------------

This function allows to program the sampling interval within these values:
 0:'01(s)'|1:'02(s)'|2:'03(s)'|3:'04(s)'|4:'05(s)'|5:'06(s)'|6:'10(s)'|7:'12(s)'|8:'15(s)'
 default value=8:'15(s)'

The manufacturer guarantees only English text available on our web site www.isoil.com

MENU 5 ALARMS

(POS. 5.1) Flow Rate Alarm maX Positive [Max+=XXX.XX] AL3 [FRAXP]

Maximum value of the alarm set for direct flow. When the flow rate value exceeds this threshold, an alarm message is generated. The value of this parameter is expressed as a percentage of the full scale value and can be set from 0 to 125%. Setting this parameter to zero corresponds to disabling the start of the alarm.

(POS. 5.2) Flow Rate Alarm maX Neg. [Max-=XXX.XX] AL3 [FRAXN]

Maximum value of the alarm set for reverse flow. When the flow rate value exceeds this threshold, an alarm message is generated. The value of this parameter is expressed as a percentage of the full scale value and can be set from 0 to 125%. Setting this parameter to zero corresponds to disabling the start of the alarm.

(POS. 5.3) Flow Rate Alarm miN Positive [Min+=XXX.XX] AL3 [FRANP]

Minimum alarm value set for direct flow. When the flow rate value exceeds this threshold, an alarm message is generated. The value of this parameter is expressed as a percentage of the full scale value and can be set from 0 to 125%. Setting this parameter to zero corresponds to disabling the start of the alarm.

(POS. 5.4) Flow Rate Alarm miN Negative [Min-=XXX.XX] AL3 [FRANN]

Minimum alarm value set for reverse flow. When the flow rate value exceeds this threshold, an alarm message is generated. The value of this parameter is expressed as a percentage of the full scale value and can be set from 0 to 125%. Setting this parameter to zero corresponds to disabling the start of the alarm.

(POS. 5.5) Alarm Thresholds HYSteresis [Qhys=% XX] AL3 [ATHYS]

Hysteresis threshold set for minimum and maximum flow rate alarms. The value of this parameter is expressed as a percentage of the full scale value and can be set from 0 to 25%.

GENERAL NOTE FOR ALARM THRESHOLDS (POS 5.5-5.6-5.7-5.8-5.9)

To set the alarm threshold the system calculates a% value using the data entered as an alarm value and as reference the full scale of the corresponding analog channel. The calculation is carried out using only whole numbers and if the calculated% value is close to zero, the function changes to the "OFF" value.

% Value set internally = (100 x value set on the display) / full scale value

Therefore make sure that the value entered is sufficient not to fall back into the condition for which the function switches to the "OFF" value.

(POS. 5.6) Analog Input 1 alarm MaX [A1Mx=XXXXXX] AL3 [AI1MX]

MAX analog input 1 alarm threshold. Set this parameter to zero to disable the alarm start.

(POS. 5.7) Analog Input 1 alarm MiN [A1Mn=XXXXXX] AL3 [AI1MN]

Alarm threshold MIN analog input 1. Set this parameter to zero to disable the start of the alarm.

(POS. 5.8) Analog Input 1 HYSteresis [Ai1H=xxx] AL [AI1HY]

Hysteresis value on analog input 1

(POS. 5.9) Analog Input 2 alarm MaX [A2Mx=XXXXXX] AL3 [AI2MX]

MAX alarm input analogue threshold 2. Set this parameter to zero to disable the start of the alarm.

(POS. 5.10) Analog Input 2 alarm MiN [A2Mn=XXXXXX] AL3 [AI2MN]

Alarm threshold MIN analogue input 2. Set this parameter to zero to disable the start of the alarm.

(POS. 5.11) Analog Input 2 HYSteresis [Ai2H =xxx] AL3 [AI2HY]

Hysteresis value on analog input 2

MENU 6 INPUTS

(POS. 6.1-2) Volume Totalizer Total/Partial Positive reset Enable [T/P+/RESET=ON/OFF] AL3 [VTTPE][VTPPE]

Enable positive totalizer count reset. When one of these functions is enabled (ON), the relative direct totalizer + can be reset through the input.

(POS. 6.3-4) Volume Totalizer Total/Partial Negative reset Enable [T/P-/RESET=ON/OFF] AL3 [VTTNE][VTPNE]

Enable positive totalizer count reset. When one of these functions is enabled (ON), the relative inverse totaliser - can be reset through the input.

(POS. 6.5) Totalizers Count Lock Input Enable [Count lock= ON/OFF] AL3 [TCLIE]

Totalizers counting lock command enable. When this function is active, applying a voltage on the on/off input terminals the system stops the totalizers no matter which is the flow rate.

(POS. 6.6) MeaSure Lock Input Enable [Meas.lock=ON/OFF] AL3 [MSLIE]

When this function is active (ON), applying a voltage on the on input terminals, the measurement is stopped, the meter will display zero flow.

(POS. 6.7) CALibration Input Enable [Calibration=ON/OFF] AL3 [CALIE]

When this function is active, applying a voltage on the on/off input terminals the meter performs a autozero calibration cycle. **ATTENTION:** If the voltage pulse is less than 1 sec., the meter performs a calibration cycle to compensate possible thermal drifts. If the voltage pulse is more 1 sec, the meter performs a zero calibration measure. To perform the calibration it is absolutely necessary for the sensor to be full of liquid and that the liquid is perfectly still. Even very small movement of the liquid may affect the result of the calibration, and, consequently, the accuracy of the system.

(POS. 6.8) SYStem Violation Detect [sys.v.detect =ON/OFF] AL3 [SYSVD]

Enable alarm related to system violation.

(POS. 6.9) Digital INput 2 Function [D.In2=All./Vi.sist/OFF] AL3 [DIN2F]

Input 2 function selection. The values that can be set are: system violation, flooding and OFF.

(POS. 6.10) Digital INput 3 Function [D.In3=All./Vi.sist/OFF] AL3 [DIN3F]

Input 3 function selection. The values that can be set are: system violation, flooding and OFF

(POS. 6.11) Digital INputs Power Supply [D.in p.sup.=ON/OFF] AL3 [DINPS]

Digital auxiliary input power supply.

MENU 7 OUTPUTS

The values to be associated with outputs 1/2/3/4 relating to functions 7.1 / 7.4 / 7.7 / 7.10 are listed below:

- OFF:** DISABLE
- MAX AL. +:** MAX DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MIN AL. +:** MIN DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX/MIN+:** MAX/MIN DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX AL.-:** MAX INVERSE FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MIN AL.-:** MAX INVERSE FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX/MIN- :**MAX/MIN INVERSE FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX/MIN+/-:** MAX/MIN DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- P.EMPTY:** EMPTY PIPE ALLARM OUTPUT (ENERGIZED = AL. OFF)
- HARDW AL.SYSTEM ALARM:** IT IS ACTIVATED WHEN ONE OR MORE OF THE FOLLOWING CONDITIONS OCCUR: coil excitation error, flow measurement acquisition error (critical signal or acquisition conditions), auxiliary measurement acquisition error. if they are installed (temperature, pressure, etc.)
- OVERFLOW:** OUT OF RANGE ALLARM OUTPUT (ENERGIZED = FLOWRATE OK)
- ALL ALARMS:** SUM OF ALL ALARMS POSSIBLE
- EXT. COMM:** THE OUTPUT CAN ASSUME A STATUS DEPENDENT ON AN EXTERNAL COMMAND (via MCP, MODBUS, etc.)
- BATT. LOW:** REPORT WHEN THE BATTERIES ARE ALMOST EMPTY
- FLOW RATE SIGN.:** FLOW DIRECTION (ENERGIZED WHEN FLOW IS NEGATIVE)
- IAN1 MAX:** MAXIMUM VALUE OF ANALOGUE INPUT 1 (function linked to the values set in the function POS. 3.6 pag. 47)
- IAN1 MIN:** MINIMUM VALUE OF ANALOGUE INPUT 1 (function linked to the values set in the function POS. 3.6 pag. 47)
- IAN1 MX / MN:** MAXIMUM AND MINIMUM VALUE OF ANALOGUE INPUT 1 (function linked to the values set in the function POS. 3.6 pag. 47)
- AIN2 MAX:** MAXIMUM VALUE OF ANALOGUE INPUT 2 (function linked to the values set in the function POS. 3.7 pag. 47)
- AIN2 MIN:** MINIMUM VALUE OF ANALOGUE INPUT 2 (function linked to the values set in the function POS. 3.7 pag. 47)
- AIN2 MX / MN:** MAXIMUM AND MINIMUM VALUE OF ANALOGUE INPUT 2 (function linked to the values set in the function POS. 3.7 pag. 47)
- PULSES.+:** PULSE POSITIVE FLOW RATE
- PULSES.-:** PULSE NEGATIVE FLOW RATE
- PULSES+/-:** PULSE NEGATIVE/POSITIVE FLOW RATE

(POS. 7.1) OUTput 1 Function

[Out1= XXXXX]

AL3

[OUT1F]

Assigned function output 1. The values that can be set are described in the introduction to the MENU 7 OUTPUTS description.

(POS. 7.2) Output 1 INVerted status

[Out1 inv.= OFF/ON]

AL3

[O1INV]

Output 1 Inverted status

(POS. 7.3) Output 1 PuLsed Status [Out1 inv.= OFF/ON] AL3 [O1PLS]

Output 1 PuLsed Status

(POS. 7.4) OUTput 2 Function [Out2= XXXXX] AL3 [OUT2F]

Assigned function output 2. The values that can be set are described in the introduction to the MENU 7 OUTPUTS description.

(POS. 7.5) Output 2 INVerted status [Out2 inv.= OFF/ON] AL3 [O2INV]

OUtput 2 INVerted status.

(POS. 7.6) Output 2 PuLsed Status [Out2 pls.= OFF/ON] AL3 [O2PLS]

Output 2 impulsive operation

(POS. 7.7) OUTput 3 Function [Out3= XXXXX] AL3 [OUT3F]

Assigned function output 3. The values that can be set are described in the introduction to the MENU 7 OUTPUTS description.

(POS. 7.8) Output 3 INVerted status [Out3 inv.= OFF/ON] AL3 [O3INV]

OUtput 3 INVerted status.

(POS. 7.9) OUTput 3 PuLsed Status [Out3 pls.= OFF/ON] AL3 [O3PLS]

Output 3 impulsive operation

(POS. 7.10) OUTput 4 Function [Out4= XXXXX] AL3 [OUT4F]

Assigned function output 4. The values that can be set are described in the introduction to the MENU 7 OUTPUTS description.

(POS. 7.11) Output 4 Inverted status [Out4 inv.= OFF/ON] AL3 [O4INV]

OUtput 4 Inverted status.

(POS. 7.12) Output 4 PuLsed Status [Out4 pls.= OFF/ON] AL3 [O4PLS]

Output 4 impulsive operation

(POS. 7.13) Analog Out. 1 ConFig. [Out mA1= XXXXX] AL3 [AO1CF]


Choice of the measuring range to be associated with the current output 1. There are three modification fields:

- Scale zero: 4 or 0mA
- Full scale: 20 or 22mA
- Field: + = positive, - = negative, blank = both, -0+ = central zero scale


The values corresponding to the scale points are shown in the following chart:

CURRENT VALUES IN mA ASSOCIATE TO THE % FULL SCALE VALUE					
POSSIBLE FIELD	REVERSE FLOW VALUE		ZERO	DIRECT FLOW VALUE	
	≤-110%	-100%	0%	+100%	≥+110%
Out.mA = 4 ÷ 20 +	4	4	4	20	20
Out.mA = 4 ÷ 20 -	20	20	4	4	4
Out.mA = 4 ÷ 20 +/-	20	20	4	20	20
*Out.mA = 4 ÷ 20 -0+	4	4	12	20	20

* Example 1: out 4-20 +

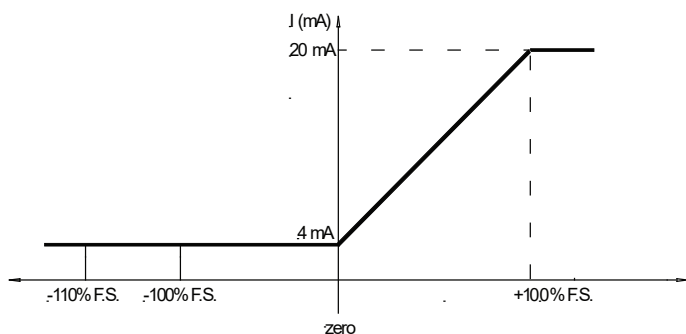

Example 2: out 4-20 -0+

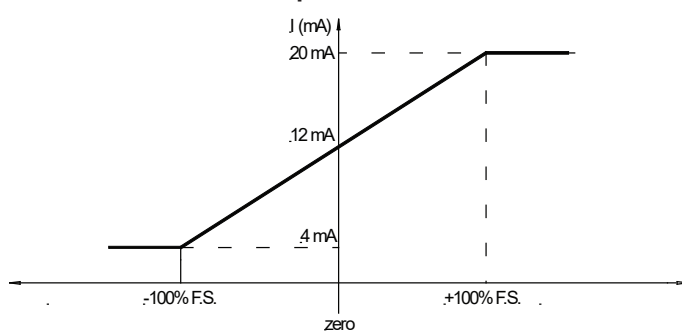

(POS. 7.14) Analog Output 1 Full Scale [A1S= xx/x x.xxxx] AL3 [AO1FS]

It allows to set the full scale value for analog output 1 independently from the main scale of the instrument.

MENU 8 COMUNICAZIONE

(POS. 8.1) DeVice ADDRESS [Dev. Addr] AL3 [DVADD]

Device Address.

(POS. 8.2) MoDBus SPeed [Speed] AL3 [MDBSP]

Modbus Speed. Speed range setting: 4800(bps) / 9600(bps) / 19200(bps) / 22800(bps) / 38400(bps) / 57600(bps).

(POS. 8.3) MoDBus PArity [Parity] AL3 [MDBPA]

Modbus Parity.

(POS. 8.4) MoDBus DeLay [Delay] AL3 [MDBDL]

Modbus delay.

(POS. 8.5) MoDBus Chars Timeout [C.timeout] AL3 [MDBCT]

MODBUS Chars Timeout

For ModBus functions see the dedicated manual

The manufacturer guarantees only English text available on our web site www.isoil.com

MENU 9 DISPLAY

(POS. 9.1) Layout LANGUAGE	[Language]	AL1	[LLANG]
Choice of the language. There are 8 languages available: GB = English, IT = Italian, TR = Turkish, PL = Polish, DE = German, FR = French, PT = Portuguese, ES = Spanish.			
(POS. 9.2) KeyBoard TiMeout Time	[Disp.time]	AL1	[KBTMT]
Waiting time before the display turns off after the last use of the keyboard. The set values are from 5 to 255 seconds.			
(POS. 9.3) DISplay Function Number	[Disp.fn.]	AL2	[DISFN]
This function sets the display of the page making it visible when you start the display. For each display page is associated with a number that corresponds to the position.			
(POS. 9.4) Display function LOck Enable	[Disp.lock]	AL2	[DLOKE]
This function blocks the scrolling of the pages displayed and selected by the function POS. 9.3 pag. 49.			
(POS. 9.5) Partial TOTalizers Enable	[Part.tot.]	AL2	[PTOTE]
This function enables the display of partial totalizer in visualization pages.			
(POS. 9.6) NEGative value Totalizers Enable	[Neg.tot.]	AL2	[NEGTE]
This function enables the display of negative totalizer in visualization pages.			
(POS. 9.7) Net Value ToTalizers Enable	[Net tot.]	AL2	[NVTTE]
This function enables the display of net totalizer in visualization pages.			
(POS. 9.8) Date And Time Display Enable	[Disp.date]	AL2	[DATDE]
This function enables the display of date and time in visualization pages.			
(POS. 9.9) Quick STart Menu Enable	[Quick start]	AL2	[QSTME]
This function enables the quick start menu.			

MENU 10 DATA LOGGER

(POS. 10.1) Data LOGger Enable [D.logger en.=ON/OFF] AL3 [DLOGE]

This function enables data logger.

The following functions are activated by [D.logger en= ON]

(POS. 10.2) Data Logger Units of Measure Enable [Meas.units= ON] AL3 [DLUME]

Enables the registration of the units of measurement set in the device.

(POS. 10.3) Data Logger Field Separator Character [Field separ.= , ;] AL3 [DLFSC]

This function sets the separation character between the recorded data.

(POS. 10.4) Data Logger Decimal Separator Character [Decim.separ.= .] AL3 [DLDSC]

This function sets the separator character between the value of the num. value of the recorded data.

(POS. 10.5) Data LoGger Sample Interval [Interv.= xx:xx:xx] AL3 [DLGSI]

This function sets the data logging frequency. [interval = Hours: Minutes: seconds]

(POS. 10.6) Data logger Totalizer Total Positive Enable [Log T+= ON] AL3 [DTTPE]

Enables recording of total positive totalizer values.

(POS. 10.7) Data logger Totalizer Partial Positive Enable [Log P+= ON] AL3 [DTPPE]

Enables recording of positive partial totalizer values.

(POS. 10.8) Data logger Totalizer Total Negative Enable [Log T-= ON] AL3 [DTTNE]

Enables recording of total negative totalizer values.

(POS. 10.9) Data logger Totalizer Partial Negative Enable [Log P-= ON] AL3 [DTPNE]

Enables recording of negative partial totalizer values.

(POS. 10.10) Data Logger totalizer Partial Net Enable [Log TN= ON] AL3 [DLTNE]

Enables recording of total totalizer net values.

(POS. 10.11) Data Logger totalizer Partial Net Enable [Log PN= ON] AL3 [DLPNE]

Enables the recording of the net partial totalizer values.

(POS. 10.12) Data logger Flow rate in Technical Units Enable [Log Q(UM)= ON] AL3 [DFTUE]

Ability to record the flow rate in a set unit of measurement.

(POS. 10.13) Data logger Flow rate in PerCentage Enable [Log Q(%)= ON] AL3 [DFPCE]

Ability to record the flow rate as a percentage of the set full scale value

(POS. 10.14) Data logger ALarm Events Enable [Log AL.EV= ON] AL3 [DALEE]

Enables recording of events and alarms.

(POS. 10.15) Data logger ADDitional Measures Enable [Log ADM= ON] AL6 [DADME]

It allows to log the additional analog measurements, as for example pressure and temperature.

This option is valid only with analog inputs enabled and the module installed.

(POS. 10.16) Data logger Sensor Test Results Enable	[Log STR= ON]	AL6	[DSTRE]
Enable logging of sensor test results.			
(POS. 10.17) Data logger Board TemperatureS Enable	[Log BTS= ON]	AL6	[DBTSE]
Enable logging of board temperature.			
(POS. 10.18) Data logger Internal Board Voltages	[Log IBV= ON]	AL6	[DIBVE]
Enable logging of internal board voltage.			
(POS. 10.19) Data logger Electrodes DC Voltages Enable	[Log EDC= ON]	AL6	[DEDVE]
Enable logging of electrodes DC voltage.			
(POS. 10.20) Data logger Electrodes AC voltages Enable	[Log AEC= ON]	AL6	[DEAVE]
Enable logging of electrodes AC voltage.			
(POS. 10.21) Data logger Electrodes Source Impedance Enable	[Log EIZ= ON]	AL6	[DESIE]
Enable logging of electrodes impedance.			
(POS. 10.22) Data logger Sensor Coils Values Enable	[Log SCV= ON]	AL6	[DSCVE]
Enable logging of sensor coils value.			


MENU 10 - DATA LOGGER: ONLY MCP FUNCTIONS

LoG All Information Enable	[MCP ONLY]	AL6	[LGAIE]
Enable logging of all instrument events. This function enables the recording of all data for which registration is required. Activating this function, the system records in detail each operation with the consequence that the file produced by the logger will be large and will incisively reduce the space in the SD memory. It is advisable to activate this function only if necessary (for example to identify communication problems with SMTP or FTP servers).			
Sensor Test data Fields Format	[MCP ONLY]	AL0	[DLFLF]
Data logger fields format			
Sensor Test data Fields Format	[MCP ONLY]	AL0	[STFLF]
Format sensor test data fields			
Data Logger Instantaneous Process Data	[MCP ONLY]	AL0	[DLIPD]
Read instantaneous values of process data.			


USING DATA LOGGER BY MCP INTERFACE

The data collected by the data logger are stored on a micro SD card. Their organization is based on a tree structure and the system saves day by day, in two separate files, events and data loggers. Data can be downloaded via the MCP interface, as shown in the following examples. **Note:** The number of processed data depends on the sampling interval set and the number of variables enabled for registration.

MCP INTERFACE

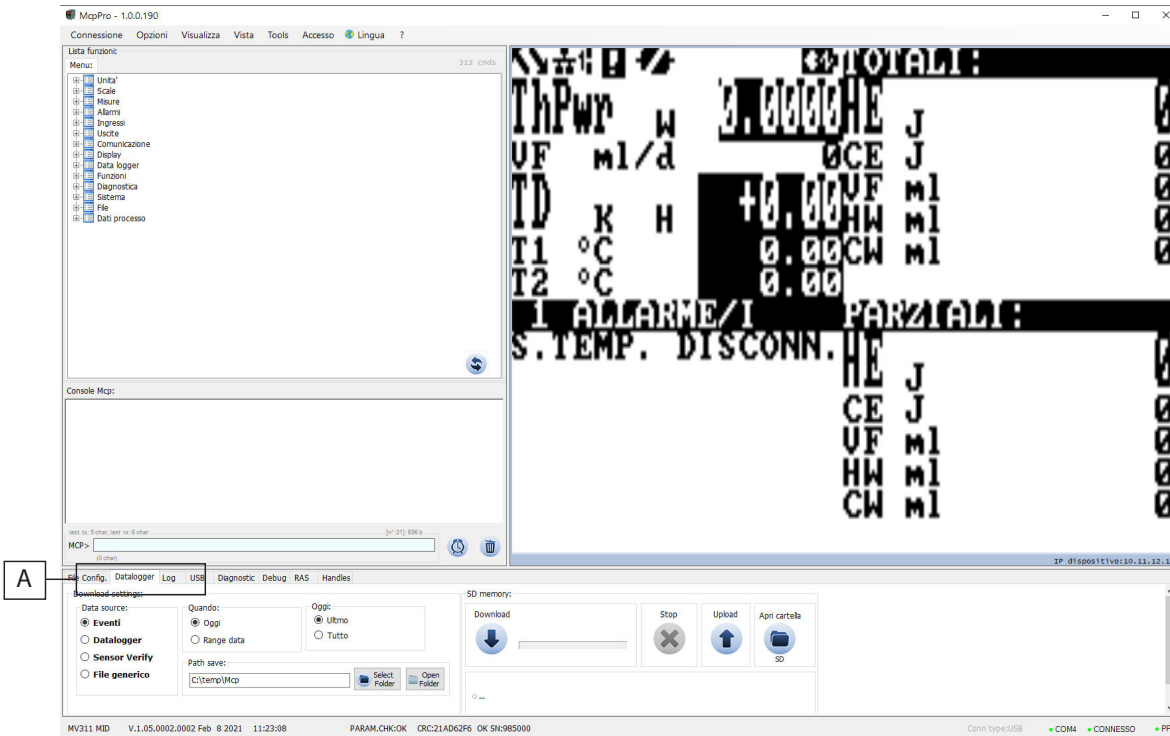

Select the “data logger” tab as shown below to access the file download interface.

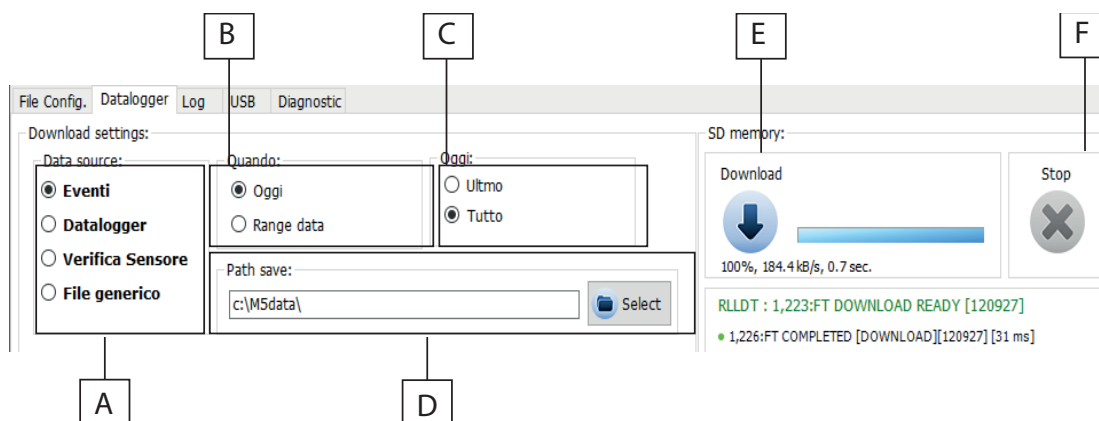

A=Data source

- Events: Download system events (Sample Line 2016/09 / 14-01: 00: 00.000 -W0216- [1] ALARMS still active)
- Data logger: Download and save the recorded data through the data logger function.
- Sensor Verify: Download sensor verification data (if BIV is active).
- Generic file: Download a specific file contained in the SD card.

B=When

Indicates the reference period to download the data.

- Today: current day file download
- Data range: selection of the download period.

C=Today

(divides today's day into different download frames)

- Last: download only the latest data collected AFTER the last data download
- All: download the data of the whole current day of the file

D=Save path:

- This option allows you to save the files in the desired folder on your PC

E=Download:

- Button to start the download process

F=Stop:

- Button to stop the download process

Example: Download Events

The screenshot shows the 'Datalogger' software interface. The 'Download settings' panel is visible, with 'Data source' set to 'Events', 'When' set to 'Today', and 'Save path' set to 'c:\MSdata'. The 'Download' button is highlighted with a blue arrow. Below the settings, a window titled 'c:\MSdata\999001_2016_06_07_EVENTS.TXT' displays a list of events. The events list includes timestamps and descriptions such as 'Volume counters [LOCKED] by digital input signal', 'Measure signal [LOCKED TO 0] by digital input signal', and 'MCP command executed correctly [SRM0M7]'. A progress bar at the bottom of the interface shows the download is 100% complete.


To download all the events of the current day in a specific folder, set the below parameters as follows:
Data source: Events
When: Today
Today: All
Save path: C: /
 The parameters are set then click the Download button.

Once the download is completed, a window containing the list of today's events appears. The file is saved in the specified folder in .txt format .

The manufacturer guarantees only English text available on our web site www.isoil.com

Example: Download Data Logger

Note: it is recommended the date synchronization between converter and PC to perform correctly the events and logger reading operations.

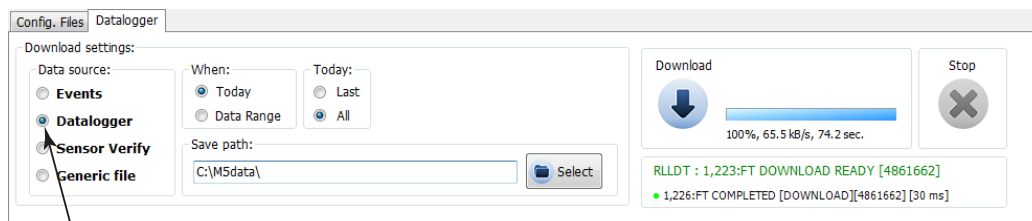

To download all the data of the current day in a specific folder, set the below parameters as follows:

Data source: DATALOGGER

When: Today

Today: All

Save path: C: /

The parameters are set then click the Download button.

The following is the formatting of the data of the files downloaded from the download data logger setting in a file in .CSV format. The access level to download this type of file is the 5th diagnostic level..

Note: The fields are at a fixed position, regardless of whether the previous fields are active or not. Inactive fields are empty (delimited by the separator but do not contain data).

S	PORTATA %	0 0 0 0 0 0	FLOW_R%: value of the flow expressed in percent of the full scale. Fields present when the percentage flow send flag is active.
R	UM %	% % % % % %	U=xxx: unit of measurement used for the value of Flow%. Fields present when the flow rate sending flag is active in units of measurement.
Q	PORTATA	0 0 0 0 0 0	FLOW_R: value of the flow rate expressed in the chosen unit of measurement. Fields present when the flow rate sending flag in units of measurement is active.
P	UM dm3/s	dm3/s dm3/s dm3/s dm3/s dm3/s dm3/s	U=xxx: unit of measurement used for the flow rate value. Fields present when the flow rate sending flag in units of measurement is active.
O	NP	0 0 0 0 0 0	TOT_NP: partial net totalizer value. Fields present when the sending flag of the NP totalizer is active.
N	UM dm3	dm3 dm3 dm3 dm3 dm3 dm3	U=xxx: unit of measurement used for the partial net totalizer value. Fields present when the sending flag of the NP totalizer is active.
M	TN	0 0 0 0 0 0	TOT_NT: total net totalizer value. Fields present when the NT totaliser sending flag is active.
L	UM dm3	dm3 dm3 dm3 dm3 dm3 dm3	U=xxx: unit of measurement used for the total net totalizer value. Fields present when the NT totaliser sending flag is active.
K	P-	0 0 0 0 0 0	TOT_P-: negative partial totalizer value. Fields present when the sending flag of the totalizer P- is active.
J	UM dm3	dm3 dm3 dm3 dm3 dm3 dm3	U=xxx: unità di misura usata per il totalizzatore parziale negativo. Campi presenti quando è attivo il flag di invio del totalizzatore P-
I	T-	0 0 0 0 0 0	TOT_T-: total negative totalizer value. Fields present when the totaliser sending flag is active T-.
H	UM dm3	dm3 dm3 dm3 dm3 dm3 dm3	U=xxx: unit of measurement used for total negative totalizer. Fields present when the totaliser sending flag is active T-.
G	P+	0 0 0 0 0 0	TOT_P+: positive partial totalizer value. Fields present when the P + totalizer sending flag is active.
F	UM dm3	dm3 dm3 dm3 dm3 dm3 dm3	U=xxx: unit of measurement used for the positive partial totalizer. Fields present when the P + totalizer sending flag is active
E	T+	0 0 0 0 0 0	TOT_T+: total positive totalizer value. Fields present when the T + totalizer sending flag is active.
D	UM dm3	dm3 dm3 dm3 dm3 dm3 dm3	U=xxx: unit of measurement used for the total positive totalizer. Fields present when the T + totalizer sending flag is active.
C	ORA 00:00:00	00:00:00 00:00:00 00:00:00 00:00:00 00:00:00 00:00:00	TIME: Displaying the recording time for each record.
B	DATA dd/mm/yy	dd/mm/yy dd/mm/yy dd/mm/yy dd/mm/yy dd/mm/yy dd/mm/yy	DATE: Display of the recording date for each record.
A	N° RECORD	n° n° n° n° n° n°	N°NUM: record number. Display progressively the number of records recorded.

The manufacturer guarantees only English text available on our web site www.isoil.com

AM	CMLF NOISE	0 0 0 0 0 0 0	LFN_COM: common mode low frequency noise value on the electrodes. Fields present when the flag to send data on the input signal noise levels is active (diagnostic values).
AL	UM	> > > > > >	
AK	$VC(E1-E2)/2$	0 0 0 0 0 0	ECOM: value of the common mode voltage measured on the electrodes E1, E2. Common mode voltage on the electrodes. Fields present when the flag for sending data on input voltages (diagnostic values) is active.
AJ	UM	> > > > > >	
AI	$VD(E1+E2)/2$	0 0 0 0 0 0	EDIF: value of the differential voltage measured on the electrodes E1, E2. Fields present when the flag for sending data on input voltages is active (diagnostic values).
AH	UM	> > > > > >	
AG	E2V	0 0 0 0 0 0	E2_V: value of the measured voltage of the E2 electrode. Fields present when the flag for sending data on input voltages (diagnostic values) is active.
AF	UM	> > > > > >	U=xxx: unit of measurement used for the value of the voltage measured on the E2 electrode. Fields present when the flag of the measured voltage value on the E2 electrode is active.
AE	E1V	0 0 0 0 0 0	E1_V: value of the measured voltage of the E1 electrode. Fields present when the flag for sending data on input voltages (diagnostic values) is active..
AD	UM	> > > > > >	U=xxx: unit of measurement used for the value of the voltage measured on the E1 electrode. Fields present when the flag of the measured voltage value on the E1 electrode is active.
AC	CETS	0 0 0 0 0 0	ST_CODE: value of the error code generated during the sensor test. Value present when sending sensor test data is active.
AB	UM ERR	ERR ERR ERR ERR ERR ERR	
AA	T. SALITA	B 0 0 0 0 0 0	COILS_TB: value of the rise time of the excitation current for phase B.
Z	UM mA	mA mA mA mA mA mA	U=xxx: unit of measurement used for the value of the excitation current rise time for phase B. Fields present when the flag of the value of the upward current of the excitation current is active. For phase B.
Y	T. SALITA	A 0 0 0 0 0 0	COILS_TA: value of the rise time of the excitation current for phase A. Value present when the sending of sensor test data for phase A is active.
X	UM mA	mA mA mA mA mA mA	U=xxx: unit of measurement used for the value of the excitation current rise time for phase A. Fields present when the flag of the time value of the excitation current is active. For phase A.
W	CPTI	0 0 0 0 0 0	COILS_LK_I: value of the current measured during the coil insulation test. Current loss measured during insulation test. Value present when sending sensor test data is active.
V	UM mA	mA mA mA mA mA mA	U=xxx: unit of measurement used for measured current value. Fields present when the flag of the current value measured during the coil test is active.
U	N° ALLARMI	0 0 0 0 0 0	ALARMS: value of the number of active alarms. Fields present when the alarm sending flag is active (only N. of total alarms present).
T	UM AL	AL AL AL AL AL AL	


BM	T: CPU	0	0	0	0	0	0	0	0	+ Volt CPU power supply
BL	UM	V	V	V	V	V	V	V	V	Unit of measure (Volt)
BK	UM	V	V	V	V	V	V	V	V	value not available
BJ	UM	V	V	V	V	V	V	V	V	Unit of measure (Volt)
BI	T1	0	0	0	0	0	0	0	0	CPU Temperature
BH	UM	°C	°C	°C	°C	°C	°C	°C	°C	Unit of measure (°C)
BG	A IN2	0	0	0	0	0	0	0	0	A_IN2: value of analog input 2
BF	UM	KPa	KPa	KPa	KPa	KPa	KPa	KPa	KPa	
BE	A IN1	0	0	0	0	0	0	0	0	A_IN1: value of analog input 1.
BD	UM	KPa	KPa	KPa	KPa	KPa	KPa	KPa	KPa	
BC	T: BOBINE	0	0	0	0	0	0	0	0	COILS_T: temperature value of the sensor coils (indirect measurement). Fields present when the flag for sending data on the measurements relating to the excitation circuit of the sensor is active (diagnostic values).
BB	UM	mA	mA	mA	mA	mA	mA	mA	mA	
BA	R: BOBINE	0	0	0	0	0	0	0	0	COILS_R: resistance value of the sensor coils (Coils + Cables). Fields present when the flag for sending data on the measurements relating to the excitation circuit of the sensor is active (diagnostic values).
AZ	UM	mA	mA	mA	mA	mA	mA	mA	mA	
AY	CORR: EC.	0	0	0	0	0	0	0	0	COILS_I: value of the excitation current. Fields present when the flag for sending data on the measurements relating to the excitation circuit of the sensor is active (diagnostic values).
AX	UM	mA	mA	mA	mA	mA	mA	mA	mA	
AW	E2 R	0	0	0	0	0	0	0	0	E2_R: equivalent resistance value measured on the E2 electrode. Fields present when the flag for sending data on electrode resistance measurements (diagnostic values) is active.
AV	UM	kohm	kohm	kohm	kohm	kohm	kohm	kohm	kohm	
AU	E1 R	0	0	0	0	0	0	0	0	E1_R: equivalent resistance value measured on the E1 electrode. Fields present when the flag for sending data on electrode resistance measurements (diagnostic values) is active.
AT	UM	kohm	kohm	kohm	kohm	kohm	kohm	kohm	kohm	
AS	ADC HF NOISE	0	0	0	0	0	0	0	0	HFADN_DIF: total differential high frequency noise value (ADC). Fields present when the flag for sending data on the noise levels of the input signal is active (diagnostic values).
AR	UM	V	V	V	V	V	V	V	V	
AQ	ADC LF NOISE	0	0	0	0	0	0	0	0	LFADN_DIF: total differential low-frequency noise value (ADC). Fields present when the flag for sending data on the noise levels of the input signal is active (diagnostic values).
AP	UM	V	V	V	V	V	V	V	V	
AO	DIF LF NOISE	0	0	0	0	0	0	0	0	LFN_DIF: value of the low differential frequency noise on the electrodes. Fields present when the flag for sending data on the noise levels of the input signal is active (diagnostic values).
AN	UM	V	V	V	V	V	V	V	V	

 The manufacturer guarantees only English text available on our web site www.isoil.com

BX	hex	Checksum
BW	BATT2V 0 0 0 0 0 0	Residual battery capacity (ONLY FOR RECHARGEABLE BATTERY VERSION)
BV	UM % % % % % %	Unit of measure (%) (ONLY FOR RECHARGEABLE BATTERY VERSION)
BU	BATT1V 0 0 0 0 0 0	Batteries voltage
BT	UM > > > > > >	Unit of measure (Volt)
BS	/	/
BR	/	/
BQ	/	/
BP	/	/
BO	V. CPU 0 0 0 0 0 0	- Volt CPU power supply
BN	UM > > > > > >	Unit of measure (Volt)


Example: Sensor Verify

To make the control measures of the state of the sensor and the related automatic verification files is necessary that the BIV function (Built-In-Vericator) is turned on (optional). If the BIV is enabled, the instrument automatically tests the sensor operating parameters every hour and records the data on the “STESTLOG.CSV” file; it is possible to do a manual check using the “sens.verify” command on the “Diagnostic” menu or through the MCP “SVERC” command

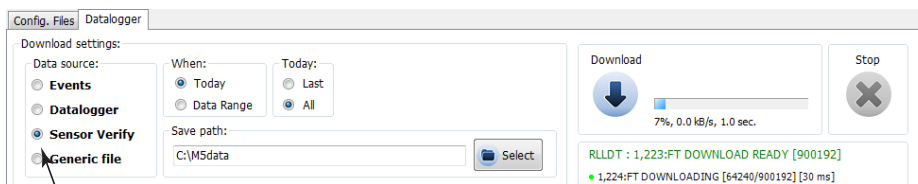

To download all the sensor measure for the current day in a specific folder, set the below parameters as follows:
Data source: Sensor Verify
When: Today
Today: All
Save path: C: /
 The parameters are set then click the Download button.

Esempio download generic file

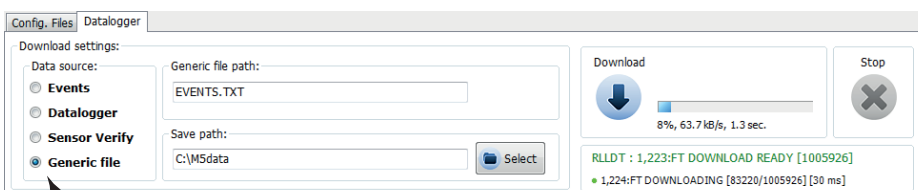

This function allows to select a file in the SD memory and download it. In the “Generic file path” specify the file name contained in the SD and indicate “Save path” where to save the file. Set these values to proceed with the download by clicking the “download”.

MENU 11 - FUNCTION

The following functions are activated by first pressing the “ENTER” and then the “ESC” when the screen appears “confirm” to start the function.

(POS. 11.1) Volume Totalizer Total Positive Reset	[T+ RESET]	AL3	[VTTPR]
Reset total direct totalizer for direct flow rate			
(POS. 11.2) Volume Totalizer Partial Positive Reset	[P+ RESET]	AL3	[VTPPR]
Reset total partial totalizer for direct flow rate			
(POS. 11.3) Volume Totalizer Total Negative Reset	[T- RESET]	AL3	[VTNTR]
Reset total reverse totalizer for direct flow rate.			
(POS. 11.4) Volume Totalizer Partial Negative Reset	[P- RESET]	AL3	[VTPNR]
Reset partial reverse totalizer for direct flow rate			
(POS. 11.5) Load Factory Default Sensor Data	[Load sens.f.def]	AL3	[LFDSD]
This function loads the factory data of the sensor. To save the factory data see function (11.7).			
(POS. 11.6) Load Factory Default Converter Data	[Load conv.f.def]	AL3	[LFDSD]
This function loads the factory data of the converter. To save the data, see function (11.8).			
(POS. 11.7) Save Factory Default Sensor Data	[Save sens.f.def]	AL6	[SFSDS]
This function saves the factory data of the sensor.			
(POS. 11.8) Save sensor factory default	[Save conv.f.def]	AL6	[SFDSD]
This function saves the factory data of the converter.			
(POS. 11.9) Save Factory Default Converter Data	[Calibration]	AL5	[CALIC]
Activation of the function adjusts the board calibration parameters. Pressing the ENTER key briefly while the function is displayed will display the message: “Execute?” Press and hold the Enter key to proceed. Press any other key to cancel the operation. NOTE: If a valid sensor data table is present, the calibration starts automatically even when one of the following parameters is modified: SENSOR DIAMETER -> Menu Sensor1 / SENSOR MODEL -> Menu Sensor1 S. FREQ. -> Menu Sensor1 / EXC CURRENT -> Menu Sensor1 To check the calibration status, active or inactive, enter the command MCP “CALIC?” And check as follows: CALIC = 1 calibration in progress / CALIC = 0 calibration completed			

MENU 11 - FUNCTION: ONLY MCP FUNCTIONS

Sensor ReFeRence Data Save	[MCP ONLY]	AL4	[SRFDS]
Save conv.f.def= ON, saving sensor reference data. Used for the function POS. This function allows the import of data from one converter to another up to level 4 included. The hardware configurations and the corresponding calibration values are not restored. The “data import” procedure can be performed one time only, since the directory, according to the board’s SERIAL NUMBER, will be renamed. pag. 93.			
Input ReFeRence Data Save	[MCP ONLY]	AL4	[IRFDS]
Save el.input reference data			

MENU 12 - DIAGNOSTIC

(POS. 12.1) AutoTeSt Immediate Command [Self test] AL3 [ATSIC]

Self-test function. This function stops the normal functions of the counter and performs a complete test cycle on the input, measurement and excitation circuits. To Activate this function, after having selected it, press the “enter” button and the question “Confirm?” Press “ESC” to automatically start the test or any other button to cancel the operation. At the end of the operation the converter restarts and restores the screen to the initial display page. This function is performed automatically when the device is turned on.

(POS. 12.2) Test display [Test display] AL1 NO MCP COMMAND

This function allows you to test the graphic display of the converter. During the execution of this function, 4 screens are displayed in sequence to test the correct operation of the device.

(POS. 12.3) Sensor VERify Command [Sens. verify] AL3 [SVERC]

Diagnostic function and sensor verification, allows to do a sensor test (if BIV enabled).

(POS. 12.4) Measure SIMulation ENable [Flow sim=ON] AL3 [MSIEN]

Enabling the flow simulation function. By activating this function it is possible to simulate a flow. With this system it is possible to test the outputs of the meter and the instruments connected to it. After enabling the flow rate, this symbol appears on the display ‘▲▼’ and the simulation can be:

- Set: pressing the “Enter” key from one of the display pages, to set the % flow rate value, and pressing “Enter” again to confirm the value.
- Ended: by pressing the “Esc” key on the page where the simulated value is set.

(POS. 12.5) Diagnostic Measure VaLueS [Display measures] AL5 [DMVLS]

This function shows the values of various internal parameters (diagnostic purpose reserved for the service).

```

+AUCC:U          +2.6 E1R:kohm          0.1
-AUCC:U          -2.6 E2R:kohm          0.1
UBATT1:U         0.000 LFN_COM:U         0.000
UBATT2:U         0.000 LFN_DIF:U         0.000
UBATT3:UU        4.135 HFN_ADC:U         0.002
IBATT3:UA        0.075 LFN_ADC:MU        0.002
UMODEM:U         4.117 MEAS_NB:%         0.13
VIN1:U           -0.000 CAL_U:MU          18.6765
VIN2:U           -0.000 CAL_I:MU          0.9114
VIN_C:U          -0.000 CAL_G:           20.4926
VIN_D:U          +0.000 CAL_R0:           1.00000
C_C:MA          24.97 CAL_R1:           1.00282
C_U:U            3.6 SYS_F1:MHZ         50.028
C_UPK:U          4.1 SYS_F2:MHZ         50.074
C_R:ohm         145.3 CURR_K:           1.00046
C_PWR:W         0.091 PROC1:%           94.8
C_PWR:W         0.091 PROC2:%           1.0
C_T:°C          +25.5 PROC3:%           0.3
C_RT:ms         0.55 PROC4:%           1.2
C_LK:MA         0.000 PROC5:%           3.0
C_ST:           0 SYSTP:%           0.0
S.UERR:         0000C000 CPU1_T:°C        +27.83
                  CPU2_T:°C        +25.45
  
```

This function shows the values of various internal specific communication parameters (diagnostic purpose reserved for the service).

```

PPP1_STATUS:      NETW      E_TSPLAYR:      0
PPP2_STATUS:      DEAD      E_PPPFRM1:      0
MCPI_$:          ESTABLISH  E_IP_HDR1:      0
RxCNT:           50906397    E_IP_HDR2:      0
TxCNT:           799361398   E_IP_HDR3:      0
RETRANSM.       0          E_IP_HDR4:      0
BROADCAST       6800       E_IP_HDR5:      0
E_SR_LINK       0          E_IP_HDR6:      0
E_BFOUERR       0          E_IP_HDR7:      0
E_TSPLAYR       0          E_IP_HDR9:      0
E_PPPFRM1       0          E_TCPHDR1:      9
E_IP_HDR1       0          E_TCPHDR2:      0
E_IP_HDR2       0          E_UDPHDR1:      0
E_IP_HDR3       0          E_UDPHDR2:      0
E_IP_HDR4       0          E_UDPHDR3:      0
E_IP_HDR5       0          E_ICMPHDR:      0

```

The following are the statuses for the PPP and MCPI link for the device connection.

Status of the PPP link:

- "UNDT" = undetermined.
- "DEAD" = PPP link not active.
- "LCP" = phase of LCP, transition phase.
- "AUTH" = transition phase.
- "IPCP" = IP address assignment.
- "NETW" = established network (normal persistent condition when the connection is active).
- "TERM" = termination request, transition phase.

MCPI link status:

- "CLOSED" = closed socket
- "ACCEPT" = Waiting for new connection
- "ESTABLISH" = established link
- "CLS_WAIT" = waiting for closure
- "LAST_ACK" = LASK ACK sent
- "FIN_WAIT" = (See the RFC TCP / IP documentation)
- "TIME_WAIT" = (See the RFC TCP / IP documentation)

(POS. 12.7) OscilloSCOPE function


[Display graphs]

AL5

[OSCOP]


This function displays the input graphs. The MCP command allows you to see the data on the graph in numeric format, as a list of values. Typing OSCOP = 1 allows you to view the numeric values of the graph in position 1. The measurement charts provided are 8.

- Z=impedance
- C. current=Coils current
- C. volt=Coils voltage
- C.load: Coils load
- Input 1= E1
- Input 2=E2
- SIGNAL=analog to digital converter.
- Input 1-Input 2

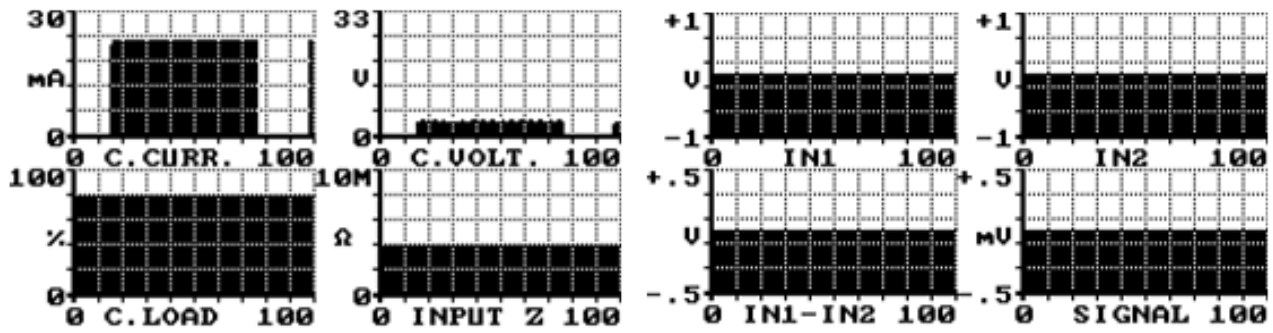


(POS. 12.8) SD memory STATUS [SD card info] AL0 [SDSTA]

This function indicates the status of the SD card as shown in the following figure.

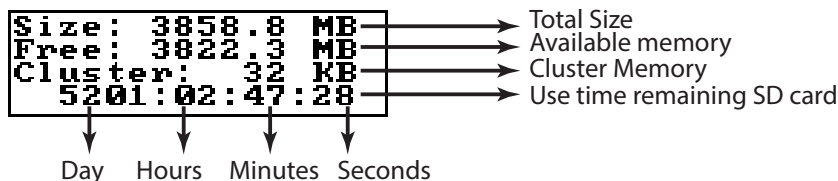

The statistical calculation is performed whenever the SDSTA command is invoked or when accessed from the display. The statistical data is updated AUTOMATICALLY every day (24 hours) or manually each time the function is called up on the display or the SDSTA command is sent. However, since a minimum time of one hour is required for detection, the data will not be recalculated before this time interval.

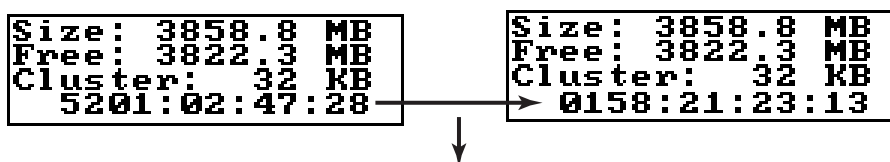

Minimum time of 1 hour for the new data update

The SD card must be replaced only by the service. The use of commercial cards could disable some functionality of the instrument.

(POS. 12.9) MODEL and Software Version [Firmware info] AL0 [MODSV]

Version / revision firmware information.

```
MU255
U. 0.00.0000.FFFF
MMM 00 0000
00:00:00
```

(POS. 12.10) SERIAL NUMBER [S/N=XXXXXX] AL0 [SRNUM]

Displays the serial number of the instrument board. (read only)

(POS. 12.11) Total Working Time [WT= xxxx: xx: xx: xx] AL0 [TWKTM]

View Total working time instrument. (read only)

(POS. 12.12) Total Measure CYCles [TC= xxxxxxxxxxxx] AL0 [TMCYC]

Total number of cycles measured on battery. (read only)

MENU 12 DIAGNOSTIC: ONLY MCP FUNCTIONS

DIAGnostic Function [MCP ONLY] AL6 [DIAGF]

Diagnostic functions code.

Coil Current Mean Real Value [MCP ONLY] AL6 [CCMRV]

Real average excitation current value.

The manufacturer guarantees only English text available on our web site www.isoil.com

Analog input 1 Start Scale Cal.	[MCP ONLY]	AL6	[A1SSC]
Calibration of the analog input 1 start scale.			
Analog input 1 Full Scale Cal.	[MCP ONLY]	AL6	[A1FSC]
End of scale analogue input calibration 1.			
Analog input 2 Start Scale Cal.	[MCP ONLY]	AL6	[A2SSC]
Calibration of the analog input 2 start scale.			
Analog input 2 Full Scale Cal.	[MCP ONLY]	AL6	[A2FSC]
End of scale analogue input calibration 2.			

MENU 13 - SYSTEM

(POS. 13.1) DaYlight Saving Time Enable	[Dayl.saving= ON/OFF]	AL2	[DYSTE]
--	------------------------------	------------	----------------

Daylight saving time change.

(POS. 13.2) Time ZONE	[Time zone= h+xx.xx]	AL2	[TZONE]
------------------------------	-----------------------------	------------	----------------

Set the difference between GMT and the local time where the instrument is installed. Set the time zone before the system date and time setting as this function, if set after the system date and time, will in turn change the newly set date and time.

(POS. 13.3) Date and TIME	[xxxx/xx/xx-xx:xx]	AL2	[DTIME]
----------------------------------	---------------------------	------------	----------------

Setting the system date and time.

(POS. 13.4) Level 1 Access CoDe	[L1 code]	AL1	[L1ACD]
--	------------------	------------	----------------

This function enables or disables the functions of the main menu for each access level code. Each level unlocks the functionality of the lower level if the function is enabled POS. 13.10 pag. 50.

(POS. 13.5) Level 2 Access CoDe	[L2 code]	AL2	[L2ACD]
--	------------------	------------	----------------

This function enables or disables the functions of the main menu for each access level code. Each level unlocks the functionality of the lower level if the function is enabled POS. 13.10 pag. 50.

(POS. 13.6) Level 3 Access CoDe	[L3 code]	AL3	[L3ACD]
--	------------------	------------	----------------

This function enables or disables the functions of the main menu for each access level code. Each level unlocks the functionality of the lower level if the function is enabled POS. 13.10 pag. 50.

(POS. 13.7) Level 4 Access CoDe	[L4 code]	AL4	[L4ACD]
--	------------------	------------	----------------

This function enables or disables the functions of the main menu for each access level code. Each level unlocks the functionality of the lower level if the function is enabled POS. 13.10 pag. 50.

(POS. 13.8) Level 5 Access CoDe	[L5 code]	AL5	[L5ACD]
--	------------------	------------	----------------

This function enables or disables the functions of the main menu for each access level code. Each level unlocks the functionality of the lower level if the function is enabled POS. 13.10 pag. 50.

(POS. 13.9) Level 6 Access CoDe	[L6 code]	AL6	[L6ACD]
--	------------------	------------	----------------

This function enables or disables the functions of the main menu for each access level code. Each level unlocks the functionality of the lower level if the function is enabled POS. 13.10 pag. 50.

(POS. 13.10) ReStricted Access Rule Enable	[Restr.access=ON/OFF]	AL2	[RSARE]
---	------------------------------	------------	----------------

If Active this command allows you to view only the functions of the access level entered.


Example: RSARE = ON; Known access level L3; only the functions that operate with access level 3 will be displayed and the other functions will not be displayed.

If this command is set to OFF, the functions with the entered access code and the functions with the access code lower than the one just entered will be displayed.

IP ADDRESS SETTING (13.11-12-13)


(POS. 13.11) Device IP address	[XXX.XXX.XXX.XXX]	AL3	[DIPAD]
Device IP network edress			
(POS. 13.12) Client IP address	[XXX.XXX.XXX.XXX]	AL3	[CIPAD]
Client IP network address			
(POS. 13.13) NETwork MaSk	[XXX.XXX.XXX.XXX]	AL3	[NETMS]
Network mask.			

Caution: Changes to the functions of the points 13.11-13.12-13.13 are enabled after the drive device restart(see function POS. 12.1 pag. 50).

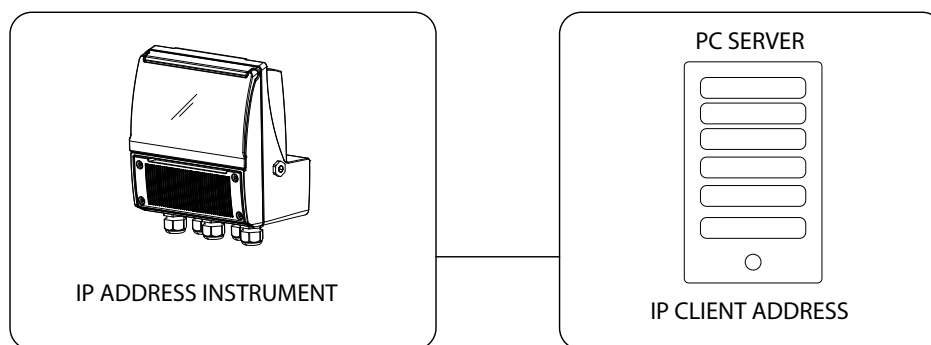

(POS. 13.14) CoeFFicient KT	[KF=X.XXXXXX]	AL3	[CFFKT]
Gain correction coefficient (calculated automatically).			
(POS. 13.15) CoeFFicient KS	[KS=X.XXXXXX]	AL3	[CFFKS]
Correction coefficient constant instrumental.			
(POS. 13.16) CoeFFicient KR	[KR=X.XXXXXX]	AL5	[CFFKR]
Correction coefficient constant instrumental.			

DIGITAL ANALOG CONVERTER (Correction Parameters)

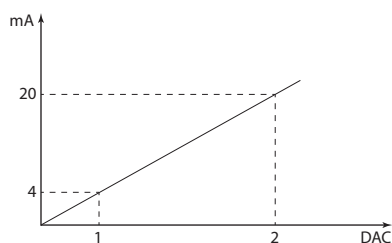

The diagram shows how the DAC4-20mA parameters are setup. The DAC1 value corresponds to 4 mA corresponding to a zero flow rate, while the value of 20mA corresponds to a 100% of the flow rate.

(POS. 13.17) Cal. DAC 4mA u.an .1	[DAC1 4mA =XXXXX]	AL5	[C1CP1]
DAC1 out 4mA calibration point. (current output 1 calibration point 1)			
(POS. 13.18) Cal. DAC 20mA u.an .1	[DAC1 20mA=XXXXX]	AL5	[C1CP2]
DAC1 out 20mA calibration point. (current output 2 calibration point 1)			

The manufacturer guarantees only English text available on our web site www.isoil.com

(POS. 13.19) Analog input 1 Calibration Point 1	[AIN1 SS= ± xxxxx]	AL5	[A1CP1]
--	---------------------------	------------	----------------

Analog Input Scale Start Calculation 1. Range of settable values are from 0 to 32767.

(POS. 13.20) Analog input 1 Calibration Point 2	[AIN1 FS= ± xxxxx]	AL5	[A1CP2]
--	---------------------------	------------	----------------

End of scale analogue input calculation 1. Range of settable values are from 0 to 32767.

(POS. 13.21) Analog input 2 Calibration Point 1	[AIN2 SS= ± xxxxx]	AL5	[A2CP1]
--	---------------------------	------------	----------------

Analog input 2 start scale calculation. Settable value range is from 0 to 32767.

(POS. 13.22) Analog input 2 Calibration Point 2	[AIN2 FS= ± xxxxx]	AL5	[A2CP2]
--	---------------------------	------------	----------------

End of scale analogue input calculation 2. Range of settable values are from 0 to 32767.

(POS. 13.23) System STanDBY	[Stand-by]	AL3	[SSTBY]
------------------------------------	-------------------	------------	----------------


Enable the converter standby state. It is enabled by selecting rechargeable battery in hw config.

(POS. 13.24) FirmWare UPDate	[FW update]	AL4	[FWUPD]
-------------------------------------	--------------------	------------	----------------

Enable firmware update. The firmware can be upload to the SD card (name.file).

MCP interface is activated by the command FWUPD = name.file

MENU 13 - SYSTEM: ONLY MCP FUNCTIONS

Unique Identity KEY	[MCP ONLY]	AL0	[UIKEY]
Device Unique Identity key.			
HardWare SET	[MCP ONLY]	AL0	[HWSET]
Device hardware configuration.			
HardWare CODE	[MCP ONLY]	AL0	[HWCOD]
Device hardware code.			
FirmWare CRC-32 value	[MCP ONLY]	AL6	[FWCRC]
FirmWare CRC			
CALibration eXecution status Memory	[MCP ONLY]	AL6	[CALXM]
Calibration Execution status Memory. This function checks the instrument's internal calibration status.			
<input type="checkbox"/> CALXM=1 instrument calibrated correctly <input type="checkbox"/> CALXM=0 Invalid calibration / Calibration not completed (invalid calibration (if the function is zero, start the calibration function, MCP CALIC command)).			
RTC Adjustment Coefficient	[MCP ONLY]	AL2	[RTCAC]
This function is used for correcting the internal clock. To set the time of the instrument with the MCP program, press the button  .			
Function CODE Selection	[MCP ONLY]	AL0	[FCODS]
Select the function code.			
FuNction Enable State Selection	[MCP ONLY]	AL6	[FNESS]
Select the enable state of function.			
All FuNctions State Selection	[MCP ONLY]	AL6	[AFNSS]
Select enable state of ALL function.			
Quick Start FuNction Selection	[MCP ONLY]	AL6	[QSFNS]
Select function for quick start menu.			
Quick Start All Functions Selection	[MCP ONLY]	AL6	[QSAFS]
Select ALL function converter for quick start menu.			
Quick start function Status LiST	[MCP ONLY]	AL6	[QSLST]
List quick start group functions.			
Function enable Status LiST	[MCP ONLY]	AL6	[FSLST]
List enable status of functions			



Access CODE

[MCP ONLY]

AL0

[ACODE]

Entry of access code through MCP console. Example of adding functions to the Quick start menu via MCP.

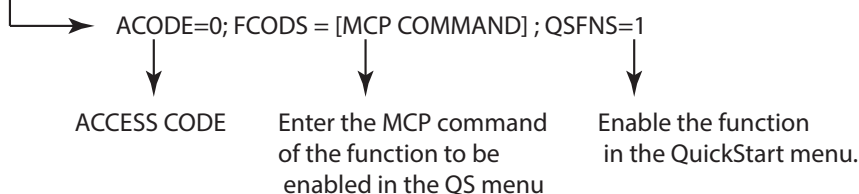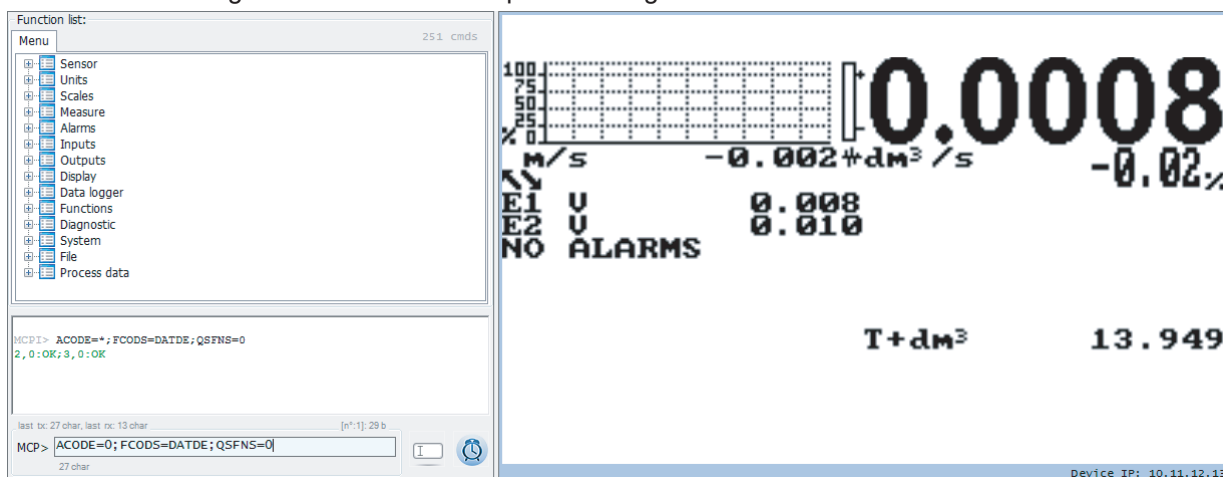

LINK Terminate [MCP ONLY] AL0 [LTERM]

Terminate the PPP data link

MCPI session QUIT [MCP ONLY] AL0 [MQUIT]

Quit the MCPI connection

Functions LIST [MCP ONLY] AL0 [FLIST]

View list of all available converter functions.

Functions LIST Compact [MCP ONLY] AL0 [FLISC]

View compact list of all available converter functions.

Functions Menu SElection [MCP ONLY] AL0 [FMSEL]

Select menu for functions list

Configuration list [MCP ONLY] AL0 [CFLST]

Configuration parameter list. The list with the status / values of the converter parameter.

Hidden functions list [MCP ONLY] AL0 [HFLST]

Hidden functions list

Volume Totalizer Total Positive Set [MCP ONLY] AL4 [VTTPS]

Set the value of the total positive totalizer T +.

Volume Totalizer Partial Positive Set [MCP ONLY] AL4 [VTPPS]

Set the value of the positive partial totalizer P +.

The manufacturer guarantees only English text available on our web site www.isoil.com

Volume Totalizer Total Negative Set	[MCP ONLY]	AL4	[VTTNS]
Set the value of the total negative totalizer T-.			
Volume Totalizer Partial Negative Set	[MCP ONLY]	AL4	[VTPNS]
Set the value of the negative partial totalizer P-.			
Volume Total Positive Overflow Set	[MCP ONLY]	AL4	[VTPOS]
Set overflow values for total positive totalisers T +.			
Volume Partial Positive Overflow Set	[MCP ONLY]	AL4	[VPPOS]
Sets the overflow values for P + positive partial totalizers.			
Volume Total Negative Overflow Set	[MCP ONLY]	AL4	[VTNOS]
Set overflow values for total negative totalisers T-.			
Volume Partial Negative Overflow Set	[MCP ONLY]	AL4	[VPNOS]
Set overflow values for negative partial totalizers T-			
CPU MaX.recorded temperature	[MCP ONLY]	AL6	[CPUMX]
Maximum CPU temperature recorded.			
CPU MiN.recorded temperature	[MCP ONLY]	AL6	[CPUMN]
Minimum recorded CPU temperature.			
Calibration GAin Register 0	[MCP ONLY]	AL6	[CGAR0]
Calibration gain register 0			
Calibration GAin Register 1	[MCP ONLY]	AL6	[CGAR1]
Calibration gain register 1			
Calibration GAin Register C	[MCP ONLY]	AL6	[CGARC]
Calibration gain register C			

MENU 14 - FILE (ONLY MCP)

(POS. 14.1) File Transfer ABoRt	[MCP ONLY]	AL2	[FTABR]
Abort the current File Transfer			
(POS. 14.2) File Transfer STAtE	[MCP ONLY]	AL0	[FTSTA]
Show file transfer status.			
(POS. 14.3) Read Last EVenTs	[MCP ONLY]	AL2	[RLEVT]
Read the latest system events			
(POS. 14.4) Read all events	[MCP ONLY]	AL2	[RAEVT]
Read all current system events.			
(POS. 14.5) Read All EVenTs	[MCP ONLY]	AL2	[RLLDt]
Read the latest logged data.			
(POS. 14.6) Read Last Logged DaTa	[MCP ONLY]	AL2	[RALDt]
Read all current logged data.			
(POS. 14.7) Read Last Sensor Verify Data	[MCP ONLY]	AL2	[RLSVD]
Read the latest sensor ver. data.			
(POS. 14.8) Read All Sensor Verify Data	[MCP ONLY]	AL2	[RASVD]
Read all sensor verify data.			
(POS. 14.9) File SEND	[MCP ONLY]	AL2	[FSEND]
Set file name for read operation.			
(POS. 14.10) File ReCeIVE	[MCP ONLY]	AL5	[FRCVE]
Set file name for write operation.			
(POS. 14.11) File ReCeive APpend mode	[MCP ONLY]	AL2	[FRCAP]
Set file name for write-append.			
(POS. 14.12) File OFFSet position	[MCP ONLY]	AL2	[FOFFS]
Set file offset position.			
(POS. 14.13) ConFiGuration file WRite	[MCP ONLY]	AL2	[CFGWR]
Save the configuration to a file			
(POS. 14.14) ConFiGuration file ReaD	[MCP ONLY]	AL2	[CFGRD]
Read the configuration from file.			

(POS. 14.15) FuNction list file WRite	[MCP ONLY]	AL2	[FNCWR]
Save the functions list to file.			
(POS. 14.16) Function Enable Status WRite	[MCP ONLY]	AL6	[FESWR]
Save function enable status to file			
(POS. 14.17) Quick Start function Status WRite	[MCP ONLY]	AL6	[QSSWR]
Save quick start function enable.			

MENU 15 - PROCESS DATA (ONLY MCP)

(POS. 15.1) OUTput 1 Set	[MCP ONLY]	AL0	[OUT1S]
Set value for digital output 1.			
(POS. 15.2) OUTput 2 Set	[MCP ONLY]	AL0	[OUT2S]
Set value for digital output 2.			
(POS. 15.3) OUTput 3 Set	[MCP ONLY]	AL0	[OUT3S]
Set value for digital output 3.			
(POS. 15.4) OUTput 4 Set	[MCP ONLY]	AL0	[OUT4S]
Set value for digital output 4.			
(POS. 15.5) Digital INput 1 Status	[MCP ONLY]	AL0	[DIN1S]
Digital input 1 status read.			
(POS. 15.6) Digital INput 2 Status	[MCP ONLY]	AL0	[DIN2S]
Digital input 2 status read.			
(POS. 15.7) Digital INput 3 Status	[MCP ONLY]	AL0	[DIN3S]
Digital input 3 status read.			
(POS. 15.8) Flow Rate Full Scale in chosen Units	[MCP ONLY]	AL0	[FRFSU]
Flow Rate Full Scale in chosen Units.			
(POS. 15.9) Flow Rate Value PerCentage	[MCP ONLY]	AL0	[FRVPC]
Flow Rate Value PerCentage.			
(POS. 15.10) KL TeST	[MCP ONLY]	AL0	[KLTST]
KL test.			
(POS. 15.11) Flow Rate Value Percentage without cut-off	[MCP ONLY]	AL0	[FRVPX]
Flow Rate Value Percentage without cut-off.			

(POS. 15.12) Flow Rate Value Binary without cut-off	[MCP ONLY]	ALO	[FRVBX]
Flow Rate Value Binary without cut-off.			
(POS. 15.13) Flow Rate Value Technical Unit	[MCP ONLY]	ALO	[FRVTU]
Flow Rate Value Technical Unit.			
(POS. 15.14) Volume Totalizer Total Positive Value	[MCP ONLY]	ALO	[VTTPV]
Volume Totalizer Total Positive Value.			
(POS. 15.15) Volume Totalizer Partial Positive Value	[MCP ONLY]	ALO	[VTPPV]
Volume Totalizer Partial Positive Value.			
(POS. 15.16) Volume Totalizer Total Negative Value	[MCP ONLY]	ALO	[VTTNV]
Volume Totalizer Total Negative Value.			
(POS. 15.17) Volume Totalizer Partial Negative Value	[MCP ONLY]	ALO	[VTPNV]
Volume Totalizer Partial Negative Value.			
(POS. 15.18) Volume Totalizer Total Positive Overflow	[MCP ONLY]	ALO	[VTTPO]
Volume Totalizer Total Positive Overflow.			
(POS. 15.19) Volume Totalizer Partial Positive Overflow	[MCP ONLY]	ALO	[VTPPO]
Volume Totalizer Partial Positive Overflow.			
(POS. 15.20) Volume Totalizer Total Negative Overflow	[MCP ONLY]	ALO	[VTTNO]
Volume Totalizer Total Negative Overflow.			
(POS. 15.21) Volume Totalizer Partial Negative Overflow	[MCP ONLY]	ALO	[VTPNO]
Volume Totalizer Partial Negative Overflow.			
(POS. 15.22) Volume Totalizers ALL	[MCP ONLY]	ALO	[VTALL]
Volume Totalizers all.			
(POS. 15.23) Board TeMPeratures	[MCP ONLY]	ALO	[BTMPS]
Board Temperatures.			
(POS. 15.24) CPU Temperature	[MCP ONLY]	ALO	[CPUTP]
CPU Temperature.			
(POS. 15.25) Sensor CoILs TemPerature	[MCP ONLY]	ALO	[SCLTP]
Sensor coils temperature.			
(POS. 15.26) LiQUid VELOCITY	[MCP ONLY]	ALO	[LQVEL]
Liquid velocity.			
(POS. 15.27) AVerAGe process data Samples Number	[MCP ONLY]	ALO	[AVGSN]
Average process data samples number.			

(POS. 15.28) ALARM status	[MCP ONLY]	ALO	[ALARM]
----------------------------------	-------------------	------------	----------------

Alarm status.

(POS. 15.29) Sensor TeSt Result Code	[MCP ONLY]	ALO	[STSRC]
---	-------------------	------------	----------------

Sensor Test Result Code

(POS. 15.30) Main PoWeR Status	[MCP ONLY]	ALO	[MPWRS]
---------------------------------------	-------------------	------------	----------------

Main Power Status

(POS. 15.31) INput RESistance	[MCP ONLY]	ALO	[INRES]
--------------------------------------	-------------------	------------	----------------

Input resistance

(POS. 15.32) INput VolTageS	[MCP ONLY]	ALO	[INVLS]
------------------------------------	-------------------	------------	----------------

Input voltages

(POS. 15.33) Sensor TaBLe Version	[MCP ONLY]	ALO	[STBLV]
--	-------------------	------------	----------------

Sensor table version

(POS. 15.34) SEquence NumBer	[MCP ONLY]	ALO	[SEQNB]
-------------------------------------	-------------------	------------	----------------

Sequence number. The SEQNB command allows you to specify a sequence number to be used when querying the meter (additional verification procedure). The same number that is set with SEQNB = number is retransmitted as a response by the converter. This function, together with the process commands used to read the variables (capacity, volumes, etc.) allows to keep synchronized the received values with the requests made. In this way it is possible to verify the temporal sequence with which the messages are received by the meter.

Example:

Request: SEQNB=1;FRVPC?

Request: 1;% ,12.345678

Request: SEQNB=2;FRVPC?

Request: 2;% ,11.456778

Request: SEQNB=3;FRVPC?

Request: 3;% ,10.983228

Request: SEQNB=4;FRVPC?

..

.. <= Sequence 4 is missing, error

..

Request: SEQNB=5;FRVPC?

Return: 5;% ,10.992783

The example shows how SEQNB can help identify exactly what message was lost. In this case the requests are all the same (apart from the SEQNB number), but with different requests, SEQNB can be a verification tool.

The manufacturer guarantees only English text available on our web site www.isoil.com

(POS. 15.35) Analog input 1 Value Technical Unit	[MCP ONLY]	ALO	[A1VTU]
Analog input 1 Value Technical Unit			
(POS. 15.36) Analog input 2 Value Technical Unit	[MCP ONLY]	ALO	[A2VTU]
Analog input 1 Value Technical Unit			
(POS. 15.37) System Battery VoLtage 1	[MCP ONLY]	ALO	[SBVL1]
[System Battery VoLtage 1			
(POS. 15.38) System Battery VoLtage 2	[MCP ONLY]	ALO	[SBVL2]
[System Battery VoLtage 2			
(POS. 15.39) System Battery CHarge Status	[MCP ONLY]	ALO	[SBCHS]
System Battery CHarge Status			


METER DATA

This function allows the import of data from one converter to another up to level 4 included. The hardware configurations and the corresponding calibration values are not restored. The “data import” procedure can be performed one time only, since the directory, according to the board’s SERIAL NUMBER, will be renamed.


OPERATING PROCEDURE TO CHANGE THE CONVERTER BOARD



Remove the 4 screws (see POS. power supply converter pag. 19) to be able to remove the battery case. Attention to the internal wiring of the instrument.

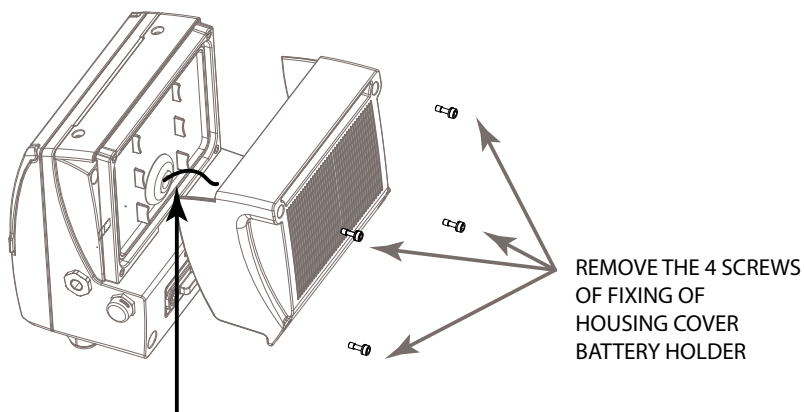



WARNING !
OPEN THE BATTERY PACK
DELICATELY NOT FOR
DAMAGE THE SHOCK
ELECTRICAL BATTERIES

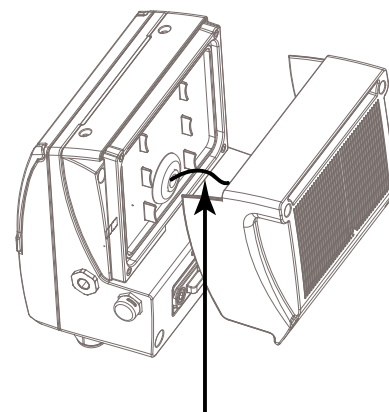

GENTLY DISCONNECT
 THE CABLES OF THE BATTERY PACK




Remove the 2 screws to be able to remove the battery case cover. Attention to the internal wiring of the instrument

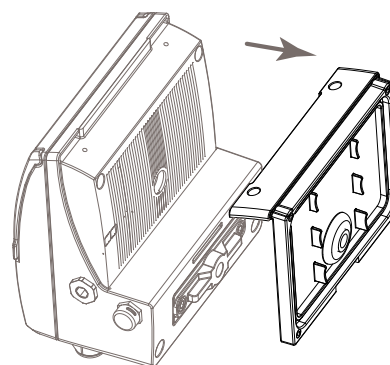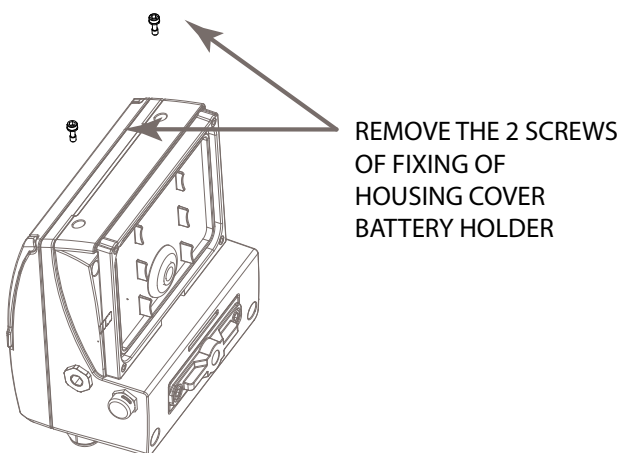


The manufacturer guarantees only English text available on our web site www.isoil.com



Remove the 4 screws (see POS. MV145 CONSTRUCTION pag. 16) to remove the MV145 card. Attention to the board wiring.

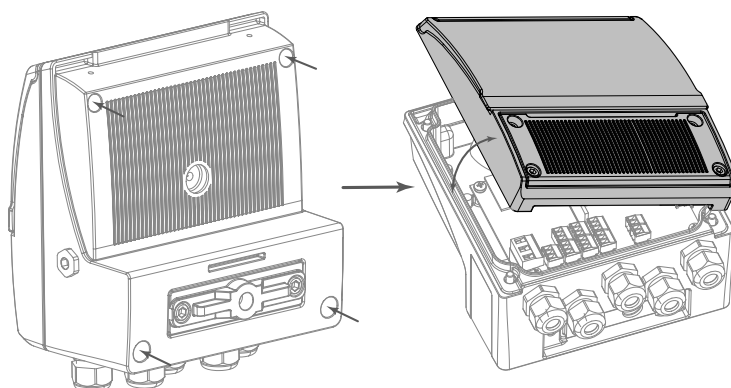

Remove the 4 screws (see POS. MV145 CONSTRUCTION pag. 16) to remove the MV145 card. Attention to the board wiring. Remove the SD card and insert it into the new card.

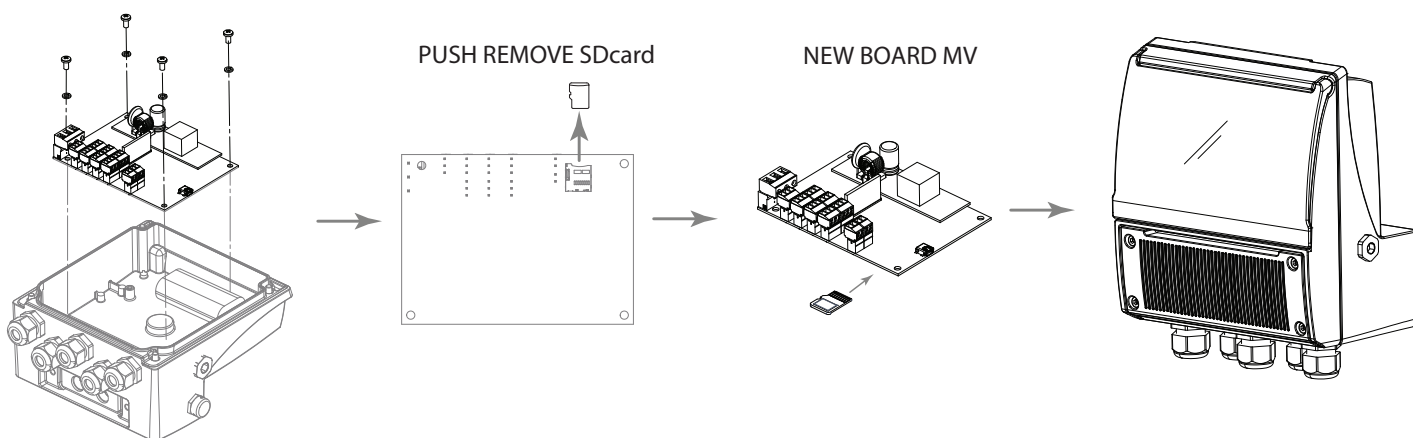

Once the card is assembled to the converter, perform the following procedures:

- Connect the internal wiring to the board without directly connecting the batteries (see diagrams POS. power supply converter pag. 19).
- Assemble the MV housing cover
- Assemble the battery case cover
- Connect the batteries of the housing to the cable / wiring to the board.
- Assemble the battery case with the 4 screws removed
- Correctly assembled the converter start the function (POS. 11.8 pag. 49) to restore data.

The manufacturer guarantees only English text available on our web site www.isoil.com

B.I.V. (BUILT-IN VERIFICATOR)

BIV, abbreviation for Built In Verificator, is available as option for MV145 converters and must be enabled by the manufacturer. It is also necessary that the SD card is activated to store saved data. The analysis of collected data performed by a dedicated IsoBIV software running on another device (PC).

The simplicity of test procedures minimize the risk of handling errors; maximum safety and reliability thanks to the traceable factory calibration and internal references complement the safety by design principle with minimal failure rates. IsoBIV allows to create and print a report as validation of device functionality/measure error.

Operation and Conditions of Use.

The system is based on periodic measurements performed every hour or using a manual command (MCP command = SVERC). The sensor parameters are measured and compared with previously measured and stored reference values. Each time the system performs a series of measurements on the sensor and records them in a file called "STESTLOG.CSV", which resides in the main directory of the SD memory of the converter.

The sensor test can also be carried out without the active BIV system, but in this case only the presence of isolation losses and the overall good functioning of the sensor such the coil resistance, the excitation current and the rising times of the current within the generic limits that guarantee operation. Instead if BIV is active, the measurements are deeper and the measured values are tested by comparing them with a set of characteristic sensor parameters measured at the time of installation.

Saving Reference Values (Characteristic Parameters)

After sensor installation, the parameters that will be used as reference for the BIV system and the MCS data analysis software must to be measured.

The characteristic values of the coil circuits are saved in the converter memory at the factory before to ship the instrument. For the reference measure of the electrodes circuits, there is a specific function that perform the measures of voltage and resistance at the installation site. This function is managed ONLY by the MCS program, which through a simple wizard will set the converter to perform the measures in the specific measurement point where the meter is installed.


To activate BIV, these functions must be verified:


- BIV option enabled at the factory
- [ASVFE=1] : It enable the sensor's automatic test every hour. The ASVFE function in Menu 1 with access level 3 can be also activated using the instrument's display.

This feature can be enabled even if the SD card is not installed and if the BIV function is not active; in such a case the sensor file is NOT created and any alarms will be generated either if the data deviation from the reference data is outside the sensor's limits. Practically, in the absence of the necessary hardware permissions, this function is useful to test the insulation of the coils.

Opening and reading manually the files STESTLOG.CSV

The list below describes the steps for saving and reading STESTLOG.CSV file.

- ❑ Start the MPC program  for opening the converter menu interface.
- ❑ Follow these steps:

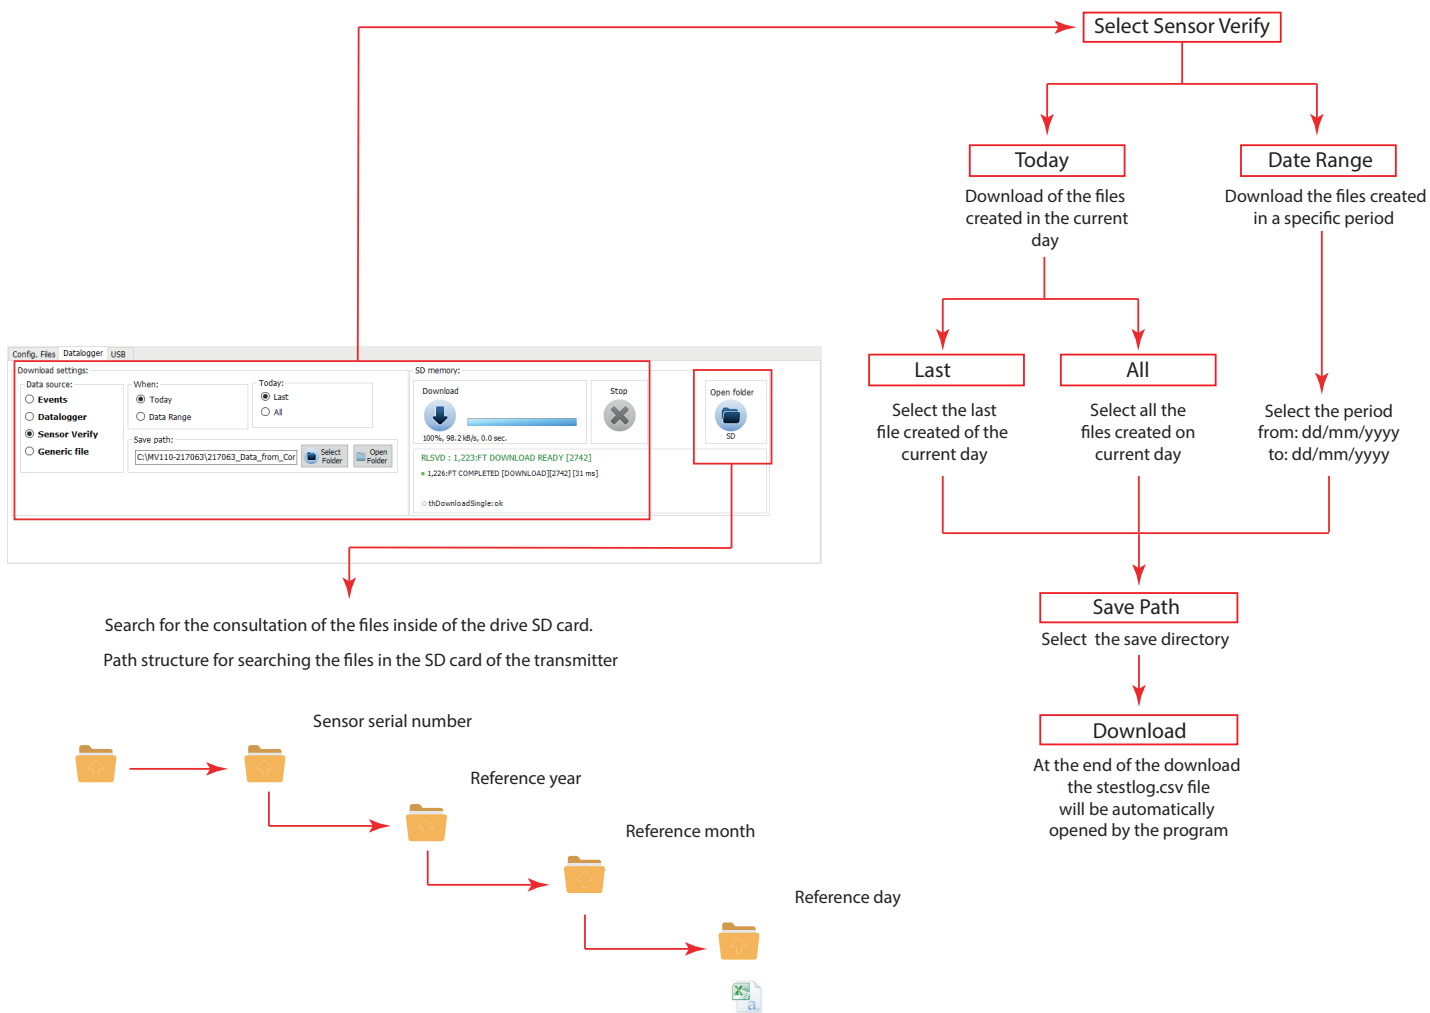

The manufacturer guarantees only English text available on our web site www.isoil.com

□ Reading and meaning of the STESTLOG.CSV file

(#): the units of measurement are recorded only if the specific function of the DATA LOGGER is active. Otherwise the field is empty.

(*): the temperature values can be expressed in degrees F or C, depending on the configuration of the converter.

W		The unit of voltage (mV) (#)
V	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Differential mode noise at low frequency
U		The unit of voltage (V) (#)
T	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Common mode noise at low frequency
S		The unit of voltage (V) (#)
R	0.0 0.0 0.0 0.0 0.0 0.0 0.0	Resistance measured between E2 and the common
Q		The unit of resistance (ohm) (#)
P	0.0 0.0 0.0 0.0 0.0 0.0 0.0	Resistance measured between E1 and the common
O		The unit of resistance (ohm) (#)
N	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Common mode voltage (E1 + E2) / 2
M		The unit of voltage (V) (#)
L	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Differential voltage E1-E2
K		The unit of voltage E2 (V) (#)
J	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Reference voltage electrode E2
I		The unit of voltage E1 (V) (#)
H	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Voltage measured on the electrode E1
G		The unit of voltage CPU (V) (#)
F	28 28 28 28 28 28 28	CPU temperature
E		The temperature unit (degrees F or C) (#) (*)
D	0 0 0 0 0 0 0	Error code in hexadecimal format (0 = no error)
C	ORA 00:00:00 00:00:00 00:00:00 00:00:00 00:00:00 00:00:00 00:00:00	hours
B	DATA dd/mm/yy dd/mm/yy dd/mm/yy dd/mm/yy dd/mm/yy dd/mm/yy dd/mm/yy	Date
A	0 1 2 3 4 5 6	Registration number

The manufacturer guarantees only English text available on our web site www.isoil.com

AQ	hex	Raw checksum
AP	0.000 0.000 0.000 0.000 0.000 0.000 0.000	Rise time current phase B
AO		Unit of measure of time (ms) (#)
AN	0.000 0.000 0.000 0.000 0.000 0.000 0.000	Rise time current phase A
AM		Unit of measure of time (ms) (#)
AL	0.000 0.000 0.000 0.000 0.000 0.000 0.000	The coil leakage current (insulation fault)
AK		The unit of current (mA) (#)
AJ	0.000 0.000 0.000 0.000 0.000 0.000 0.000	Temperature of the sensor coils
AI		The temperature unit (degrees F or C) (#) (*)
AH	0.000 0.000 0.000 0.000 0.000 0.000 0.000	Measurement of the sensor coil resistance
AG		The unit of resistance (ohm) (#)
AF	0.000 0.000 0.000 0.000 0.000 0.000 0.000	Excitation current of the coils
AE		The unit of current (mA) (#)
AD	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Negative supply voltage analog circuits
AC		The unit of voltage (V) (#)
AB	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Analog circuitry positive supply voltage
AA		The unit of voltage (V) (#)
Z	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Mode ADC noise high frequency differential
Y		The unit of voltage (mV) (#)
X	+0.000 +0.000 +0.000 +0.000 +0.000 +0.000 +0.000	Mode ADC noise at low frequency differential

Standard and internal check to the instrument limits

The measured data are compared with the reference values previously stored. The variation of different variable measured, shall be within the following range:


Coil temperature (using resistance reading): within limits compatible with the lining material

- Current up times: change% detected resistance coils + 10% (tolerance range)
- Resistance between electrodes and common: between 0.3 and 3.0 times the reference early strength
- Leakage current (insulation test): less than 0.1 mA

If the values deviate beyond these limits it is generated and displayed a coded alarm.

The alarm remains active and visible on the display until next test (max. 1 hour).

SOFTWARE MCS

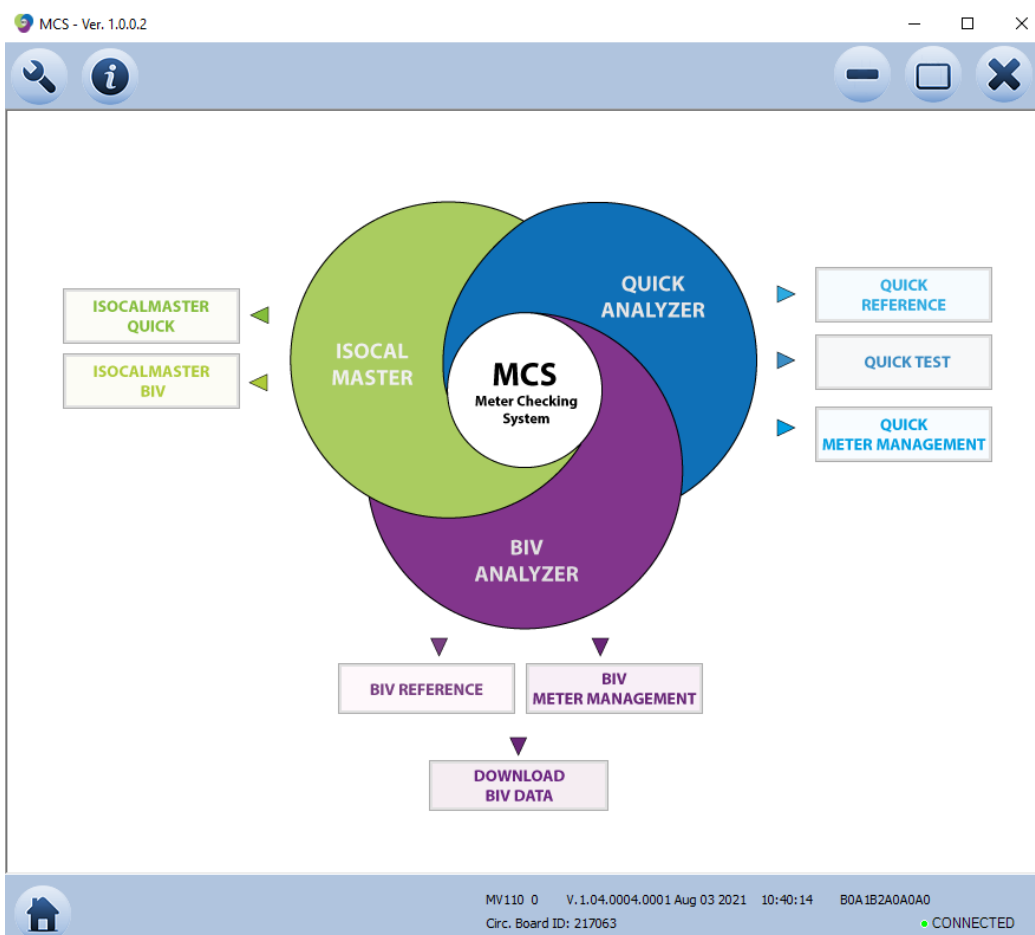

The MCS software allows analysis and processing of STESTLOG.CSV file data.

For further information, refer to the manual of MCS software.

ALARM MESSAGES (CAUSES AND ACTIONS TO BE TAKEN)

MESSAGE	CAUSES	ACTION TO TAKE
No alarm	The system works properly	---
[000] SYSTEM RESTART	---	---
[001] Errore F-RAM	Error writing to F-RAM	Restart the system. If the error persists, contact the service
[002] SD card error	SD card not found or unreadable	Check and / or replace the SD card. If the error persists, contact the service
[003] SD-card memory almost exhausted	SD card memory running out.	Plan to replace the SD card as soon as possible.
[004] Out of memory SD-card	Out of memory SD-card.	Replace the SD card
[005] Primary power absent	Evaluate if this condition is normal or unexpected. This alarm condition is configurable user.	Check system settings
[006] Err. Comm. CPU	Communication error between CPU.	Restart the system. If the error persists, contact the service.
[007] Low B3 Battery Level	B3 battery below the charge limits.	Replace the battery 3 Or if the battery is rechargeable allow recharging See the Power supply section of this manual
[016] System restarted	Evaluate whether the reboot was expected. Otherwise consult the event logger to determine the causes.	Check the event logger to determine the causes and the corresponding remedies.
[017] Invalid time / date	Incorrect adjustment of the date and time from the set reference system.	Set the time and date.
[018] CPU frequency error	---	Contact the service
[019] Internal voltage error	---	Contact the service
[020] Battery B1 discharged	Battery B1 discharged	Replace the battery 1
[021] Battery B2 discharge	Battery B2 discharge	Replace the battery 2
[022] Excitation error	Sensor not correctly connected, wiring interrupted, faulty connections or incorrect sensor control parameters.	Check the wiring and the sensor parameters. If it is not enough, contact the service.
[023] Signal error	Critical measurement conditions, lack of valid earth connection, presence of persistent electrical disturbances or wiring / connections with the sensor incorrect or interrupted.	Check the wiring with the sensor. If it is not enough, contact the service.
[024] Empty pipe	The measuring tube is empty or the detection system has not been correctly calibrated.	Check the presence of liquid in the connected pipe, check the correct setting of the maximum allowable resistance on the electrodes.
[025] FLOW RATE>MAX+	Alarm Maximum flow rate + The flow rate is higher than the maximum positive threshold set in the instrument.	Check the value of the set flow rate threshold and the process conditions.

[026] FLOW RATE>MAX-	Alarm Maximum flow rate - The flow rate is higher than the maximum negative threshold set in the instrument.	Check the value of the set flow rate threshold and the process conditions.
[027] FLOW RATE<MIN+	Alarm Minimum flow rate + The flow rate is higher than the minimum positive threshold set in the instrument	Check the value from the set flow rate threshold and the process conditions.
[028] FLOW RATE<MIN-	Alarm Minimum flow rate - The flow rate is higher than the maximum negative threshold set in the instrument	Check the value from the set flow rate threshold and the process conditions.
[029] FLOW RATE>F. SCALE+	The flow rate is higher than the positive full scale value set in the instrument	Check the value from the set flow rate threshold and the process conditions.
[030] FLOW RATE>F. SCALE-	The flow rate is higher than the positive full scale value set in the instrument	Check the value from the set flow rate threshold and the process conditions..
[031] PULSES1>MAX	The pulse generation output 1 of the device is saturated and a sufficient number of pulses cannot be generated	Set a larger unit if the device allows it and / or reduce the pulse value.
[032] PULSES2>MAX	The pulse generation output 2 of the device is saturated and a sufficient number of pulses cannot be generated.	Set a larger unit if the device allows it and / or reduce the pulse value..
[033] Calibration error.	Calibration error.	Make sure that the sensor is connected correctly and that the type of sensor corresponds to the one set. If the error persists, contact the service.
[034] General sensor error	General sensor error	The sensor test gave a negative result. Examine the code reported in the event logger or on the diagnostic values page to determine the possible causes. WARNING: the error condition remains until the next test is performed or until the instrument is restarted.
[35] Access configuration failed	Access to the configuration parameters was attempted with an incorrect password.	The alarm condition is user configurable. Check the configurations performed.
[36] Access configuration detected	Access to configuration parameters has been detected. This could be a legitimate or unexpected operation.	The alarm condition is user configurable. Check the configurations performed.
[37] System violation	A violation of system integrity has been detected. This alarm is detected by a switch connected to a digital input of the instrument specifically configured for this use.	The alarm condition is user configurable. Check the configurations performed.
[38] Flooding	A flooding condition of the system has been detected. This alarm is detected by a switch connected to a digital input of the instrument specifically configured for this use.	The alarm condition is user configurable. Check the configurations performed.
[39] Analog input error 1	The signal or the sensor connected to the optional analogue input 1 are incorrect or not correctly configured.	Check the relative wiring and that the type of sensor is correct / working.

[40] Analog input 1 out of scale	The signal deriving from the sensor connected to the optional analogue input 1 is too large for the configured measurement scale.	Review the configuration parameters and check that the sensor has been connected correctly.
[41] Measurement analog input 1 higher threshold MAX	Measurement analog input 1 higher threshold MAX	Check the process conditions and the threshold set as the maximum signal alarm for the optional analog input 1.
[42] Measurement analog input 1 lower threshold MIN	Measurement analog input 1 lower threshold MIN	Check the process conditions and the threshold set as the minimum signal alarm for the optional analogue input 1.
[43] Input error analogue 2.	The signal or sensor connected to the optional analogue input 2 is incorrect or not configured correctly.	Check the relative wiring and that the type of sensor is correct / working.
[44] Analog input 2 out of scale.	The signal deriving from the sensor connected to the optional analogue input 2 is too large for the configured measurement scale.	Review the configuration parameters and check that the sensor has been connected correctly.
[45] Analog input 2 measurement higher threshold MAX	Analog input 2 measurement higher threshold MAX.	Check the process conditions and the threshold set as the maximum signal alarm for the optional analog input 2.
[46] Analog input 2 measurement lower threshold MIN	Analog input 2 measurement lower threshold MIN	Check the process conditions and the threshold set as the minimum signal alarm for the optional analog input 2.
[47] System protection error	The system has detected a protection error related to the MID parameters.	Contact the service
[55] Configuration login failed	An attempt was made to access the configuration parameters with an incorrect password	The alarm condition can be configured by the user. Check the configurations made.
[56] Configuration access detected	Access to configuration parameters was detected. This could be a legitimate or unexpected operation.	The alarm condition can be configured by the user. Check the configurations made.

ERROR CODE TEST SYSTEM OF SENSOR

The codes are in hexadecimal format, the meaning is given for each bit. There are several possible error simultaneous combinations (more bits active) then that will give the combined numerical codes.

CODE	ANOMALIES DESCRIPTION	ACTION TO TAKE	
0000	NO ERROR	---	
0001	SENSOR TEST INSULATION: Generator power too low.	Contact the service	
0002	SENSOR TEST INSULATION: Generator power too high.		
0004	SENSOR TEST INSULATION: Phase 1 generator voltage too low.		
0008	SENSOR TEST INSULATION: Phase 1 generator voltage too high.		
0010	SENSOR TEST INSULATION: Phase 1 terminal voltage coils 1 too low.		
0020	SENSOR TEST INSULATION: Phase 1 terminal voltage coils 2 too low.		
0040	SENSOR TEST INSULATION: Phase 2 generator voltage too low.		
0080	SENSOR TEST INSULATION: Phase 2 generator voltage too high.		
0100	SENSOR TEST INSULATION: Phase 2 terminal voltage coils 1 too low.		
0200	SENSOR TEST INSULATION: Phase 2 terminal voltage coils 2 too low.		
0400	SENSOR TEST INSULATION: Insulation loss, leakage current out of tolerance.		<p>To verify:</p> <ul style="list-style-type: none"> - wiring between converter sensor, - conditions of use, - set parameters. <p>If the problem persists, contact the service</p>
0800	TEST TEMPERATURE (RESISTANCE) COILS: Temperature (resistance) out of tolerance.		
1000	TEST TIME GETTING ON CURRENT PHASE (A): Value out of tolerance.		
2000	TEST TIME GETTING ON CURRENT PHASE (B): Value out of tolerance.		
4000	TEST RESISTANCE INPUTS ELECTRODES: Input value 1 out of tolerance.		
8000	TEST RESISTANCE INPUTS ELECTRODES: Input value 1 out of tolerance		
10000	Excitation error during the test	The sensor test failed because an excitation error was present. Check the sensor wiring and the parameters set, in particular check that the type of sensor is set correctly.	
20000	Invalid reference values	The reference values used to check the measurements detected on the sensor are not valid. Perform the procedure for storing reference values correctly.	
40000	Empty tube	The tube is empty and therefore it is not possible to check the values measured on the electrodes. Check the installation conditions and the parameters related to the recognition of the empty pipe condition (maximum resistance threshold on the electrodes).	

The manufacturer guarantees only English text available on our web site www.isoil.com

At the end of its lifetime, this product shall be disposed of in full compliance with the environmental regulations of the state in which it is located.

The manufacturer guarantees only English text available on our web site www.isoil.com

MANUAL REVIEWS

REVIEW	DATE	DESCRIPTION
145_EN_IT_R0_1.00.0	10/05/2019	First edition
145_EN_IT_R1_1.00.0	04/06/2019	Aggiunte informazioni sulle condizioni di consegna convertitore
145_EN_IT_R2_1.00.0	11/09/2019	Added wiring diagram for RS485
145_EN_IT_R4_1.00.0	12/06/2020	MODbus notes implementation
MAN_MV145_EN_IT_R05_1.05.XXXX	17/12/2021	Firmware update, graphics update, MODBUS section moved to a separate manual

The manufacturer guarantees only English text available on our web site www.isoil.com



The manufacturer guarantees only English text available on our web site www.isoil.com

ISOIL INDUSTRIA S.p.A.

HEAD OFFICE	SERVICE
Via Fratelli Gracchi, 27 20092 Cinisello Balsamo (MI) Tel +39 02 66027.1 Fax +39 02 6123202 sales@isoil.it	assistenzaindustria@isoil.it

If you want to find the complete list of our distributors access at the following link:
<http://www.isoil.it/en>



Due to the constant technical development and improvement of its products, the manufacturer reserves the right to make changes and/or modify the information contained in this document without notice.